

Adrastea-I



DESCRIPTION

Adrastea-I module is a compact LTE-M / NB-IoT Cellular module with integrated GNSS.

Based on the Sony Altair ALT1250 chipset, the Adrastea-I module provides AT-Command based multi-band configurability enabling international multi-regional coverage in LTE Cat M1 / NB1 radio access technologies.

Adrastea-I includes a fully integrated global navigation satellite system solution that supports GPS and GLONASS positioning systems.

Compact 13.4 x 14.6 x 1.85 mm design allows the module to fit in small-size applications.

The module can be operated through one of two available cellular communication technologies:


- LTE-Cat.M or
- LTE-Cat.NB-IoT

TYPICAL APPLICATIONS

- Predictive maintenance & Industrial
- Logistics & Asset tracking
- Wearables & Healthcare
- Smart city & Smart agriculture

ELECTRICAL HIGHLIGHTS

Parameter	Value
Supply voltage (VDD)	2.3 – 4.3 V
Supply voltage (VDD_FEM)	3.1 – 4.3 V
Operating temperature	-40 – +85 °C
GNSS Frequency range	1560 – 1610 MHz
LTE Cat.M Bands	B2/3/4/5/8/12/20/25/26/28
NB-IoT Bands	B3/5/8/20/28
Sensitivity (LTE Cat.M)	-105 – -107.2 dBm
Sensitivity (NB-IoT)	-110 dBm
Sensitivity (GNSS)	-160 dBm
Max. TX power	Power Class 3 (23 dBm)
Max. Tx current (LTE Cat.M)	454.2 mA
Max. Tx current (NB-IoT)	434 mA
Sleep current (DH0)	1.57µA

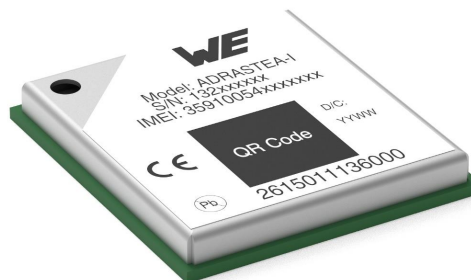

FEATURES

- Based on Altair - ALT1250 chipset
- Multimode LTE-Cat.M / NB-IoT modem
- 3GPP Release 13 compliant
- Small form factor 13.4 x 14.6 x 1.85 mm
- Multi-band Support:
LTE Cat.M B2/3/4/5/8/12/20/25/26/28
NB-IoT B3/5/8/20/28
- Integrated GNSS (GPS and GLONASS)
- Interfaces: USIM, UART
- Output power: Class 3 (23 dBm)
- Max RF Data rates:
LTE Cat.M 300/375 Kbps (DL/UL)
NB-IoT 27.2/62.5 Kbps (DL/UL)
- Protocols: IPv4/IPv6, TCP/UDP, HTTP/HTTPS, TLS/DTLS, LWM2M, MQTT, CoAP
- Both Text and PDU SMS are supported.
- 50 Ω antenna interface for LTE and GNSS
- 3GPP + WE AT commands support
- Secure FW upgrade (UART + OTA)



MUST READ

Check for firmware updates

Before using the product, make sure you use the most recent firmware version, data sheet, and user manual. This is especially important for Wireless Connectivity products that were not purchased directly from Würth Elektronik eiSos. A firmware update on these respective products may be required.

We strongly recommend including the possibility of a firmware update in the customer system design.

Certification Information:

The certification information is mandatory to check, see chapter 1.3

Power Saving Features:

The power saving features information is important to check before enabling 3GPP defined eDRX and PSM features, see chapter 5.2, chapter 5.3, chapter 5.4

Application MCU:

Effective January 1, 2026, Sony will discontinue support for Open MCU for all new designs based on the ALT1250 chipset. As a result, using the integrated Arm Cortex M4 MCU of Adrastea-I for new application development is not recommended.

However, using Adrastea-I as a modem is not affected by this announcement.

Contents

1	Introduction	6
1.1	Adrastea-I GCF Certification	7
1.2	Adrastea-I Deutsche Telekom Certification	8
1.3	Benefits of Deutsche Telekom Certified Module	9
1.4	Module Key Features	11
1.5	Block diagram	12
1.6	Ordering information	12
2	Electrical and Radio Specifications	13
2.1	Operating Conditions	13
2.2	Absolute Maximum Ratings	13
2.3	Current Consumption	14
2.3.1	LTE-Cat.M Mode	14
2.3.2	LTE-Cat.NB-IoT Mode	14
2.4	LTE Radio Characteristics	15
2.4.1	LTE Supported Bands	16
2.4.2	LTE-Cat.M Mode CE	16
2.4.3	LTE-Cat.M Mode for FCC and IC	16
2.4.4	LTE-Cat.NB-IoT Mode for CE	16
2.4.5	LTE-Cat.NB-IoT Mode for FCC and IC	16
2.4.6	RF Receiving Sensitivity	17
2.4.7	LTE-Cat.M Reference sensitivity CE	17
2.4.8	LTE-Cat.M Reference sensitivity FCC / IC	17
2.4.9	LTE-Cat.NB-IoT Reference sensitivity CE	17
2.4.10	LTE-Cat.NB-IoT Reference sensitivity FCC / IC	18
2.4.11	LTE-Cat.M Maximum Output Power	19
2.4.12	LTE-Cat.M Maximum Output Power CE	19
2.4.13	LTE-Cat.M Maximum Output Power FCC / IC	19
2.4.14	LTE-Cat.NB-IoT Maximum Output Power CE	19
2.4.15	LTE-Cat.NB-IoT Maximum Output Power FCC / IC	20
2.5	GNSS Radio Characteristics	21
2.5.1	GNSS Supported Constellation	21
2.5.2	GNSS: Operating frequencies	21
2.5.3	GNSS: Rx Sensitivity	22
2.5.4	GNSS: Time To First Fix	22
2.5.5	GNSS: Position Accuracy	23
3	Pinout	24
3.1	Module Power Up	30
3.2	Module Power Down	32
3.3	Module Reset	32
3.4	WAKEUP pin	32
3.5	AT_IN and AT_OUT pins	32
3.6	/RESET pin	32
3.7	EXT_ALARM pin	33
3.8	RF_LTE pin	33
3.9	RF_GNSS pin	33
3.10	VBACKUP and VCAP pins	33
3.10.1	VCAP pin	34
3.10.2	VBACKUP pin	34
3.10.3	VDDIO	34
3.11	Digital I/O Pins Specifications	35
4	Module Interfaces	36
4.1	UART Interface	36
4.1.1	UART Default Configuration	36

4.1.2	UART0 Pin Interface	37
4.1.3	UART1 Pin Interface	37
4.1.4	UART2 Pin Interface	38
4.1.5	UART0 Host Connection	38
4.2	SPI Interface	40
4.2.1	SPIM Pin Interface	40
4.2.2	SPIM Connection	40
4.3	I ² C Interface	42
4.3.1	I ² C Pin Interface	42
4.3.2	I ² C Connection	42
4.4	ADC Interface	44
4.4.1	ADC Functional Specifications	44
4.4.2	ADC Pin Interface	45
4.5	SIM Interface	45
4.5.1	SIM Pin Interface	45
4.6	RF interfaces	46
4.7	E-JTAG Debug port	46
4.8	GPIO Pin Information	47
5	Functional description	50
5.1	Adrastea-I State Transition	50
5.2	Power Saving Features	51
5.3	Network Operator Support	51
5.4	Network Independent Adrastea-I Power Saving Modes	51
5.4.1	DH0 Mode	51
5.4.2	DH1 Mode	52
5.4.3	DH2 Mode	52
5.4.4	DH0 Mode Setting	53
5.4.5	DH1 Mode Setting	54
5.4.6	DH2 Mode Setting	56
5.5	GNSS Receiver	58
5.5.1	Supported GNSS constellations	58
5.5.2	GNSS Co-existence with LTE Modem	58
5.6	Application MCU	58
6	Quick start guide	59
6.1	Minimal pin connections	59
6.2	Prerequisites	60
6.3	Taking into operation	62
6.4	Select LTE-M or NB-IoT Mode	65
6.4.1	Manual selection of LTE-M or NB-IoT mode	65
6.4.2	Automatic Selection of LTE-M or NB-IoT Mode	66
6.5	Register to Network	68
6.6	Activate GNSS	70
7	Design in guide	72
7.1	Advice for schematic and layout	72
7.2	Dimensioning of the micro strip antenna line	74
7.3	Antenna solutions	74
7.3.1	Wire antenna	75
7.3.2	Chip antenna	75
7.3.3	PCB antenna	75
7.3.4	Antennas provided by Würth Elektronik eiSos	75
8	Reference design	77
8.1	Schematic	78
8.2	Layout	83

9	Manufacturing information	85
9.1	Moisture sensitivity level	85
9.2	Soldering	85
9.2.1	Reflow soldering	85
9.2.2	Cleaning	86
9.2.3	Potting and coating	87
9.2.4	Other notations	87
9.3	ESD handling	87
9.4	Safety recommendations	88
10	Product testing	89
10.1	Würth Elektronik eiSos in-house production tests	89
10.2	EMS production tests	89
11	Physical specifications	91
11.1	Dimensions	91
11.2	Weight	91
11.3	Module drawing	92
11.4	Footprint	93
12	Marking	94
12.1	Lot number	94
12.2	General labeling information	95
13	Information for explosion protection	96
14	Regulatory compliance information	97
14.1	Important notice EU	97
14.2	Important notice UKCA	97
14.3	Important notice FCC	97
14.4	Conformity assessment of the final product	97
14.5	Exemption clause	98
14.6	EU Declaration of conformity	99
14.7	RED-DA Cybersecurity statement	100
14.8	RED-DA Cybersecurity first actions	101
14.9	RED-DA Cybersecurity guideline for end devices using Adrastea-I	104
14.10	FCC Compliance Statement (US)	106
14.11	IC Compliance Statement (Canada)	109
14.12	ISED Radiation Exposure statement	111
14.13	FCC and IC requirements to OEM integrators	112
14.13.1	Pre-certified antennas	114
15	Packaging specification	115
16	References	117
17	Important notes	118
18	Legal notice	118
19	License terms	119
20	Revision history	122
21	Abbreviations	127

1 Introduction

Adrastea-I module is a compact LTE-M / NB-IoT Cellular module with integrated GNSS.

Based on the Sony Altair ALT1250 chipset, the Adrastea-I module provides AT-Command based multi-band configurability enabling international multi-regional coverage in LTE Cat M1 / NB1 radio access technologies.

Adrastea-I includes a fully integrated global navigation satellite system solution that supports GPS and GLONASS positioning systems.

Compact 13.4mm x14.6mm x 1.85mm design allows the module to fit in small-size applications.

The module can be operated through one of two available cellular communication technologies:

- LTE-Cat.M or
- LTE-Cat.NB-IoT.

The Adrastea-I EV-Kit and "Adrastea Commander" tool ([1]) allow getting started with the module and testing its functionalities. The EV-Board can be connected to a USB port of a PC. The EV-Board also represents our reference design. For further information, Refer to the EV-Board manual [2].

The module comes with the declaration of conformity (CE), is compliant to RoHS, REACH. The Adrastea-I module is GCF, FCC, IC and Deutsche Telekom certified.

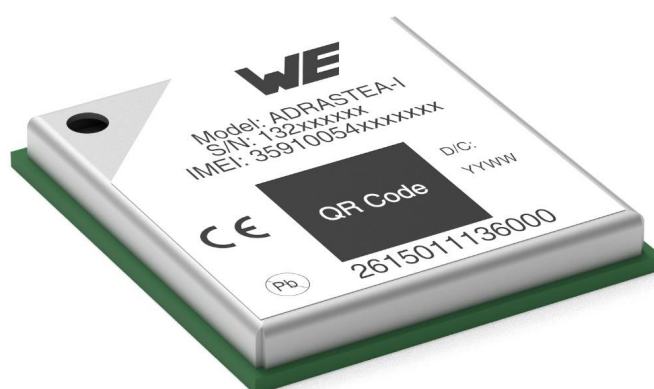


Figure 1: Adrastea-I

1.1 Adrastea-I GCF Certification

Adrastea-I is GCF certified module. Major advantage with GCF certified module integrated in end IoT application is that it reduces efforts for industry and operator specific certifications. However, customer shall check certification requirements with network operator before commercial deployment of IoT devices.



Figure 2: Adrastea-I GCF Certification

1.2 Adrastea-I Deutsche Telekom Certification

Adrastea-I is certified by Deutsche Telekom.



To Würth Elektronik
Forward to Ravindra Singh
From Miguel Rodriguez (Deutsche Telekom AG)
Contact E-Mail: miguel.rodriguez@telekom.de
Date 07th February, 2022
Subject Limited Certification for Würth Elektronik ADASTREA-I Communication Module

Dear Würth Elektronik Team,

Deutsche Telekom issues a limited certification for your ADASTREA-I communication module:

Concept Class	LPWA-enabled, multi-mode module (NB1, LTE-M)
Deutsche Telekom (DT) Certification Date	07.02.2022
DT Responsible Entity / Contact	VTI-IOT / Miguel Rodriguez
Certified Deutsche Telekom Affiliates*	(Limited) NB-IoT: AT, CZ, DE, HR, NL, PL, SK (Limited) LTE-M: AT, DE, NL
OEM Firmware Version	ADRASTEIA-I_06.006
OEM Hardware Version	V1.0

* Please refer to the OEM Certification Report for Deutsche Telekom Affiliate Country Codes.

Detailed conditions for this limited certification are listed below. Until these topics are addressed, a full technical certification is not granted by Deutsche Telekom. For more details, please refer to the OEM Certification Report of this product.

- OEM is required to present GCF certification for this product.

Deutsche Telekom considers this product to be suitable for IoT projects having large volumes, as there is support for the no-harm to network / communication efficiency feature GSMA TS.34 Radio Policy Manager (RPM).

Kind regards,
Deutsche Telekom AG

Miguel Rodriguez
Digital unterschrieben von Miguel Rodriguez
Datum: 2022.02.07 15:10:05 +01'00'

Miguel Rodriguez
Sr. Mgr., IoT Device Verification & Engineering



Adrian Orlikowski
Mgr., IoT Device Verification & Engineering


Address Deutsche Telekom AG
Landgrabenweg 151, 53227 Bonn
Contact + 49 228 181-0, E-Mail: info@telekom.de
Supervisory Board Timotheus Hötting (Chairman),
Board of Directors Adel Al-Saleh, Birgit Bohle, Srinivasan Gopalan, Dr. Christian P. Illek, Thorsten Langheim, Dominique Leroy, Claudia Nemat
Commercial register Amtsgericht Bonn HRB 6794
Registered office Bonn
VAT ID No. DE 123475223
WEEE Reg.-No. DE50478376

Figure 3: Adrastea-I Deutsche Telekom Certification

1.3 Benefits of Deutsche Telekom Certified Module

Normal Cellular Certification procedure includes 3 different types of certifications:

- Regulatory Certification: CE, FCC and similar based on region.
- Industry Specific Certification: GCF, PTCRB
- Network Operator Certification: Vodafone, Deutsche Telekom, AT&T etc.

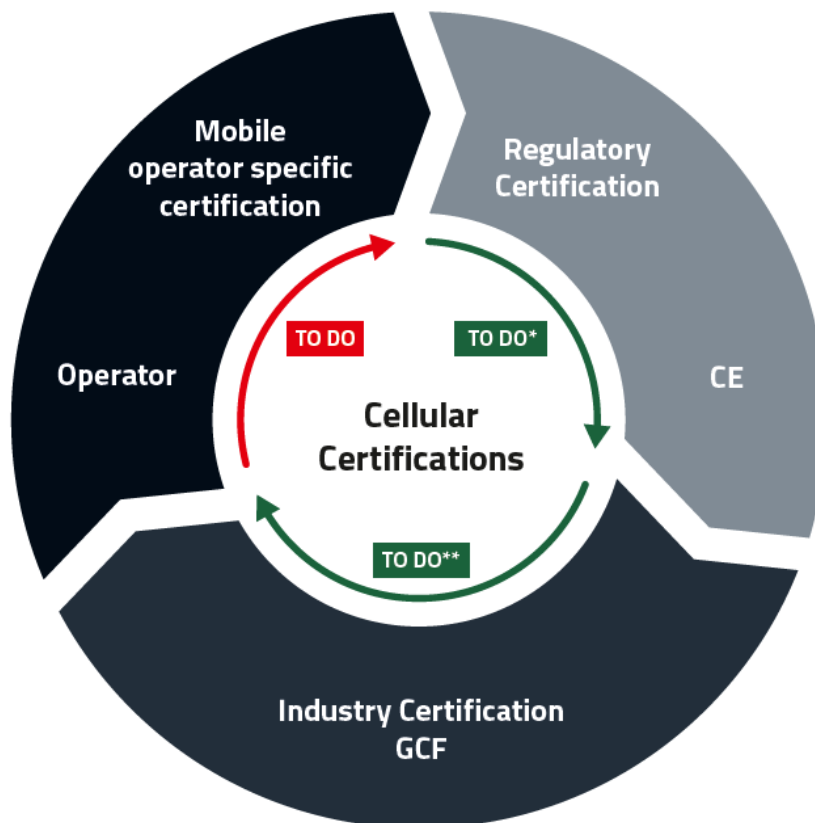

* To do on device level, Adrastea-I offers CE declaration

** To do on device level, Adrastea-I offers GCF certification

Figure 4: Normal Cellular Certification Process

Pre-Certified Adrastea-I module from Deutsche Telekom brings the following key advantages:

- It enables integration to end device without further end device label Industry specific Certification (i.e. GCF) and Network Operator Certification (Deutsche Telekom).




Regulatory Certifications (i.e. CE, FCC and similar based on region) are still required for the end product.

- Obtain assurance: Pre-certified module reduces the final test effort.
- Save time and money: The end product does not require to go through complex cellular certification process again.



The benefits of certification are applicable exclusively when the customer utilizes connectivity (IoT SIM cards) provided by Deutsche Telekom. To obtain the certification benefits, the customer must use connectivity (IoT SIM cards) from Deutsche Telekom. It is required that the customer contacts Deutsche Telekom to acquire the necessary IoT SIM cards.

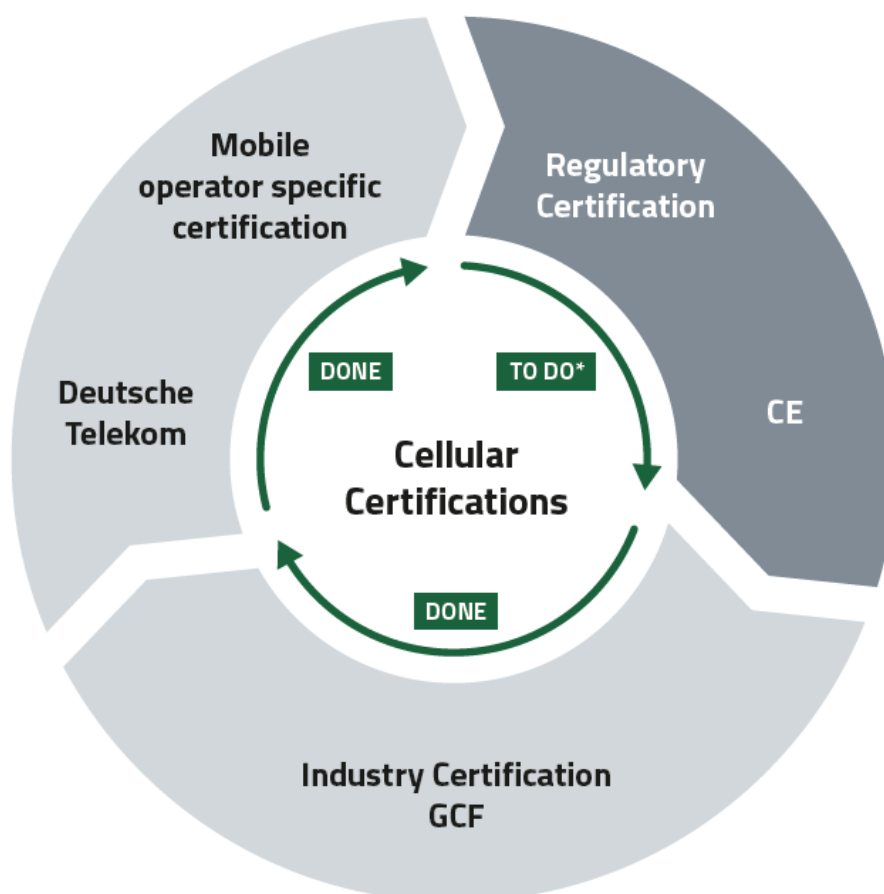

*To do on device level, Adrastea-I offers CE declaration

Figure 5: Benefits of Deutsche Telekom Certified Module

1.4 Module Key Features

Feature	Description
Physical Dimensions	13.4mm x 14.6mm x 1.85mm
Supported Networks	- LTE-Cat.M - LTE-Cat.NB-IoT
LTE Supported Bands CE	LTE-Cat.M: B3/B8/B20/B28 LTE-Cat.NB-IoT: B3/B8/B20/B28
LTE Supported Bands FCC / IC	LTE-Cat.M: B2/B4/B12 LTE-Cat.NB-IoT: B5
Module Interfaces	- USIM - UART - I ² C Master - SPI Master - GPIO - ADC - JTAG
Integrated GNSS	Adrastea-I includes a fully integrated global navigation satellite system solution that supports GPS and GLONASS positioning system.
Output Power class	Power Class 3 (23 dBm)
Maximum Data Rate	LTE-Cat.M: Downlink: 300 Kbps, Uplink: 375 Kbps LTE-Cat.NB-IoT: Downlink: 27.2 Kbps, Uplink: 62.5 Kbps
3GPP Standard Compliance	3GPP Release 13 compliant
Firmware Upgrade	- Secure Firmware upgrade over UART - Secure Firmware upgrade over air
Supported Protocols	- IPv4, IPv6 - TCP/UDP SOCKET - HTTP/HTTPS - TLS/DTLS (TLS Version 1.2) - LWM2M Client - MQTT
AT Commands	3GPP TS 27.007 and 3GPP TS 27.005 AT commands, as well as Würth Elektronik eiSos enhanced AT commands
Operating Voltage	- VDD: From 2.3 V to 4.3 V - VDD_FEM: From 3.1 V to 4.3 V
Temperature Range	Operation temperature: -40 °C to +85 °C

Table 1: Module Key Features

1.5 Block diagram

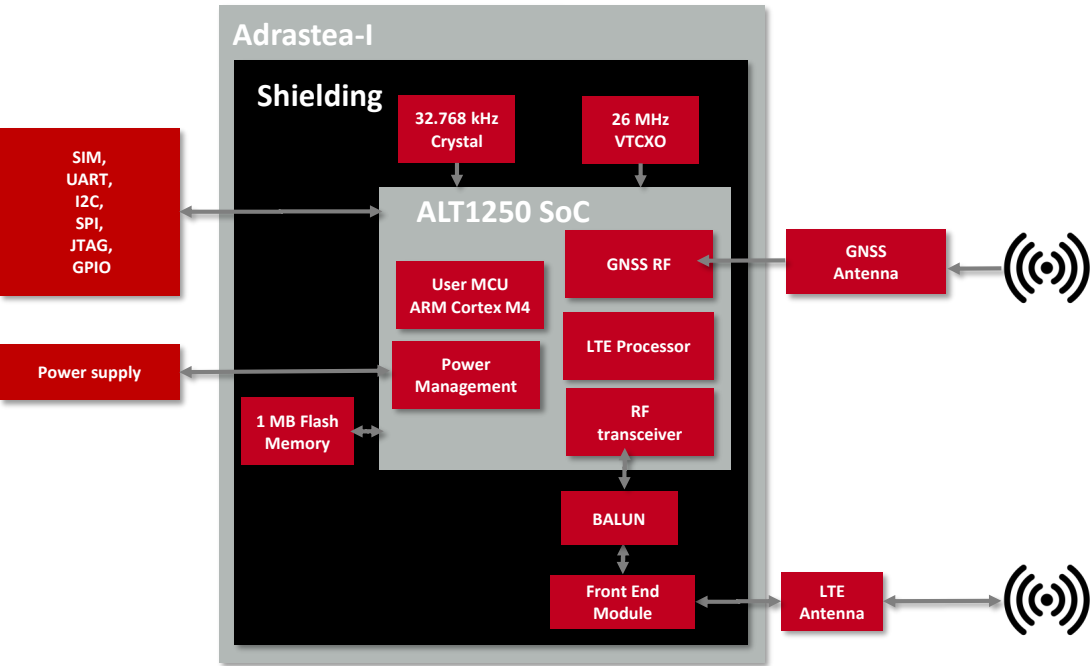


Figure 6: Block diagram

1.6 Ordering information

WE order code	Description
2615011136000	Cellular LTE-M / NB-IoT module
2615029236001	Cellular LTE-M / NB-IoT EV-Kit

Table 2: Ordering information

2 Electrical and Radio Specifications

Unless otherwise stated, all the values given in the manual were measured on the Adrastea-I EV-Board under the following conditions: $T = 25\text{ °C}$ and powered via 5 V/1A Power Jack. The voltage regulator of the EV-Board regulates the connected voltage 5 V down to 3.6 V and supplies the remaining parts of the circuit. If the EV-Board is power sourced, the power LED1 lights up.

2.1 Operating Conditions

Parameter	Direction	Min.	Typ.	Max.	Unit
Supply voltage (VDD)	Supply	2.3	3.6	4.3	V
Supply voltage (VDD_FEM)	Supply	3.1	3.6	4.3	V
VSIM	Output	1.7	1.8	1.9	V
VDDIO	Output	1.7	1.8	1.9	V
Operating temperature		-40	25	85	°C

Table 3: Operating conditions

2.2 Absolute Maximum Ratings

Description	Min.	Typ.	Max.	Unit
Supply voltage (VDD)	-0.2		+4.5	V
Voltage on any digital pin	-0.2		VDDIO+0.2	V
Flash (non-volatile memory) endurance	100 000			Write/erase cycles

Table 4: Absolute maximum ratings

2.3 Current Consumption

2.3.1 LTE-Cat.M Mode

Description	Test Condition	Value	Unit
LTE-IDLE	MCU RUN	16.8	mA
	MCU SHUTDOWN	2.9	mA
Peak Current (TX)	TX @23 dBm, MCU RUN	454.2	mA
PSM Current (DH0)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	1.57	μA
PSM Current (DH1)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	39.6	μA
PSM Current (DH2)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	82.2	μA
GNSS-Active	MCU RUN, LTE RF Disabled (AT+CFUN=0)	53.98	mA

Table 5: LTE-Cat.M Current consumption

2.3.2 LTE-Cat.NB-IoT Mode

Description	Test Condition	Value	Unit
LTE-IDLE	MCU RUN	15.7	mA
	MCU SHUTDOWN	2.8	mA
Peak Current (TX)	TX @23 dBm, MCU RUN	434	mA
PSM Current (DH0)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	1.57	μA
PSM Current (DH1)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	38.5	μA
PSM Current (DH2)	MCU SHUTDOWN, LTE RF Disabled (AT+CFUN=0)	81.5	μA

Table 6: NB-IoT Current consumption

2.4 LTE Radio Characteristics

Module performance is based on the quality of the RF link from LTE network to the Adrastea-I module.

The following factors and tasks are critical for the performance of the Adrastea-I module:

- External LTE antenna for signal reception from LTE network.
- RF trace delivering the signal from the external antenna to the LTE RF pad of the Adrastea-I module
- Minimization of external and environmental effects.

2.4.1 LTE Supported Bands

2.4.2 LTE-Cat.M Mode CE

Band	Transmit Band (Tx)	Receive Band (Rx)	Unit
B3	1710 - 1785	1805 - 1880	MHz
B8	880 - 915	925 - 960	MHz
B20	832 - 862	791 - 821	MHz
B28	703 - 748	758 - 803	MHz

Table 7: LTE-Cat.M CE Supported Bands

2.4.3 LTE-Cat.M Mode for FCC and IC

Band	Transmit Band (Tx)	Receive Band (Rx)	Unit
B2	1850 - 1910	1930 - 1990	MHz
B4	1710 - 1755	2110 - 2155	MHz
B12	699 - 716	729 - 746	MHz

Table 8: LTE-Cat.M FCC and IC Supported Bands

2.4.4 LTE-Cat.NB-IoT Mode for CE

Band	Transmit Band (Tx)	Receive Band (Rx)	Unit
B3	1710 - 1785	1805 - 1880	MHz
B8	880 - 915	925 - 960	MHz
B20	832 - 862	791 - 821	MHz
B28	703 - 748	758 - 803	MHz

Table 9: LTE-Cat.NB-IoT CE Supported Bands

2.4.5 LTE-Cat.NB-IoT Mode for FCC and IC

Band	Transmit Band (Tx)	Receive Band (Rx)	Unit
B5	824 - 849	869 - 894	MHz

Table 10: LTE-Cat.NB-IoT FCC and IC Supported Bands

2.4.6 RF Receiving Sensitivity

Unless noted otherwise, the Adrastea-I evaluation board is in static mode, values were measured with Rohde and Schwarz CMW500 equipment.

2.4.7 LTE-Cat.M Reference sensitivity CE

Band	Band Width	Value	Unit
B3	1.4 MHz	-106.4	dBm
B8	1.4 MHz	-107.2	dBm
B20	1.4 MHz	-106.4	dBm
B28	1.4 MHz	-106	dBm

Table 11: LTE-Cat.M RX Sensitivity CE Bands

2.4.8 LTE-Cat.M Reference sensitivity FCC / IC

Band	Band Width	Value	Unit
B2	1.4 MHz	-105	dBm
B4	1.4 MHz	-106.2	dBm
B12	1.4 MHz	-105.6	dBm

Table 12: LTE-Cat.M RX Sensitivity for FCC and IC Bands

2.4.9 LTE-Cat.NB-IoT Reference sensitivity CE

Band	Value	Unit
B3	-110	dBm
B8	-110	dBm
B20	-110	dBm
B28	-110	dBm

Table 13: LTE-Cat.NB-IoT RX Sensitivity CE Bands

2.4.10 LTE-Cat.NB-IoT Reference sensitivity FCC / IC

Band	Value	Unit
B5	-110	dBm

Table 14: LTE-Cat.NB-IoT RX Sensitivity FCC and IC Bands

2.4.11 LTE-Cat.M Maximum Output Power

Unless noted otherwise, the Adrastea-I evaluation board is in static mode, values were measured with Rohde and Schwarz CMW500 equipment.

2.4.12 LTE-Cat.M Maximum Output Power CE

Band	Band Width	Value	Unit
B3	5 MHz	21.5	dBm
B8	5 MHz	22.9	dBm
B20	5 MHz	21.7	dBm
B28	5 MHz	21.9	dBm

Table 15: LTE-Cat.M Maximum Output Power CE Bands

2.4.13 LTE-Cat.M Maximum Output Power FCC / IC

Band	Value	Unit
B2	24.5	dBm
B4	24.5	dBm
B12	24	dBm

Table 16: LTE-Cat.M Maximum Output Power FCC and IC Bands

2.4.14 LTE-Cat.NB-IoT Maximum Output Power CE

Band	Value	Unit
B3	21.8	dBm
B8	23.7	dBm
B20	22.1	dBm
B28	22.4	dBm

Table 17: LTE-Cat.NB-IoT Maximum Output Power CE Bands

2.4.15 LTE-Cat.NB-IoT Maximum Output Power FCC / IC

Band	Value	Unit
B5	24.5	dBm

Table 18: LTE-Cat.NB-IoT Maximum Output Power FCC and IC Bands

2.5 GNSS Radio Characteristics

Module performance is based on the quality of the RF link from GNSS satellites to the module.

The following factors and tasks are critical for the performance of the integrated GNSS:

- Free/unimpacted line of sight
- External GNSS antenna for signal reception from GNSS satellites
- RF trace delivering the signal from the external antenna to the RF pad of the GNSS module
- Minimization of external and environmental effects

Adrastea-I supports GPS and GLONASS satellite systems using dedicated hardware accelerators in a power and cost efficient manner. The GNSS receiver shares certain hardware resources with the modem. This enables GNSS measurement slots to be efficiently scheduled based on the modem link state. The device key target is to allow GNSS positioning for asset management applications where infrequent position updates are required.

The Adrastea-I GNSS shares the RF Rx path with the LTE modem and, therefore, cannot operate in parallel with LTE data transfer. Hence this GNSS is not suitable for products that inherently require this co-existence, LTE connection and GNSS tracking.



GNSS cannot co-exist with LTE data transfer. LTE communication has higher priority over GNSS and, therefore, GNSS is automatically shut down once LTE is active (if it was active). While LTE is active, GNSS cannot be activated and all GNSS AT commands are responded with error.

2.5.1 GNSS Supported Constellation

Adrastea-I supports the following constellation (Satellite systems):

- GPS
- GLONASS

2.5.2 GNSS: Operating frequencies

Description	Min	Typ.	Max	Unit
Input Frequency	1560		1610	MHz

Table 19: Radio characteristics

2.5.3 GNSS: Rx Sensitivity

Module sensitivity is the weakest signal level the receiver can work with and it depends on the state of the module.

- Cold start sensitivity is the minimum power required by the module to acquire satellites and perform first fix in cold start.
- Hot start sensitivity is the minimum power required by the module to acquire satellites and perform first fix in hot start.
- Tracking sensitivity is the minimum power required by the module to keep in track of the position fix.

Parameter	Test Condition	Value	Unit
Cold Start	GPS-GLONASS	-145	dBm
Hot Start	GPS-GLONASS	-152	dBm
Tracking	GPS-GLONASS	-160	dBm

Table 20: GNSS RX Sensitivity

2.5.4 GNSS: Time To First Fix

The Time To First Fix (TTFF) is the time needed by the module to achieve the first valid position fix, once the module is powered up or returns from a period of signal blockage.



GNSS update rate for Adrastea-I is 1 Hz (once per second).

Depending on the type of start (cold or hot), a different TTFF performance is given below.

Parameter	Test Condition	Value	Unit
Cold Start	GPS-GLONASS, Power Level = -120 dBm	36	s
Hot Start	GPS-GLONASS, Power Level = -120 dBm	1	s

Table 21: GNSS Time to First Fix

2.5.5 GNSS: Position Accuracy

Parameter	Test Condition	Value	Unit
Position Accuracy	GPS-GLONASS, Power Level = -120 dBm	1.5	m

Table 22: GNSS Position Accuracy

3 Pinout

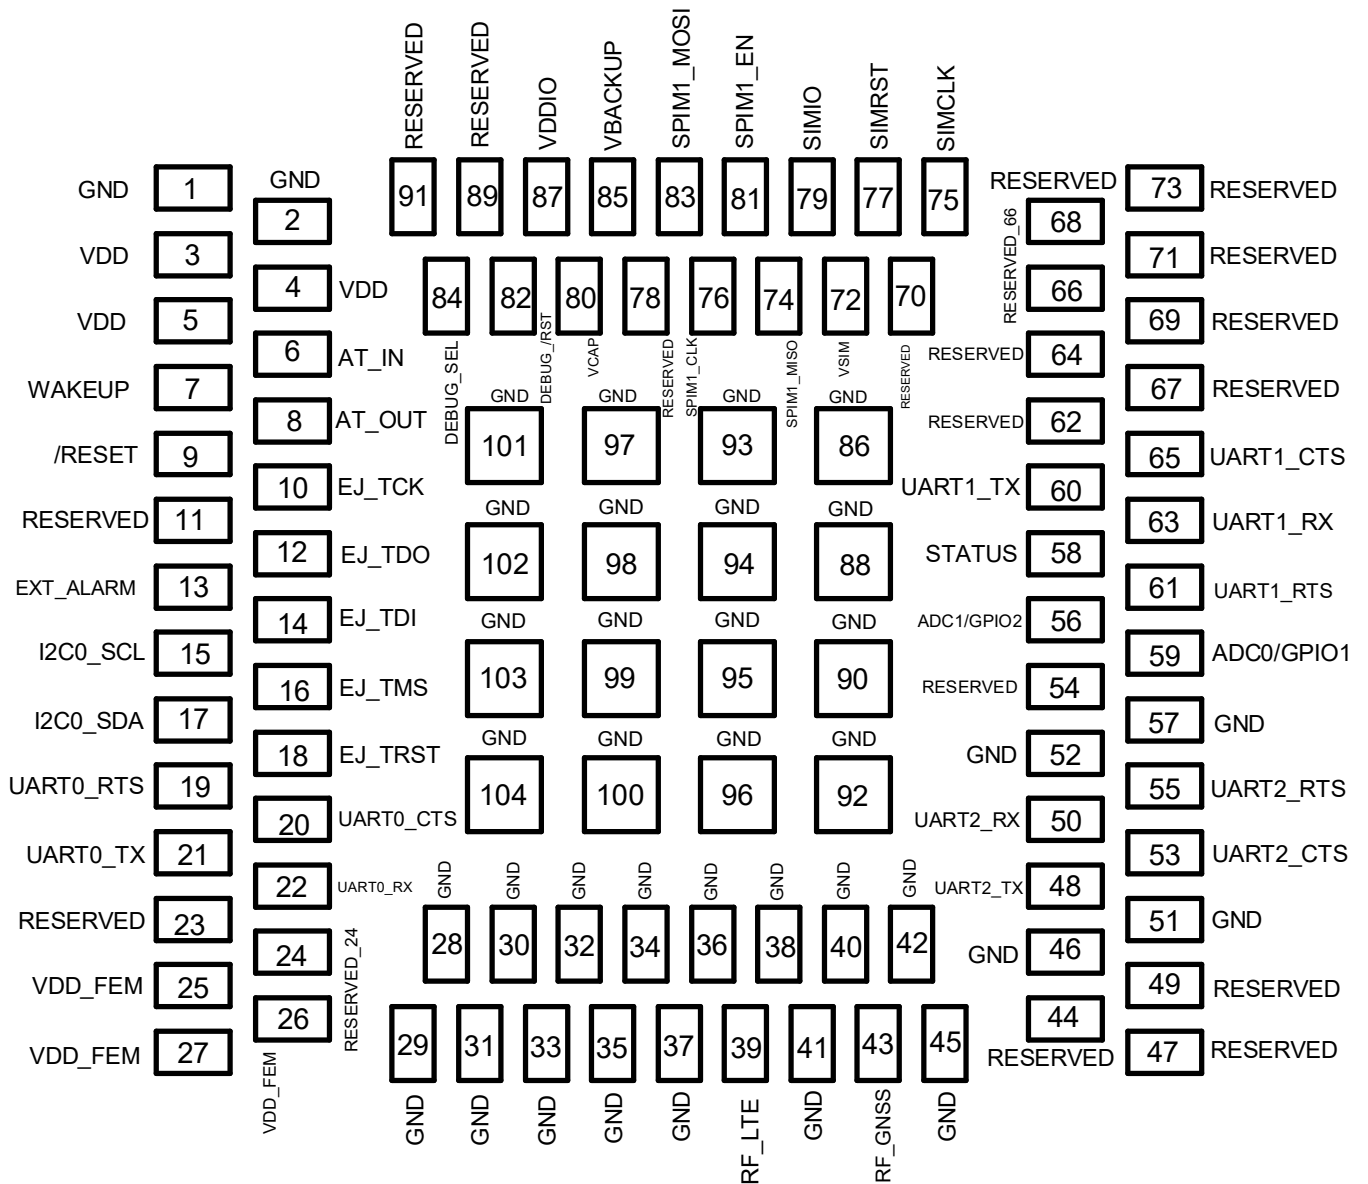


Figure 7: Pinout (top view)

Pin Number	Designation	I/O	Description
1	<i>GND</i>	Supply	Negative Supply Voltage
2	<i>GND</i>	Supply	Negative Supply Voltage
3	<i>VDD</i>	Supply	Power supply for module
4	<i>VDD</i>	Supply	Power supply for module
5	<i>VDD</i>	Supply	Power supply for module
6	<i>AT_IN</i>	Input	Anti-tamper input
7	<i>WAKEUP</i>	Input	Wakeup active high Default pull resistor at power up and after DH0: No pull DH2 state: No pull DH1 state: No pull DH0 state: No pull
8	<i>AT_OUT</i>	Output	Anti-tamper output
9	<i>/RESET</i>	Input	Reset active low
10	<i>EJ_TCK</i>	Input	JTAG Test Clock
11	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
12	<i>EJ_TDO</i>	Output	JTAG Test Data Output
13	<i>EXT_ALARM</i>	Output	Alarm Output
14	<i>EJ_TDI</i>	Input	JTAG Test Data Input
15	<i>I2C0_SCL</i>	Input/Output	I2C serial clock Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
16	<i>EJ_TMS</i>	Input	JTAG Test Mode Select
17	<i>I2C0_SDA</i>	Input/Output	I2C serial data Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
18	<i>EJ_TRST</i>	Input	JTAG Test Reset (required external pull down)

19	<i>UART0_RTS</i>	Output	MCU UART0 Request to Send Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
20	<i>UART0_CTS</i>	Input	MCU UART0 Clear to Send Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
21	<i>UART0_TX</i>	Output	MCU UART0 Transmit Data Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
22	<i>UART0_RX</i>	Input	MCU UART0 Receive Data Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
23	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
24	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
25	<i>VDD_FEM</i>	Supply	Power supply for FEM (Front End Module)
26	<i>VDD_FEM</i>	Supply	Power supply for FEM (Front End Module)
27	<i>VDD_FEM</i>	Supply	Power supply for FEM (Front End Module)
28	<i>GND</i>	Supply	Negative supply voltage
29	<i>GND</i>	Supply	Negative supply voltage

30	<i>GND</i>	Supply	Negative supply voltage
31	<i>GND</i>	Supply	Negative supply voltage
32	<i>GND</i>	Supply	Negative supply voltage
33	<i>GND</i>	Supply	Negative supply voltage
34	<i>GND</i>	Supply	Negative supply voltage
35	<i>GND</i>	Supply	Negative supply voltage
36	<i>GND</i>	Supply	Negative supply voltage
37	<i>GND</i>	Supply	Negative supply voltage
38	<i>GND</i>	Supply	Negative supply voltage
39	<i>RF_LTE</i>	RF	RF Signal LTE
40	<i>GND</i>	Supply	Negative supply voltage
41	<i>GND</i>	Supply	Negative supply voltage
42	<i>GND</i>	Supply	Negative supply voltage
43	<i>RF_GNSS</i>	RF	RF Signal GNSS
44	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
45	<i>GND</i>	Supply	Negative supply voltage
46	<i>GND</i>	Supply	Negative supply voltage
47	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
48	<i>UART2_TX</i>	Output	UART2 Transmit Data (CLI port)
49	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
50	<i>UART2_RX</i>	Input	UART2 Receive Data (CLI port)
51	<i>GND</i>	Supply	Negative supply voltage
52	<i>GND</i>	Supply	Negative supply voltage
53	<i>UART2_CTS</i>	Input	UART2 Clear to Send (CLI port)
54	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
55	<i>UART2_RTS</i>	Output	UART2 Request to Send (CLI port)
56	<i>ADC1/GPIO2</i>	Input/Output	Auxiliary Analog to Digital Converter Input/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull

57	<i>GND</i>	Supply	Negative supply voltage
58	<i>STATUS</i>	Output	Module Status
59	<i>ADC0/GPIO1</i>	Input/Output	Auxiliary Analog to Digital Converter Input /Programmable GPIO Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
60	<i>UART1_TX</i>	Output	UART1 Transmit Data (Modem Log port)
61	<i>UART1_RTS</i>	Output	UART1 Request to Send (Modem Log port)
62	<i>RESERVED</i>	–	Reserved
63	<i>UART1_RX</i>	Input	UART1 Receive Data (Modem Log port)
64	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
65	<i>UART1_CTS</i>	Input	UART1 Clear to Send (Modem Log port)
66	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
67	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
68	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
69	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
70	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
71	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
72	<i>VSIM</i>	Output	SIM Output voltage
73	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)

74	<i>SPIM1_MISO/ GPIO39</i>	Input/Output	MCU_SPIM1_MISO/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
75	<i>SIMCLK</i>	Output	SIM Clock
76	<i>SPIM1_CLK/ GPIO41</i>	Input/Output	MCU_SPIM1_CLK/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
77	<i>SIMRST</i>	Output	SIM Reset
78	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
79	<i>SIMIO</i>	Input/Output	SIM Data
80	<i>VCAP</i>	Input/Output	Connecting external capacitor as backup for VDD
81	<i>SPIM1_EN/ GPIO40</i>	Input/Output	MCU SPI Enable/ Programmable GPIO Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
82	<i>DEBUG_RST</i>	Input/Output	Reset pin for the JTAG probe
83	<i>SPIM1_MOSI/ GPIO38</i>	Input/Output	MCU_SPIM1_MOSI/ Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull

84	<i>DEBUG_SEL</i>	Input	Reset pin for the JTAG probe
85	<i>VBACKUP</i>	Input	Input from backup battery
86	<i>GND</i>	Supply	Negative supply voltage
87	<i>VDDIO</i>	Output	Output Voltage (it will turn off at DH0 and DH1 sleep mode)
88	<i>GND</i>	Supply	Negative supply voltage
89	<i>RESERVED</i>	–	Reserved (Shall be soldered but not connected.)
90	<i>GND</i>	Supply	Negative supply voltage
91	<i>RESERVED</i>	–	Reserved(Shall be soldered but not connected.)
92	<i>GND</i>	Supply	Negative supply voltage
93	<i>GND</i>	Supply	Negative supply voltage
94	<i>GND</i>	Supply	Negative supply voltage
95	<i>GND</i>	Supply	Negative supply voltage
96	<i>GND</i>	Supply	Negative supply voltage
97	<i>GND</i>	Supply	Negative supply voltage
98	<i>GND</i>	Supply	Negative supply voltage
99	<i>GND</i>	Supply	Negative supply voltage
100	<i>GND</i>	Supply	Negative supply voltage
101	<i>GND</i>	Supply	Negative supply voltage
102	<i>GND</i>	Supply	Negative supply voltage
103	<i>GND</i>	Supply	Negative supply voltage
104	<i>GND</i>	Supply	Negative supply voltage

Table 23: Pinout

3.1 Module Power Up

An automatic power up sequence occurs when connecting the device to the power supply (VDD). The automatic power up sequence consists of the following phases:

- Phase 0: RET LDO to ramp up for supplying 1.0V retention core domain.
- Phase 1: I/O LDO to ramp up for supplying 1.8 V I/O domain.
- Phase 2: RF LDO to ramp up for supplying 1.9V RF domain.
- Phase 3: DCDC to ramp up for supplying 1.3V of Digital LDO and RF.
- Phase 4: DIG LDO to ramp up for supplying 1.0V of digital core domain.
- Phase 5: FLASH LDO to ramp up for supplying 1.8 V of Flash Domain.

Regulators will start ramping only with 1us delay from power good indication of previous phase. The automatic power up sequencing is shown below:

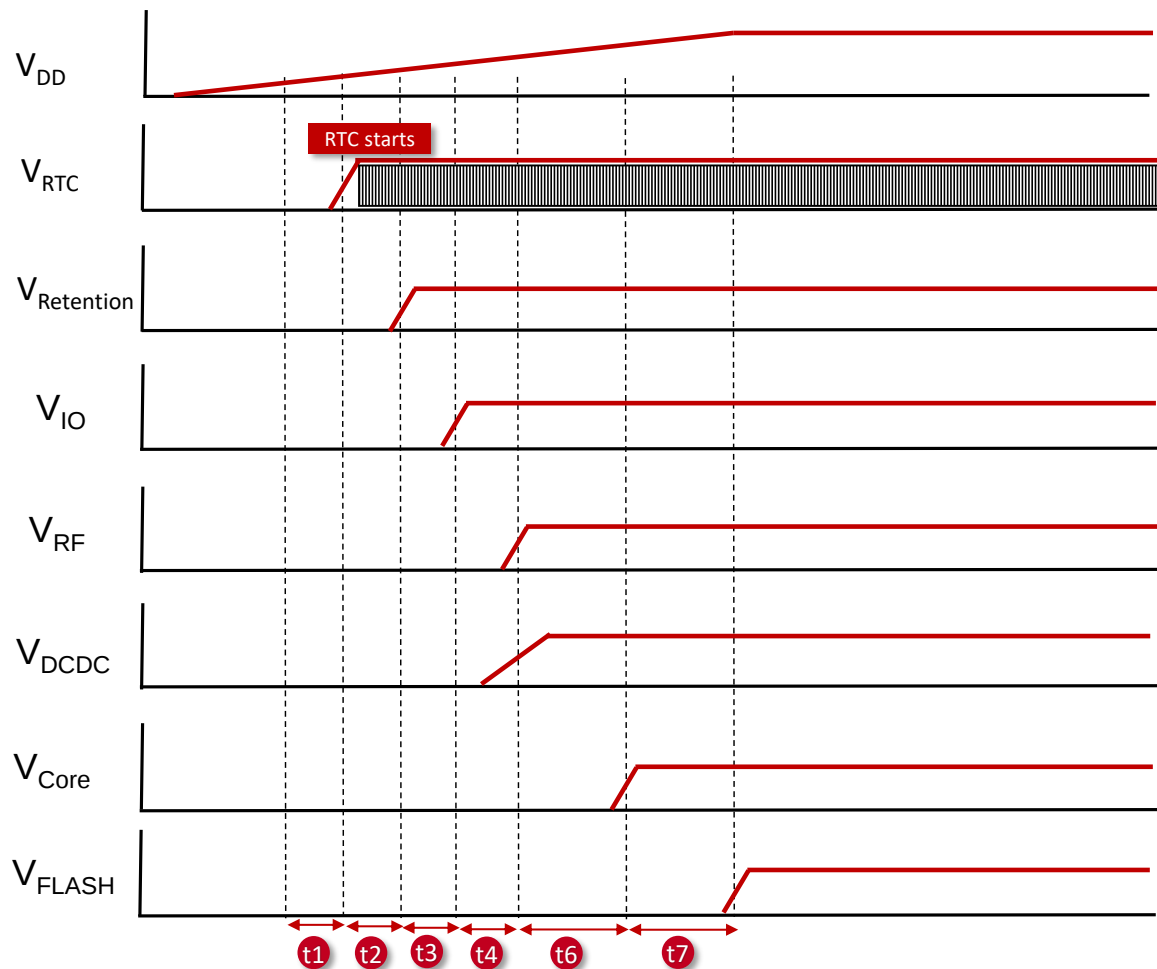


Figure 8: Adrastea-I Power up Sequence

Parameter	Description	Min.	Max.	Unit
t1	When VDD crosses the 0.8V threshold-VRTC should follow the VDD unless it has some capacitance on it.	0	5	μs
t2	Digital retention power up, the VDD slew rate has impact on this timing.	70	100	μs
t3	I/O LDO power up.	10	60	μs
t4	RF LDO power up.	10	60	μs
t5	DCDC boot time.	100	200	μs
t6	Core LDO power-up.	10	60	μs
t7	FLASH LDO power-up.	10	60	μs

Table 24: Power Up timing

3.2 Module Power Down

Power down sequence of the regulators will occur in following conditions:

- Turn off VDD.
- Shutdown is requested by */RESET* pin pulled to low.

3.3 Module Reset

Module reset will occur in following conditions:

- Perform power cycle - Turn off/on VDD and power up the device from reset state.
- Using */RESET* pin user can initiate power cycle that resets the device.

3.4 WAKEUP pin

This pin can be used to immediately wake up the module when being in low power state. This pin allows the module to get out of sleep mode when pulled HIGH.

The host connected to this pin should always keep the state of this pin (HIGH/LOW) at a known state (not floating) according to the required functionality.

- Pulled HIGH: Wake up internal MCU of module from sleep mode.
- Pulled LOW: Allowing internal MCU of module to go into sleep mode.

3.5 AT_IN and AT_OUT pins

User can connect the AT_OUT pin to the AT_IN pin in order to protect a device or module from tampering. The device will generate a software indication if the AT_OUT and AT_IN pins are disconnected.

The anti-tampering mechanism works in all active modes and all DHx power saving modes. If the anti-tampering is not in use, the AT_IN should be shorted to GND.

3.6 /RESET pin

This pin has the highest priority compared to other chip functionalities, therefore asserting it will always force a hard reset. This pin is with internal PU resistor to 1.8V.

- Pulled HIGH: Turn on module regulators and power up the module.
- Pulled LOW: Turn off module regulators and shutdown the module.
- LOW to HIGH: Reset module (keep holding for at least 100 ms on LOW level before changing to HIGH).

3.7 EXT_ALARM pin

The EXT_ALARM pin can be used as an alarm indicator to an external host as per the Adrastea-I power mode. The behavior is as below:

Module State	Test Condition	EXT_ALARM Pin Expected behavior
DH0	MCU Shutdown, AT+CFUN=0	High Impedance
DH1	MCU Shutdown, AT+CFUN=0	High Impedance
DH2	MCU Shutdown, AT+CFUN=0	LOW signal
Active	MCU RUN	HIGH signal

Table 25: EXT_ALARM Pin

3.8 RF_LTE pin

This is the LTE antenna pin. The impedance should be close to 50 Ω , VSWR (Voltage Standing Wave Ratio) < 1.5.

Connect 50 Ω transmission lines from this pin to the 50 Ω Primary Antenna/Antenna-connector. Refer to our hardware layout recommendations (chapter 7).

3.9 RF_GNSS pin

This is the GNSS antenna pin. The impedance should be close to 50 Ω , VSWR (Voltage Standing Wave Ratio) < 1.5.

Connect 50 Ω transmission lines from this pin to the 50 Ω Primary Antenna/Antenna-connector. Refer to our hardware layout recommendations (chapter 7).

3.10 VBACKUP and VCAP pins

Adrastea-I supports a battery backup mechanism which allows seamless replacement of a weak battery. The battery should be replaced after the device is placed in DH0 state, and only when the RTC circuitry is operational, and is applied by VRTC.

The VBACKUP pin (battery) or the VCAP (capacitor) can be used as a backup during replacement. The VCAP pin should be left floating if a battery backup is used, while the VBACKUP pin should be left floating if a capacitor backup is used. If the application does not require a battery then both the VBACKUP and the VCAP pins should be left floating.

3.10.1 VCAP pin

The capacitor value should be large enough to keep the VCAP supply voltage above 1.8 V for as long as it takes for the battery to be replaced. Equation 1 should be used for calculating the capacitor value (C_{CAP}).

Equation1:

$$C_{CAP} = (I_{CAP} \times T) / (V_{to} - V_{MIN})$$

The following parameters should be taken into account when making these calculations:

- The maximum current drawn from VCAP ($I_{CAP} = 10\mu A$).
- The maximum period of time (T) it should take for battery replacement.
- The voltage that the capacitor was charged to (V_{to}).
- The minimum voltage that the capacitor can discharge while still providing sufficient operational voltage for the RTC ($V_{MIN} = 1.8 V$).

Example:

If the capacitor is charged to 3.3 V, and battery replacement requires 30 seconds, then the capacitor should be at least 200 μF (see equation below).

$$C_{CAP} = (10\mu A \times 30s) / (3.3 V - 1.8 V) = 200\mu F$$

3.10.2 VBACKUP pin

There is an option to include an external battery that can maintain the system's supply for a very short time while the main supply (VDD) is absent. The intention is to use a coin battery which is non-rechargeable. VDD thresholds at which the capacitor will start to provide VRTC:

- Similar to VCAP thresholds (see in the above section 3.10.1).
- Pull Low: Turn off module regulators and shutdown the module.
- In case a battery is not used, this pin should be left open (not connected).

3.10.3 VDDIO

1.8 V power to the retention's I/O.



VDDIO is turned off in DH0 and DH1 state. Therefore it is not allowed to provide external voltage to IOs.

3.11 Digital I/O Pins Specifications

These characteristics are applicable for VDDIO in the 1.7V - 1.9V range.

Parameter	Min.	Max.	Unit
Input LOW Level, input and I/O pins	GND	$0.3 \times VDDIO$	V
Input HIGH Level, input and I/O pins	$0.7 \times VDDIO$	VDDIO	V
Output LOW Level		$0.2 \times VDDIO$	V
Output HIGH Level	$0.8 \times VDDIO$		V
Input pull-up resistor resistance	13	45	K Ω
Input pull-up resistor current	11	44	μ A
Input pull-down resistor resistance	13.6	45	K Ω
Input pull-down resistor current	11	43	μ A

Table 26: Digital I/O Pins Specifications



The total current from all IOs combined, and supplied by VDDIO, should not exceed 50mA.

4 Module Interfaces

Adrastea-I interfaces and specific pin connections for different interfaces are described in this chapter.

4.1 UART Interface

Adrastea-I supports 3 UART interfaces.

UART Number	Description
UART0	MCU UART, this interface is used for AT Commands.
UART1	This interface is used to capture modem logs.
UART2	This interface is used for MCU and Modem Firmware upgrade

Table 27: UART Interfaces

4.1.1 UART Default Configuration

UART	Function	Baud rate	Data	Parity	Stop	Flow Control
UART0	MCU UART	115200	8bit	None	1bit	Hardware RTS/CTS (default None)
UART1	Modem Log Port	921600	8bit	None	1bit	Hardware RTS/CTS (default None)
UART2	Firmware upgrade (CLI Port)	115200	8bit	None	1bit	Hardware RTS/CTS (default None)

Table 28: UART Default Configuration



UART1 is used to capture the modem logs.
UART2 is used for local firmware upgrades.



UART0 is required to send the AT command for boot delay setting (AT%SETBDELAY=10) before accessing the UART2 for firmware update.



Flow control is needed for firmware upgrade.



UART communication is not possible when Adrastea-I is in deep hibernate mode (DH0, DH1 and DH2).

4.1.2 UART0 Pin Interface

Pin Number	Designation	I/O	Description	Electrical Characteristic
19	<i>UART0_RTS</i>	Output	MCU UART0 Request to Send	1.8 V
20	<i>UART0_CTS</i>	Input	MCU UART0 Clear to Send	1.8 V
21	<i>UART0_TX</i>	Output	MCU UART0 Transmit Data	1.8 V
22	<i>UART0_RX</i>	Input	MCU UART0 Receive Data	1.8 V

Table 29: UART0 Pin Interface



Electrical characteristics (operation voltage) of UART0 pins are 1.8 V.

4.1.3 UART1 Pin Interface

Pin Number	Designation	I/O	Description	Electrical Characteristic
61	<i>UART1_RTS</i>	Output	UART1 Request to Send (Modem Log port)	1.8 V
65	<i>UART1_CTS</i>	Input	UART1 Clear to Send (Modem Log port)	1.8 V
60	<i>UART1_TX</i>	Output	UART1 Transmit Data (Modem Log port)	1.8 V
63	<i>UART1_RX</i>	Input	UART1 Receive Data (Modem Log port)	1.8 V

Table 30: UART1 Pin Interface



Electrical characteristics (operation voltage) of UART1 pins are 1.8 V.

4.1.4 UART2 Pin Interface

Pin Number	Designation	I/O	Description	Electrical Characteristic
55	<i>UART2_RTS</i>	Output	UART2 Request to Send (CLI port)	1.8 V
53	<i>UART2_CTS</i>	Input	UART2 Clear to Send (CLI port)	1.8 V
48	<i>UART2_TX</i>	Output	UART2 Transmit Data (CLI port)	1.8 V
50	<i>UART2_RX</i>	Input	UART2 Receive Data (CLI port)	1.8 V

Table 31: UART2 Pin Interface



Electrical characteristics (operation voltage) of UART2 pins are 1.8 V.

4.1.5 UART0 Host Connection

Connection to host is possible through UART0. This section describes the external host interface which is used to control the modem.



Electrical characteristics (operation voltage) of UART0 pins are 1.8 V.

Below figure shows TX/RX/CTS and RTS connections based on 1.8 V I/O level of external host.

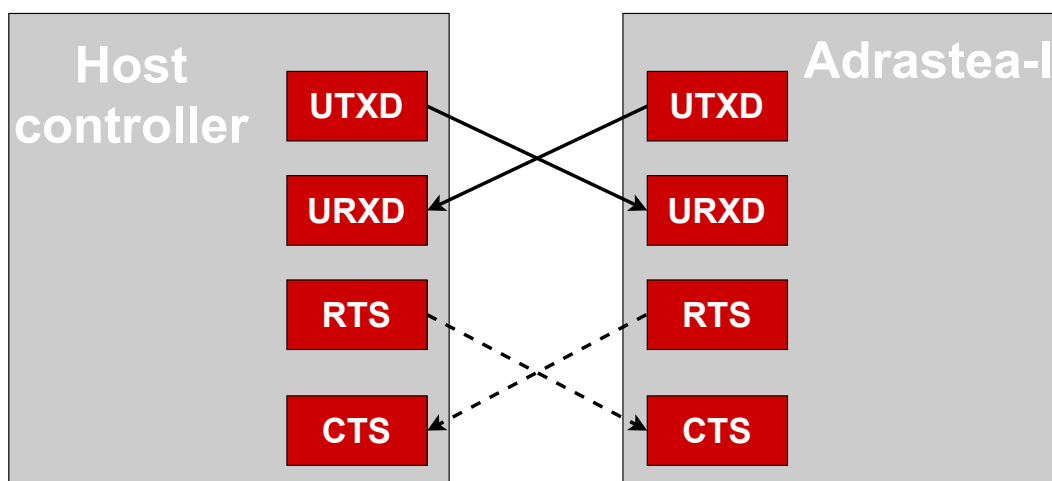


Figure 9: UART0 Host Interface

4.2 SPI Interface



The SPI interface is available when using a customized firmware. It is not implemented within the Adrastea-I default MCU firmware.

4.2.1 SPIM Pin Interface



Electrical characteristics (operation voltage) of SPIM pins are 1.8 V.

Pin Number	Designation	Description	Typ.	Unit
83	<i>SPIM_MOSI</i>	SPIM_MOSI connect to SPI Slave SDI	1.8	V
74	<i>SPIM_MISO</i>	SPIM_MISO connect to SPI Slave SDO	1.8	V
76	<i>SPIM_CLK</i>	SPIM_CLK connect to SPI Slave CLK	1.8	V
81	<i>SPIM_EN</i>	SPIM_EN connect to SPI Slave CS	1.8	V

Table 32: SPIM Pin Interface

4.2.2 SPIM Connection



Electrical characteristics (operation voltage) of SPIM pins are 1.8 V.

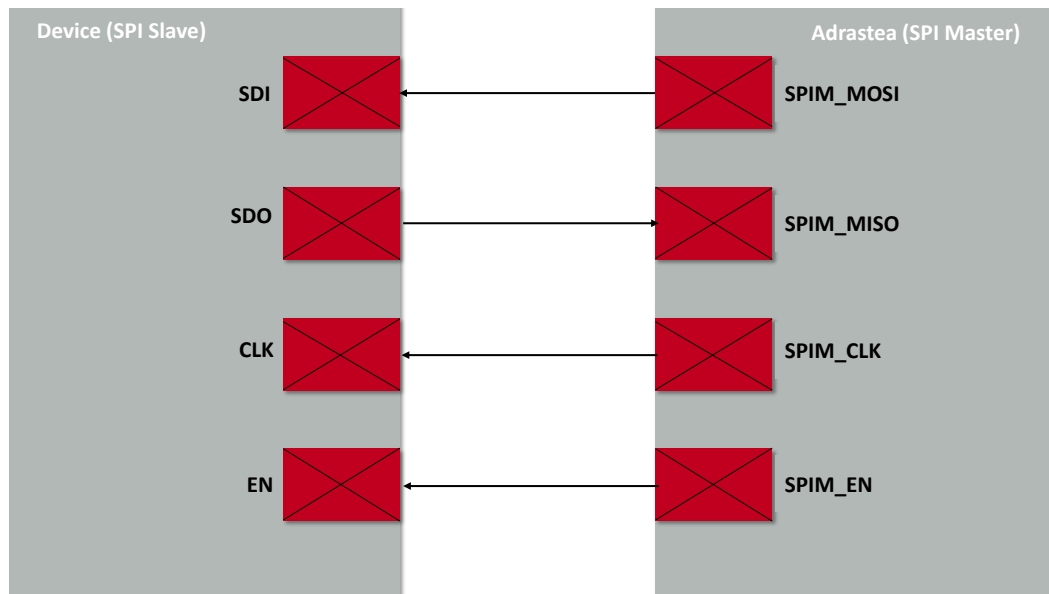


Figure 10: SPIM Connection

4.3 I²C Interface

Adrastea-I provides an I²C interface with clock rate up to 400 kbps. Its operation voltage is 1.8 V.



This interface is enabled but connecting to the external device is subjected to a customized firmware and not supported by the default firmware.

4.3.1 I²C Pin Interface



Electrical characteristics (operation voltage) of I²C pins are 1.8 V.

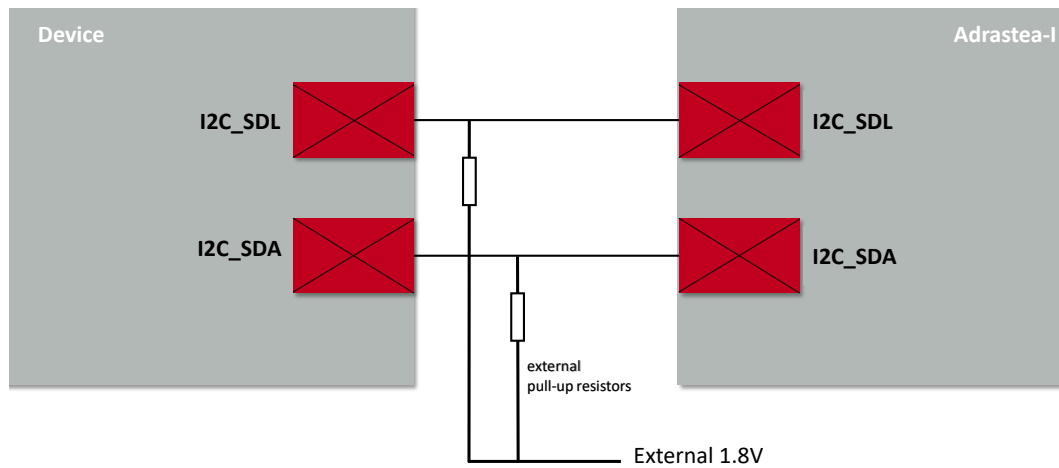
Pin Number	Designation	Description	Typ.	Unit
15	<i>I2C_SCL</i>	I ² C SCL connect to external device SCL	1.8	V
17	<i>I2C_SDA</i>	I ² C SDA connect to external device SDA	1.8	V

Table 33: I²C Pin Interface

4.3.2 I²C Connection



Electrical characteristics (operation voltage) of I²C pins are 1.8 V.

Figure 11: I²C Connection

4.4 ADC Interface

Adrastea-I includes two auxiliary A/D converters to sense external analog inputs.



Electrical characteristics (operation voltage) of ADC pins are 1.8 V.

ADC Interface	Description	Min	Max.	Unit
ADC0	Auxiliary Analog to digital converter channel 0	0	1.8	V
ADC1	Auxiliary Analog to digital converter channel 1	0	1.8	V

Table 34: ADC Interfaces

4.4.1 ADC Functional Specifications

Symbol	Parameter	Min	Typ.	Max	Unit
N	Resolution	6		12	Bits
F_{CLK}	Clock rate	4	40	52	MHz
F_S	Conversion rate per channel (Note1)		$F_c / (N+3)$		MSPS
V_{IN}	Input voltage range		1.8		V
INL	Integral Nonlinearity		± 1	± 2	LSB
DNL	Differential Nonlinearity	-0.9		0.9	LSB
R_{IN}	Input resistance (Note3)			1.42	$M\Omega$
C_{IN}	Input capacitance during sampling	2.6			pF

Table 35: ADC Functional Specifications

Note1: The general formula for this conversion rate is: $F_S = F_{CLK} / (N+3) / \text{Number of sources}$.

Note2: Conversion rate at 3.46 MSPS and 12bit resolution.

Note3: Measured Input resistance and current on ADC0 with different voltage labels are as below:

Input Voltage (V)	Input Resistance (MΩ)	Measured Current (μA)
1.0	0.98	1.02
1.5	1.42	1.07
1.7	1.38	1.23

Table 36: Measured Input Resistance

4.4.2 ADC Pin Interface

Pin Number	Designation	Description
56	<i>ADC1/GPIO2</i>	Auxiliary Analog to Digital Converter Input /Programmable GPIO
59	<i>ADC0/GPIO1</i>	Auxiliary Analog to Digital Converter Input /Programmable GPIO

Table 37: ADC Pin Interface

4.5 SIM Interface

Adrastea-I supports 1.8 V SIM cards. SIM card interface follows the ISO 7816 standard.

4.5.1 SIM Pin Interface



Electrical characteristics (operation voltage) of SIM pins are 1.8 V.

Pin Number	Designation	Description
72	<i>VSIM</i>	SIM Output voltage
75	<i>SIMCLK</i>	SIM Clock
77	<i>SIMRST</i>	SIM Reset
79	<i>SIMIO</i>	SIM Data

Table 38: SIM Pin Interface

4.6 RF interfaces

Pin Number	Designation	Description
39	<i>RF_LTE</i>	RF Signal LTE (The impedance (S11) should be close to 50 Ω , VSWR < 1.5 Refer to our hardware layout recommendations (chapter 7).
43	<i>RF_GNSS</i>	RF Signal GNSS (The impedance (S11) should be close to 50 Ω , VSWR < 1.5 Refer to our hardware layout recommendations (chapter 7).

Table 39: RF Pin Interface

4.7 E-JTAG Debug port

The Adrastea-I supports an E-JTAG interface for MCU debugging.

The E-JTAG interface includes the following pins:

Pin Number	Designation	Description
10	<i>EJ_TCK</i>	JTAG Test Clock
12	<i>EJ_TDO</i>	JTAG Test Data Output
14	<i>EJ_TDI</i>	JTAG Test Data Input
16	<i>EJ_TMS</i>	JTAG Test Mode Select
18	<i>EJ_TRST</i>	JTAG Test Reset (Required external Pull down)
84	<i>DEBUG_SEL</i>	HW Pin for EJTAG chain selection

Table 40: E-JTAG Debug port

These pins are not multiplexed with other interfaces in order to save them for debug purposes. The debug port can be directed in direct line to the modem debug chain or MCU. The default direction is set according to the external pin state (DEBUG_SEL). The DEBUG_SEL has an internal Pull Down by default.



Adrastea-I has an internal PD for EJ_TRST, as it is a very sensitive line (in case it will toggle high the processor will enter debug mode), we suggest not keeping it unconnected but to connect it to an external 10K ohm PD. Other E-JTAG pins can be kept NC.

4.8 GPIO Pin Information

Pin Number	Designation	Description
56	<i>ADC1/GPIO2</i>	Auxiliary Analog to Digital Converter Input /Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
59	<i>ADC0/GPIO1</i>	Auxiliary Analog to Digital Converter Input /Programmable GPIO Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
66	<i>RESERVED</i>	Reserved /Programmable GPIO49 Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
68	<i>RESERVED</i>	Reserved /Programmable GPIO46 Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
71	<i>RESERVED</i>	Reserved /Programmable GPIO48 Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull

73	<i>RESERVED</i>	Reserved /Programmable GPIO47 Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
74	<i>SPIM1_MISO/GPIO39</i>	MCU_SPIM1_MISO/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
76	<i>SPIM1_CLK/GPIO41</i>	MCU_SPIM1_CLK/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
81	<i>SPIM1_EN/GPIO40</i>	MCU SPI Enable/Programmable GPIO Default pull resistor at power up and after DH0: Pull Up DH2 state: SW configurable DH1 state: No pull DH0 state: No pull
83	<i>SPIM1_MOSI/GPIO38</i>	MCU_SPIM1_MOSI/Programmable GPIO Default pull resistor at power up and after DH0: Pull Down DH2 state: SW configurable DH1 state: No pull DH0 state: No pull

Table 41: GPIO Pin Information



These GPIO pins are available when using a customized MCU firmware. These are not implemented within the Adrastea-I default MCU firmware.



1. SW can configure these pins in different state for DH2.
2. There is ESD protector in ALT1250. During DH0/DH1, it should not have any PU externally to avoid current leakage.

5 Functional description

The Adrastea-I LTE-M / NB-IoT module is intended to be used as a radio sub-system in order to provide LTE-M / NB-IoT communication capabilities to the system.

The Adrastea-I modem firmware is 3GPP Release 13 compliant, which is upgradable to Release-14.

The UART-0 acts as the primary interface between the module and a host micro-controller. The module can be controlled and operated using a set of AT-commands over UART-0.

Adrastea-I is a high-performance, multi-band dual mode LTE-M / NB-IoT module with ultra-low power consumption.

Embedded GNSS allows location applications to track positioning.

5.1 Adrastea-I State Transition

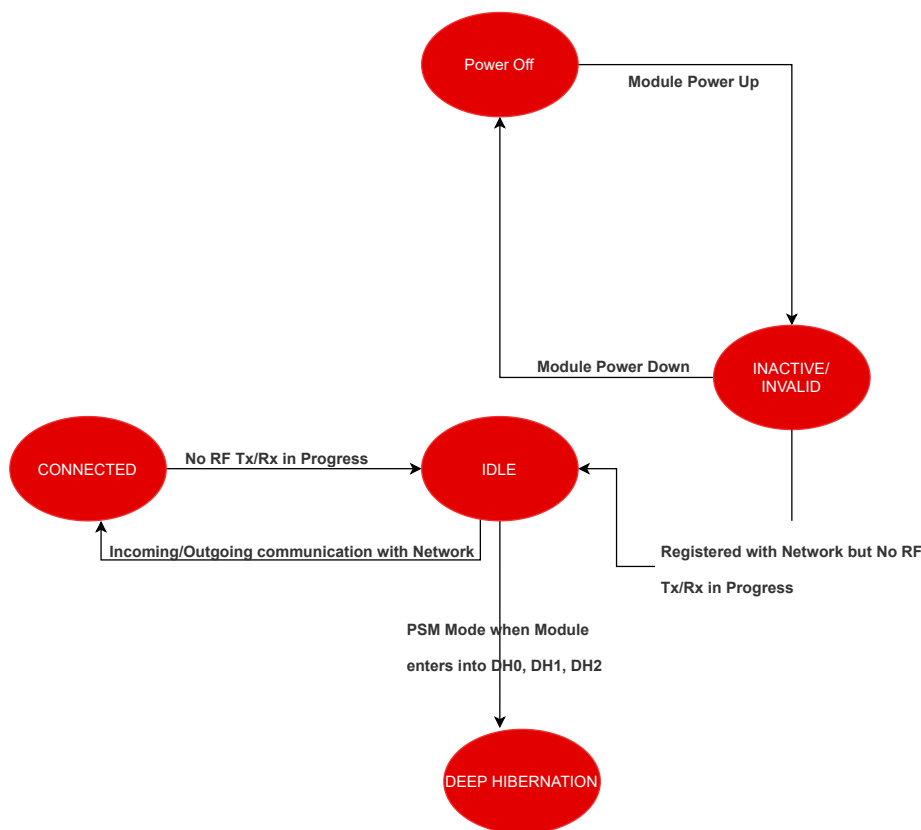


Figure 12: Adrastea-I State Transition

5.2 Power Saving Features

To enhance the battery life of cellular IoT devices, 3GPP has introduced two key technologies: Extended Discontinuous Reception (eDRX) and Power Saving Mode (PSM). These technologies allow devices to enter into low-power states when not actively transmitting data, significantly reducing power consumption.

5.3 Network Operator Support

For the Adrastea-I module to operate correctly in eDRX and PSM modes, these features must be enabled by the network operator. However, eDRX and PSM configurations can vary between operators, and some may not support these features. This variability can impact the power-saving capabilities of the Adrastea-I.

5.4 Network Independent Adrastea-I Power Saving Modes

To ensure optimal power savings regardless of network operator support, it is recommended to use the Adrastea-I module's power-saving modes independently. This can be achieved by disabling the LTE RF of the device using the AT+CFUN=0 command. This approach allows you to benefit from power-saving features of the module independent of network.

This section summarizes the various low power operating modes of the Adrastea-I module.



The Adrastea-I selects the described power modes according to the the maximum allowed chip power mode configuration. The currently configured power mode can be checked with AT command:
`at%getacfg="pm.conf.max_allowed_pm_mode"`

5.4.1 DH0 Mode

DH0 mode provides long entry and recovery times and is mainly used for very long inactivity intervals like power saving mode. In this mode all digital logic is powered down, memories are not retained, I/O are not stored.

This is the lowest power mode of the system.

One of the following dedicated actions is used to wake up from this mode:

- WAKEUP (Wakeup active high).
- Module reset (/RESET - Reset active low).
- Module power down.



In this mode VDDIO is turned off, therefore it is not allowed to provide external voltage to IOs that are not defined as a wake up source in the list above.



When Adrastea-I enters the DH0 state, it writes data to the flash memory. To prevent flash wear out, ALT1250 chip has implemented a flash wear out protection feature. This feature prevents the module from entering DH0 mode if less than 30 minutes have passed since the last DH0 mode or if less than 30 minutes of DH0 sleep is expected. In such cases, the module will enter into DH1 state instead of DH0.

5.4.2 DH1 Mode

All digital logic is powered down, a configurable amount of retention memory is retained (64KB granularity), IOs are not stored.

One of the following dedicated actions is used to wake up from this mode:

- WAKEUP (Wakeup active high).
- Module reset (/RESET - Reset active low).
- Module power down.

A Wakeup event initiates a boot flow. This mode is similar to DH2; however, lower power consumption due to I/O logic unretained.



In this mode VDDIO is turned off, therefore it is not allowed to provide external voltage to IOs that are not defined as a wake up source in the list above.

5.4.3 DH2 Mode

Achieve the lowest power consumption while retaining the content of SRAM and registers. All digital logic is powered down.

One of the following dedicated pins is used to wake up from this mode:

- WAKEUP (Wakeup active high).
- Module reset (/RESET - Reset active low).
- Module power down.

Wakeup event initiates a boot flow. This mode is similar to DH1; however, it also enables output IOs to latch and wakeup from digital inputs.



Adrastea-I is set by default in DH2 state.

5.4.4 DH0 Mode Setting

1. Check whether the DH0 state is configured

```
at%getacfg="pm.conf.max_allowed_pm_mode"  
dh0
```

OK

2. If the DH0 state is not already configured, configure the module to DH0 state with below AT command.

```
AT+CFUN=0
```

OK

```
at%setacfg="pm.conf.max_allowed_pm_mode","dh0"
```

OK

3. Reset the Adrastea-I.

```
ATZ
```

OK

4. Turn off the RF with the below AT command. This approach allows you to benefit from power-saving feature of the module independent of network.

```
AT+CFUN=0
```

OK

5. Enter "CTRL+D" to close the CLI.

```
CTRL+D
```

```
MAP CLI Closed
```



To execute below commands default MCU firmware "PowerManager" shall be present in MCU.

6. The "pwrMode shutdown" command is used to configure MCU in shutdown state.

```
>>pwrMode shutdown
```

```
Configured to Shutdown mode, duration 0ms
```

7. The "sleepSet enable" command is used to enable MCU shutdown state.

```
>>>sleepSet enable
```

```
Configured to Shutdown mode, duration 0ms
```



After following the above steps, the Adrastea-I module will now be in DH0 state and the MCU is shutdown.



When Adrastea-I enters the DH0 state, it writes data to the flash memory. To prevent flash wear out, ALT1250 chip has implemented a flash wear out protection feature. This feature prevents the module from entering DH0 mode if less than 30 minutes have passed since the last DH0 mode or if less than 30 minutes of DH0 sleep is expected. In such cases, the module will enter into DH1 state instead of DH0.

5.4.5 DH1 Mode Setting

1. Check whether the DH1 state is configured

```
at%getacfg="pm.conf.max_allowed_pm_mode"  
dh1
```

OK

2. If the DH1 state is not already configured, configure the module to DH1 state with below AT command.

```
AT+CFUN=0
```

OK

```
at%setacfg="pm.conf.max_allowed_pm_mode","dh1"
```

OK

3. Reset the Adrastea-I.

```
ATZ
```

OK

4. Turn off the RF with the below AT command. This approach allows you to benefit from power-saving feature of the module independent of network.

```
AT+CFUN=0
```

OK

5. Enter "CTRL+D" to close the CLI.

```
CTRL+D
```

MAP CLI Closed



To execute below commands default MCU firmware "PowerManager" shall be present in MCU.

6. The "pwrMode shutdown" command is used to configure MCU in shutdown state.

```
>>pwrMode shutdown
```

```
Configured to Shutdown mode, duration 0ms
```

7. The "sleepSet enable" command is used to enable MCU shutdown state.

```
>>sleepSet enable
```

```
Configured to Shutdown mode, duration 0ms
```



After following the above steps, the Adrastea-I module will now be in DH1 state and the MCU is shutdown.

5.4.6 DH2 Mode Setting

1. Check whether the DH2 state is configured

```
at%getacfg="pm.conf.max_allowed_pm_mode"  
dh2
```

```
OK
```

2. If the DH2 state is not already configured, configure the module to DH2 state with the below AT command.

```
AT+CFUN=0
```

```
OK
```

```
at%setacfg="pm.conf.max_allowed_pm_mode","dh2"
```

```
OK
```

3. Reset the Adrastea-I.

```
ATZ
```

```
OK
```

4. Turn off the RF with the below AT command. This approach allows you to benefit from power-saving feature of the module independent of network.

```
AT+CFUN=0
```

```
OK
```

5. Enter "CTRL+D" to close the CLI.

```
CTRL+D
```

```
MAP CLI Closed
```



To execute below commands default MCU firmware "PowerManager" shall be present in MCU.

6. The "pwrMode shutdown" command is used to configure the MCU in shutdown state.

```
>>pwrMode shutdown
```

```
Configured to Shutdown mode, duration 0ms
```

7. The "sleepSet enable" command is used to enable the MCU shutdown state.

```
>>sleepSet enable
```

```
Configured to Shutdown mode, duration 0ms
```



After following the above steps, the Adrastea-I module will be in DH2 state and the MCU is shutdown.

5.5 GNSS Receiver

Adrastea-I supports GPS and GLONASS satellite systems using dedicated hardware accelerators in a power and cost efficient manner. The GNSS receiver shares certain hardware resources with the modem. This enables GNSS measurement slots to be efficiently scheduled based on the modem link state. The device key target is to allow GNSS positioning for asset management applications where infrequent position updates are required. External LTE and GNSS antennas are required.

5.5.1 Supported GNSS constellations

Adrastea-I supports the following constellation combinations:

- GPS
- GLONASS

5.5.2 GNSS Co-existence with LTE Modem

The Adrastea-I GNSS shares the RF Rx path with the LTE modem and, therefore, cannot operate in parallel with LTE data transfer. Hence this GNSS is not suitable for products that inherently require this co-existence, LTE connection and GNSS tracking.



GNSS cannot co-exist with LTE data transfer. LTE communication has higher priority over GNSS and, therefore, GNSS is automatically shut down once LTE is active (if it was active). While LTE is active, GNSS cannot be activated and all GNSS AT commands are responded with error.

5.6 Application MCU

Effective January 1, 2026, Sony will discontinue support for Open MCU for all new designs based on the ALT1250 chipset. As a result, using the integrated Arm Cortex M4 MCU of Adrastea-I for new application development is not recommended. However, using Adrastea-I as a modem is not affected by this announcement.

6 Quick start guide

It is recommended to use the Adrastea-I EV-Kit and Adrastea Commander tool for putting the LTE-M / NB-IoT module into operation. The EV-Kit has external GNSS and LTE antennas. Refer to the [2] for detailed information.

6.1 Minimal pin connections

The following image shows the steps to be performed to integrate the Adrastea-I into a custom end device.

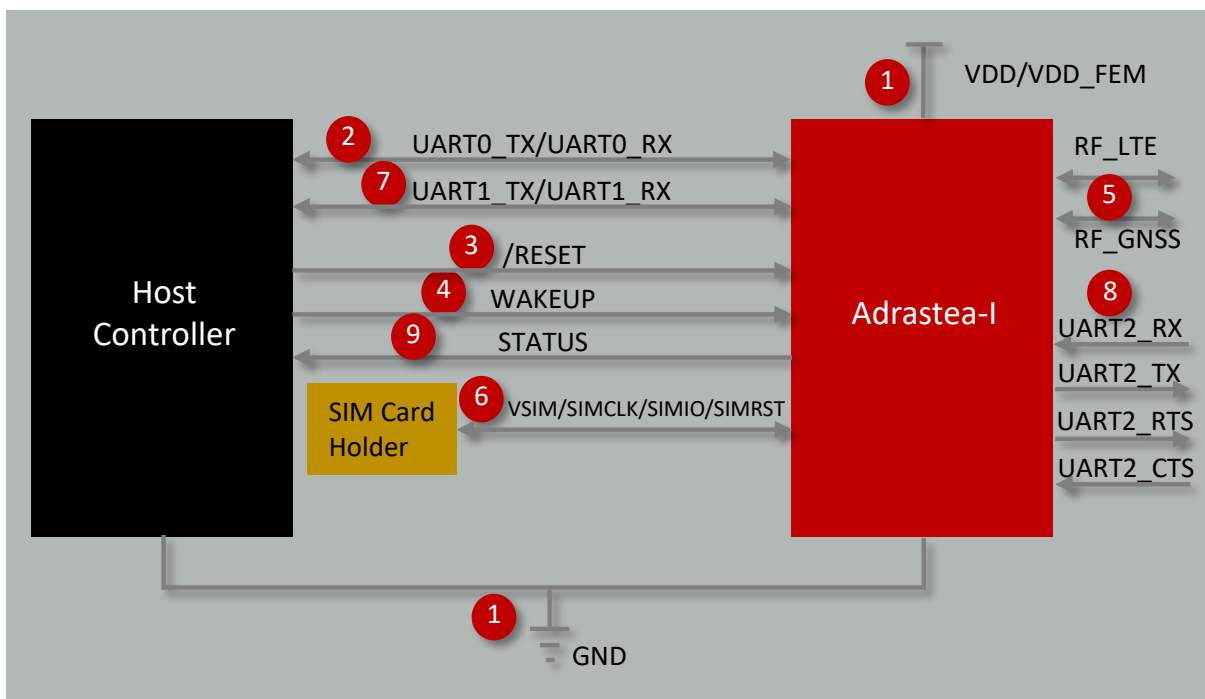


Figure 13: Minimal pin connections

1. Supply voltage and ground

Connect the *VDD*, *VDD_FEM* and *GND* pins to supply the radio module with power.



Note the minimum voltage acceptance difference between *VDD* and *VDD_FEM*.

2. MCU UART0 serial interface to the host

Connect the UART pins *UART0_RX* and *UART0_TX* to the host to control the module via host controller.

3. Reset

Connect the */RESET* pin to the host to allow a hard reset of the module.

4. Wakeup
Connect the *WAKEUP* pin to the host to allow the waking-up function of the module.
5. Antenna connection
Connect the *RF_LTE* pin to an external LTE antenna. Connect the *RF_GNSS* pin to an external GNSS antenna.
6. SIM card connection
Connect the followings pins to a proper SIM card holder to allow network connection: *VSIM*, *SIMCLK*, *SIMIO* and *SIMRST*.
7. (Optional) MCU UART1 serial interface for modem logs
Connect the UART pins *UART1_RX* and *UART1_TX* to obtain modem logs.
8. (Optional) MCU UART2 serial interface for firmware update
Connect the UART pins *UART2_RX*, *UART2_TX*, *UART2_CTS* and *UART2_RTS* to execute firmware updates.
9. (Optional) Status indication
Connect the *STATUS* pin to the host controller to allow easy indication of the status.



The logic level of the module is based on 1.8 V. A 3.3 V. Logic level shall not be connected directly to the digital interfaces of the module

If the module has to be connected to a PC, a converter (TTL to RS-232 or TTL to USB) has to be used. See chapter *Pinout* for details on all pins. Refer to the Adrastea-I EV-Board schemes for a *Reference design*.

6.2 Prerequisites

1. Adrastea-I EV-Kit.
2. Computer with a serial terminal emulator. The use of Würth Elektronik eiSos's Adrastea Commander is recommended ([1]).
3. Install on your PC the corresponding FTDI driver package. Click on link 1 (FTDI drivers) in the "Adrastea Commander" tool or download direct from <https://www.ftdichip.com/Drivers/VCP.htm>.
4. A valid NB-IoT and LTE-M enabled nano SIM card.



The Adrastea-I EV-Board comes with a nano SIM card holder. Therefore, we recommend using a nano SIM card in this step. When designing a custom application board, users may choose to implement a SIM card holder of any size (nano, micro, or standard) according to their specific design requirements that meet SIM card interface as described in *SIM Interface*

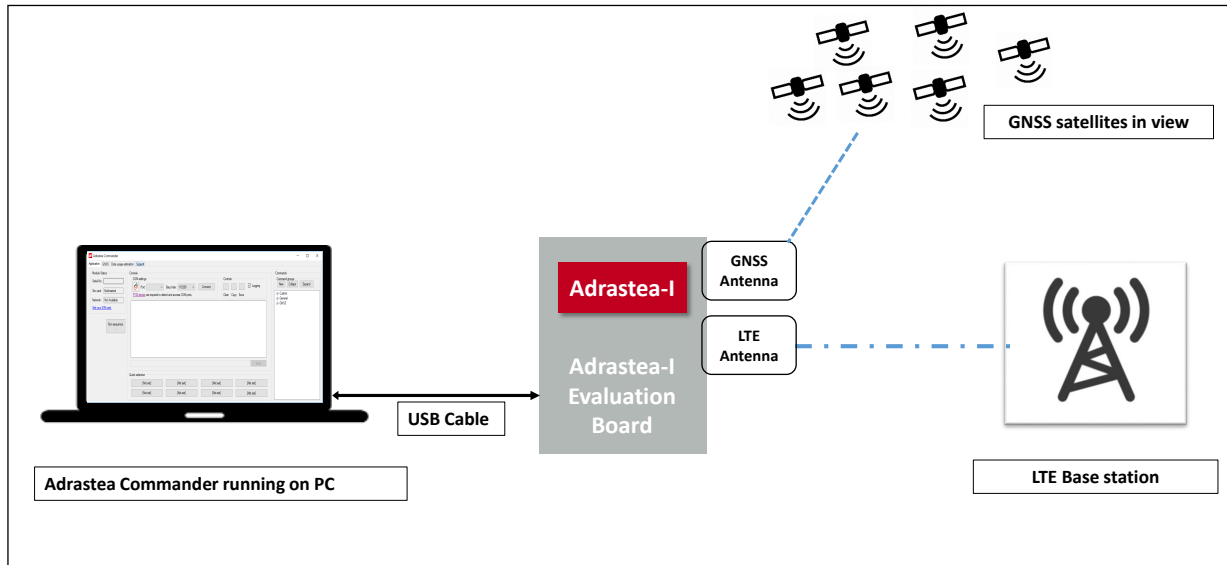


Figure 14: Adrastea Commander

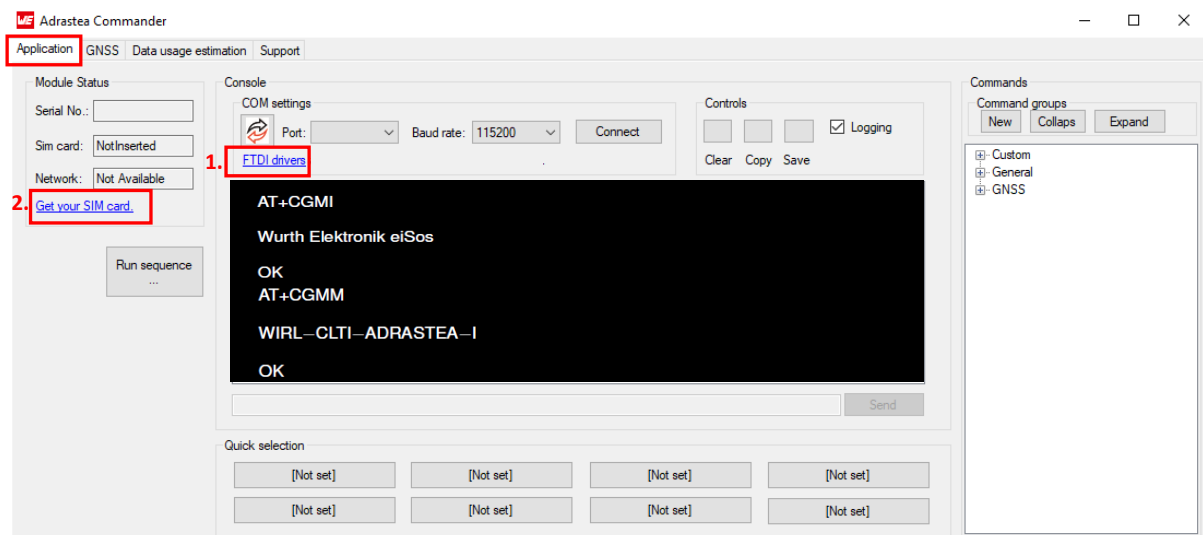


Figure 15: Adrastea Commander

6.3 Taking into operation

1. Insert a valid NB-IoT and LTE-M enabled nano SIM card.
2. Connect LTE and GNSS external antennas provided with the EV-Kit.
3. Connect the power jack or external power supply to the EV-Board and verify that the VDD is stable and able to reliably supply the module's static and peak current consumption, as specified in the data sheet and user manual.
4. Connect the EV-Board to the PC using a USB-cable. Four COM ports should be detected and installed on your PC. Check the device manager to acquire the COM port names of the EV-Board. A typical name is "COMxy" in Windows systems or /dev/ttyUSB0 in Linux systems.



Note that usually the four COM ports are assigned in ascending order, as shown in figure 16. However, the exact sequence may vary depending on your operating system.

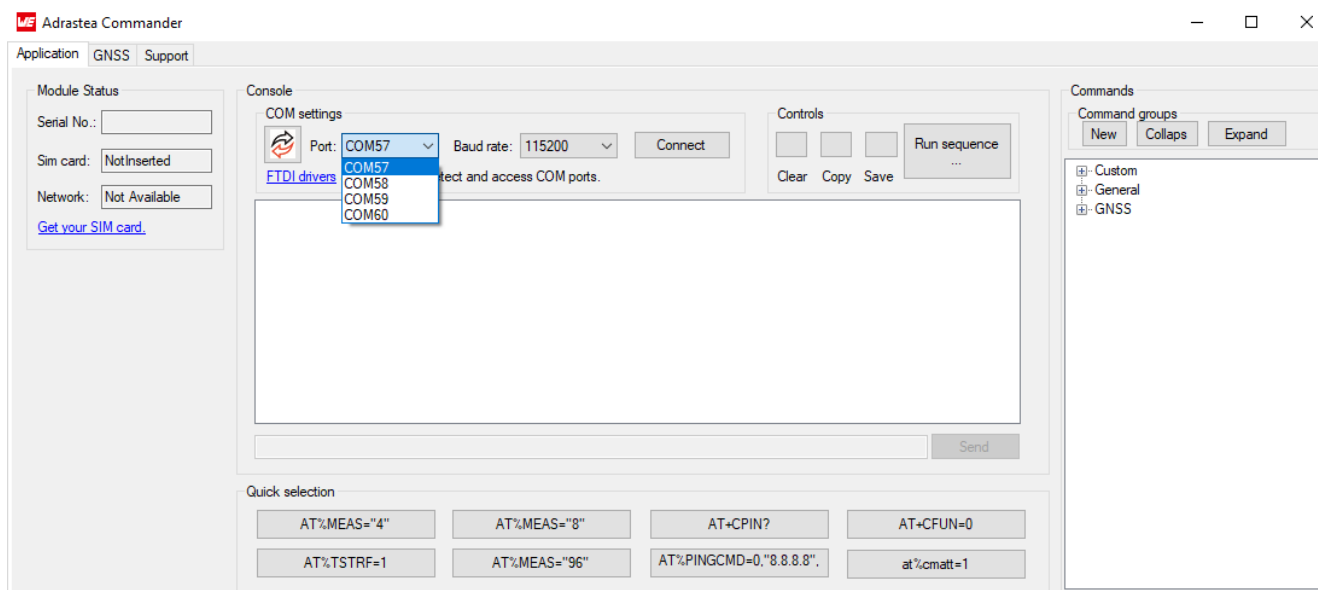


Figure 16: COM ports detected - Adrastea commander



To interact with the module, it is advised to use the Adrastea Commander tool. Otherwise, a terminal program (like "PuTTY" or "Tera Term" for Windows) has to be run and the corresponding COM port has to be opened using the default settings of the mounted Adrastea-I module.

5. Press the reset button on the EV-Board to ensure a clean start-up of the module. See figure 17.
6. Type and enter the "map" command, this command is required before sending AT commands to modem.

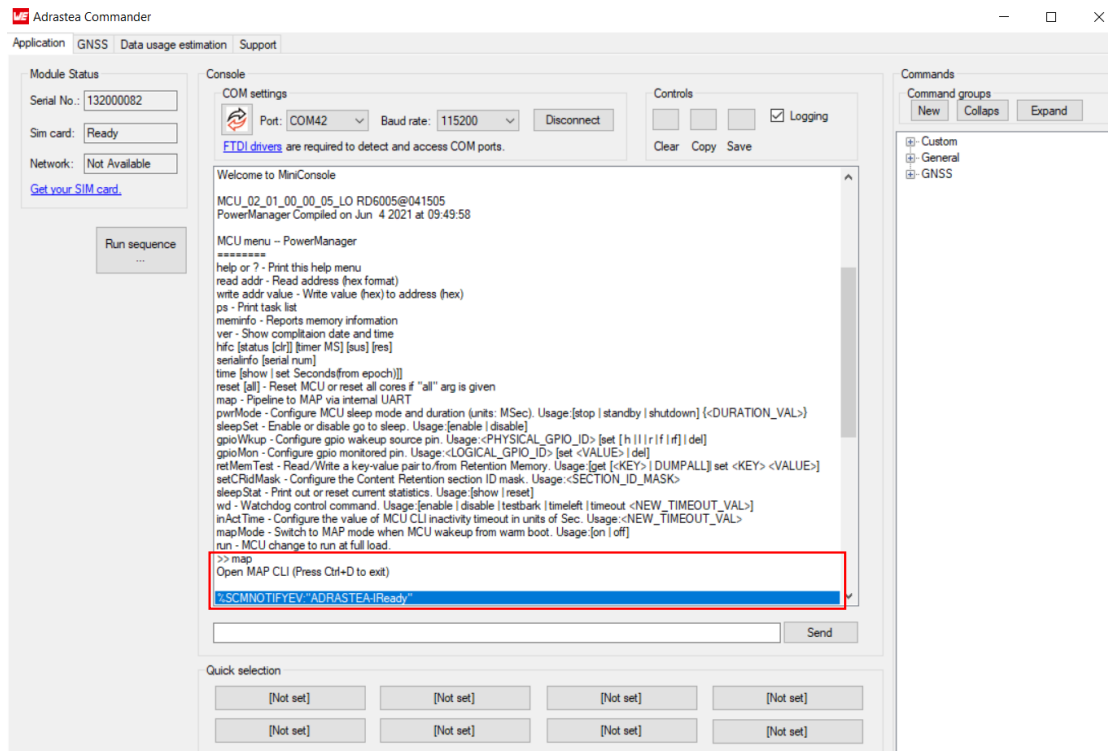


Figure 17: MiniConsole start view - Adrastea Commander



The "map" command is required before sending AT commands to modem.



When the AT Command UART port is opened, the Adrastea-I output console displays: %SCMNOTIFYEV:"ADRASTEAIReady".

7. Check if the SIM card is detected. Send command MAP follow by the command AT+CPIN?. See figure 18.

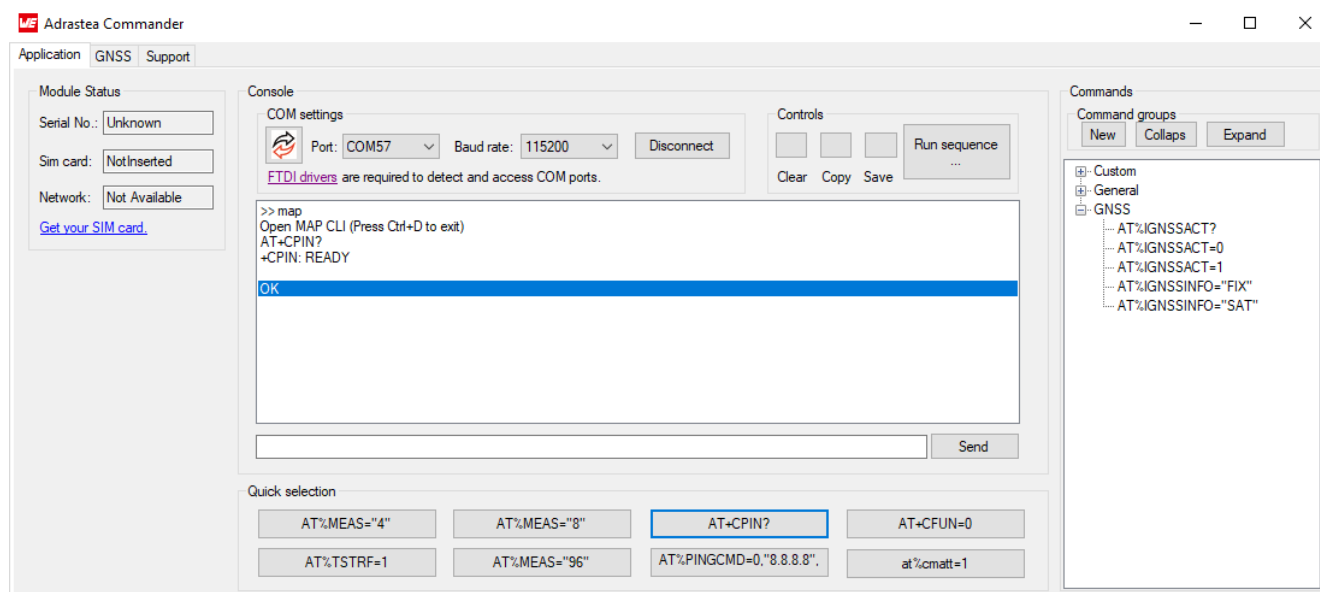


Figure 18: SIM card detected - Adrastea Commander

6.4 Select LTE-M or NB-IoT Mode

Adrastea-I can be operated through one of the two available cellular communication technologies:

- LTE-Cat.M or
- LTE-Cat.NB-IoT.

Two different configurations can be applied for selection of LTE-Cat.M or LTE-Cat.NB-IoT mode.

- Manual selection of LTE-M or NB-IoT mode or
- Automatic selection of LTE-M or LTE-NB-IoT mode

6.4.1 Manual selection of LTE-M or NB-IoT mode

Adrastea-I supports AT commands for manual selection of LTE-M and NB-IoT. AT Command AT%RATACT is used for manual selection of the LTE-M or NB-IoT mode.



Note: The default mode for the Adrastea-I module is LTE-M single mode.



Any attempt to switch to the mode already in use will be ignored and OK will be returned.

1. Select relevant RAT:

The following AT command will change the module mode to NB-IoT.

```
AT%RATACT="NBIOT",1  
OK
```

The following AT command can be used to verify that NB-IoT has been selected.

```
AT%RATACT?  
%RATACT: "NBIOT",1,0  
OK
```

The following AT command will change the module mode to LTE-M.

```
AT%RATACT="CATM",1  
OK
```

The following AT command can be used to verify that LTE-M has been selected.

```
AT%RATACT?  
%RATACT: "CATM",1,0  
OK
```

2. Reset the device:

The following AT command is used to reset the device.

```
ATZ  
  
OK
```

6.4.2 Automatic Selection of LTE-M or NB-IoT Mode

The automatic selection is used to switch between the LTE-M and NB-IoT when no coverage in the current RAT is detected. RAT switch related configurations are included in the radiom configuration file inside the ALT1250 chipset.

Default configurations of Adrastea-I are as below:

```
at%getacfg=radiom.config.multi_rat_enable  
true  
OK
```



```
at%getacfg=radiom.config.preferred_rat_list  
none  
OK
```

```
at%getacfg=radiom.config.auto_preference_mode  
none  
OK
```

Configure Adrastea-I as below for automatic selection of LTE-M or NB-IoT mode:

1. Disable LTE radio:

```
AT+CFUN=0  
  
OK
```

2. Enable multi-technologies:

```
at%setacfg="radiom.config.multi_rat_enable","true"
```

OK

3. Set technology priority order for automatic selection. The below command sets the first priority for NB-IoT and the second priority for LTE-M:

```
at%setacfg="radiom.config.preferred_rat_list","NBIOT;CATM"
```

OK



Note: In case of the above configuration, Adrastea-I will scan all the frequencies in the NB-IoT technology first. If Adrastea-I does not find coverage in NB-IoT, it will scan all the frequencies in the LTE-M technology. Because of this frequency scanning process, power consumption in automatic selection process is higher than in manual selection process.

4. The Adrastea-I applies automatic technology switch at the switch-on and in the out-of coverage case:

```
at%setacfg="radiom.config.auto_preference_mode","light"
```

OK

5. Restart the Adrastea-I:

```
ATZ
```

OK



To set default factory configurations follow below commands:

```
at\%setacfg="radiom.config.multi_rat_enable",true
```

OK

```
at\%setacfg="radiom.config.preferred_rat_list","none"
```

OK

```
at\%setacfg="radiom.config.auto_preference_mode","none"
```

```
OK
```

6.5 Register to Network



The configurations "Select LTE-M or NB-IoT Mode" (see Chapter 6.4) should be done before registering to the LTE network.



A valid LTE-M / NB-IoT SIM card should be inserted. Check SIM status with AT+CPIN? AT Command.

The registration process in LTE-M and NB-IoT technologies could take some minutes to complete. This happens especially in case of the very first registration: new SIM, new location, new module. This is because of scanning of available frequencies and selection of a suitable frequency.

1. Check SIM status:

The following command is used to read the SIM status.

```
AT+CPIN?
```

```
+CPIN: READY  
OK
```

2. To start the registration procedure:

The following command will trigger the registration procedure with the network.

```
AT%CMATT=1
```

```
OK
```

3. Enable network registration unsolicited result code:

The following command will enable network registration and location information unsolicited result code.

```
AT+CEREG=2
```

```
OK
```

4. Read the network registration status:

The following command will read the network registration status.

```
AT+CEREG?  
+CEREG: 2,5,"CB48","01CD6007",9  
OK
```

5. Check the internet connection is active, ping google server with IP address 8.8.8.8:



Google server will be reachable only when global APN is configured

```
AT%PINGCMD=0,"8.8.8.8"  
%PINGCMD:1,"8.8.8.8",1042,58
```

```
OK
```

The following command will trigger the de-registration procedure with the network.

```
AT%CMATT=0
```

```
OK
```

6.6 Activate GNSS

This section shows how to enable the GNSS feature of the Adrastea-I module.



GNSS cannot co-exist with LTE data transfer. LTE communication has higher priority over GNSS and, therefore, GNSS is automatically shut down once LTE is active (if it was active). While LTE is active, GNSS cannot be activated and all GNSS AT commands are responded with error.

1. Disable LTE prior to activating GNSS:

The following command will disable LTE radio.

```
AT+CFUN=0
```

```
OK
```

2. Allow unsolicited notifications:

```
AT%IGNSSEV="SESSIONSTAT",1
```

```
OK
```

3. Enable NMEA sentences (This command is required only when messages are required in GNSS tab of Adrastea Commander tool):

```
AT%IGNSSCFG="SET","NMEA","GGA","GSA","GSV","GNS","RMC"
```

```
OK
```

4. Start GNSS:



For first time GNSS fix, cold start should be triggered to start GNSS.

The following command is used for cold GNSS start.

```
AT%IGNSSACT=1,1
```

```
OK
```

The following command is used for hot GNSS Start.

```
AT%IGNSSACT=1,2
```

```
OK
```

5. Get available satellites:



It is necessary to check that there are at least 4 satellites available with an SNR>25.

```
AT%IGNSSINFO="SAT"  
%IGNSSINFO: 11  
%IGNSSINFO:03,36,294,49  
%IGNSSINFO:06,53,263,50  
%IGNSSINFO:14,42,180,50  
%IGNSSINFO:15,13,042,50  
%IGNSSINFO:16,08,251,50  
%IGNSSINFO:18,56,044,50  
%IGNSSINFO:19,25,314,50  
%IGNSSINFO:21,46,104,51  
%IGNSSINFO:22,71,306,49  
%IGNSSINFO:24,14,080,49  
%IGNSSINFO:27,51,282,50
```

6. Get fix:

```
AT%IGNSSINFO="FIX"
```

```
%IGNSSINFO: 2,"11:17:02","04/05/2020","32.195970","34.892572","  
-10.500000",1588580222000,1,"0.000000","B"
```

The following AT command is used to stop GNSS functionality:

```
AT%IGNSSACT=0
```

```
OK
```

7 Design in guide

7.1 Advice for schematic and layout

For users with less RF experience it is advisable to closely copy the relating EV-Board with respect to schematic and layout, as it is a proven design. The layout should be conducted with particular care, because even small deficiencies could affect the radio performance and its range or even the conformity.

The following general advice should be taken into consideration:

- A clean, stable power supply is strongly recommended. Interference, especially oscillation can severely restrain range and conformity.
- Variations in voltage level should be avoided.
- LDOs, properly designed in, usually deliver a proper regulated voltage.
- Blocking capacitors and a ferrite bead in the power supply line can be included to filter and smoothen the supply voltage when necessary.



No fixed values can be recommended, as these depend on the circumstances of the application (main power source, interferences etc.).



The use of an external reset IC should be considered if one of the following points is relevant:



The slew rate of the power supply exceeds the electrical specifications.

The effect of different current consumptions on the voltage level of batteries or voltage regulators should be considered. The module draws higher currents in certain scenarios like start-up or radio transmit which may lead to a voltage drop on the supply. A restart under such circumstances should be prevented by ensuring that the supply voltage does not drop below the minimum specifications.

Voltage levels below the minimum recommended voltage level may lead to malfunction. The /Reset pin of the module shall be held on LOW logic level whenever the VCC is not stable or below the minimum operating Voltage.

Special care must be taken in case of battery powered systems.

- Elements for ESD protection should be placed on all pins that are accessible from the outside and should be placed close to the accessible area. For example, the RF-pin is accessible when using an external antenna and should be protected.
- ESD protection for the antenna connection must be chosen such as to have a minimum effect on the RF signal. For example, a protection diode with low capacitance such as the 8231706A or a 68 nH air-core coil connecting the RF-line to ground give good results.
- Placeholders for optional antenna matching or additional filtering are recommended.
- The antenna path should be kept as short as possible.



Again, no fixed values can be recommended, as they depend on the influencing circumstances of the application (antenna, interferences etc.).

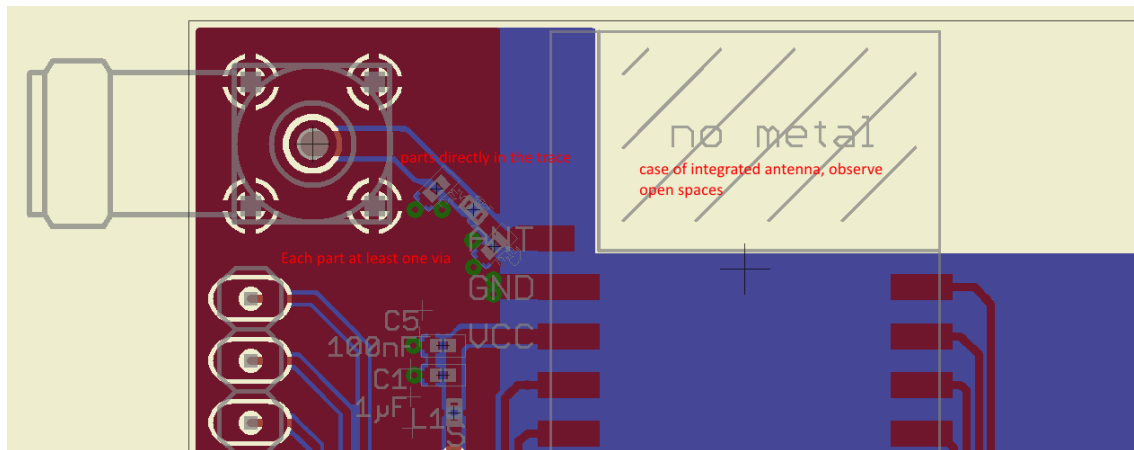


Figure 19: Layout

- To avoid the risk of short circuits and interference there should be only the necessary routing underneath the module on the top layer of the baseboard.
- On the second layer, a ground plane is recommended, to provide good grounding and shielding to any following layers and application environment.
- Filter and blocking capacitors should be placed directly in the tracks without stubs, to achieve the best effect.
- Antenna matching elements should be placed close to the antenna / connector, blocking capacitors close to the module.
- Ground connections for the module and the capacitors should be kept as short as possible and with at least one separate through hole connection to the ground layer.
- ESD protection elements should be placed as close as possible to the exposed areas.

7.2 Dimensioning of the micro strip antenna line

The antenna track has to be designed as a 50 Ω feed line. The width W for a micro strip can

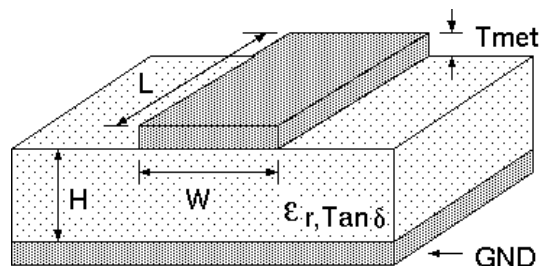


Figure 20: Dimensioning the antenna feed line as micro strip

be calculated using the following equation:

$$W = 1.25 \times \left(\frac{5.98 \times H}{e^{\frac{50 \times \sqrt{\epsilon_r + 1.41}}{87}}} - T_{met} \right) \quad (1)$$

Example:

A FR4 material with $\epsilon_r = 4.3$, a height $H = 1000 \mu\text{m}$ and a copper thickness of $T_{met} = 18 \mu\text{m}$ will lead to a trace width of $W \sim 1.9 \text{ mm}$. To ease the calculation of the micro strip line (or e.g. a coplanar) many calculators can be found in the internet.

- As rule of thumb a distance of about $3 \times W$ should be observed between the micro strip and other traces / ground.
- The micro strip refers to ground, therefore there has to be the ground plane underneath the trace.
- Keep the feeding line as short as possible.

7.3 Antenna solutions

There exist several kinds of antennas, which are optimized for different needs. Chip antennas are optimized for minimal size requirements but at the expense of range, PCB antennas are optimized for minimal costs, and are generally a compromise between size and range. Both usually fit inside a housing.

Range optimization in general is at the expense of space. Antennas that are bigger in size, so that they would probably not fit in a small housing, are usually equipped with a RF connector. A benefit of this connector may be to use it to lead the RF signal through a metal plate (e.g. metal housing, cabinet).

As a rule of thumb a minimum distance of $\lambda / 10$ (which is 3.5 cm @ 868 MHz and 1.2 cm @ 2.44 GHz) from the antenna to any other metal should be kept. Metal placed further away will not directly influence the behavior of the antenna, but will anyway produce shadowing.



Keep the antenna as far as possible from large metal objects to avoid electromagnetic field blocking.



The choice of antenna might have influence on the safety requirements.

In the following chapters, some special types of antenna are described.

7.3.1 Wire antenna

An effective antenna is a $\lambda/4$ radiator with a suiting ground plane. The simplest realization is a piece of wire. Its length is depending on the used radio frequency, so for example 8.6 cm 868.0 MHz and 3.1 cm for 2.440 GHz as frequency. This radiator needs a ground plane at its feeding point. Ideally, it is placed vertically in the middle of the ground plane. As this is often not possible because of space requirements, a suitable compromise is to bend the wire away from the PCB respective to the ground plane. The $\lambda/4$ radiator has approximately 40 Ω input impedance. Therefore, matching is not required.

7.3.2 Chip antenna

There are many chip antennas from various manufacturers. The benefit of a chip antenna is obviously the minimal space required and reasonable costs. However, this is often at the expense of range. For the chip antennas, reference designs should be followed as closely as possible, because only in this constellation can the stated performance be achieved.

7.3.3 PCB antenna

PCB antenna designs can be very different. The special attention can be on the miniaturization or on the performance. The benefits of the PCB antenna are their small / not existing (if PCB space is available) costs, however the evaluation of a PCB antenna holds more risk of failure than the use of a finished antenna. Most PCB antenna designs are a compromise of range and space between chip antennas and connector antennas.

7.3.4 Antennas provided by Würth Elektronik eiSos

Besides the radio modules Würth Elektronik eiSos provides various antennas tailored for the different frequency bands. The recommended single external antennas are shown in the subsequent chapters.



In case integrated multilayer chip antennas are needed because of space limitations, please refer to
<https://www.we-online.com/en/components/products/WE-MCA>.

7.3.4.1 2600130084 - Hati-I - LTE antenna



Figure 21: Hati-I antenna

Specification	Value
Frequency range [MHz]	700 – 2700
Impedance [Ω]	50
VSWR	$\leq 3 / 3.5$
Polarization	Linear
Gain [dBi]	3.3 / 6
Dimensions [mm]	157 x 6 x 21
Connector	SMA male
Operating Temp. [$^{\circ}\text{C}$]	-40 – +85

8 Reference design

Adrastea-I was tested on the EV-Board which serves as reference design.

Further information concerning the use of the EV-Board can be found in the manual of the Adrastea-I EV-Board [2].

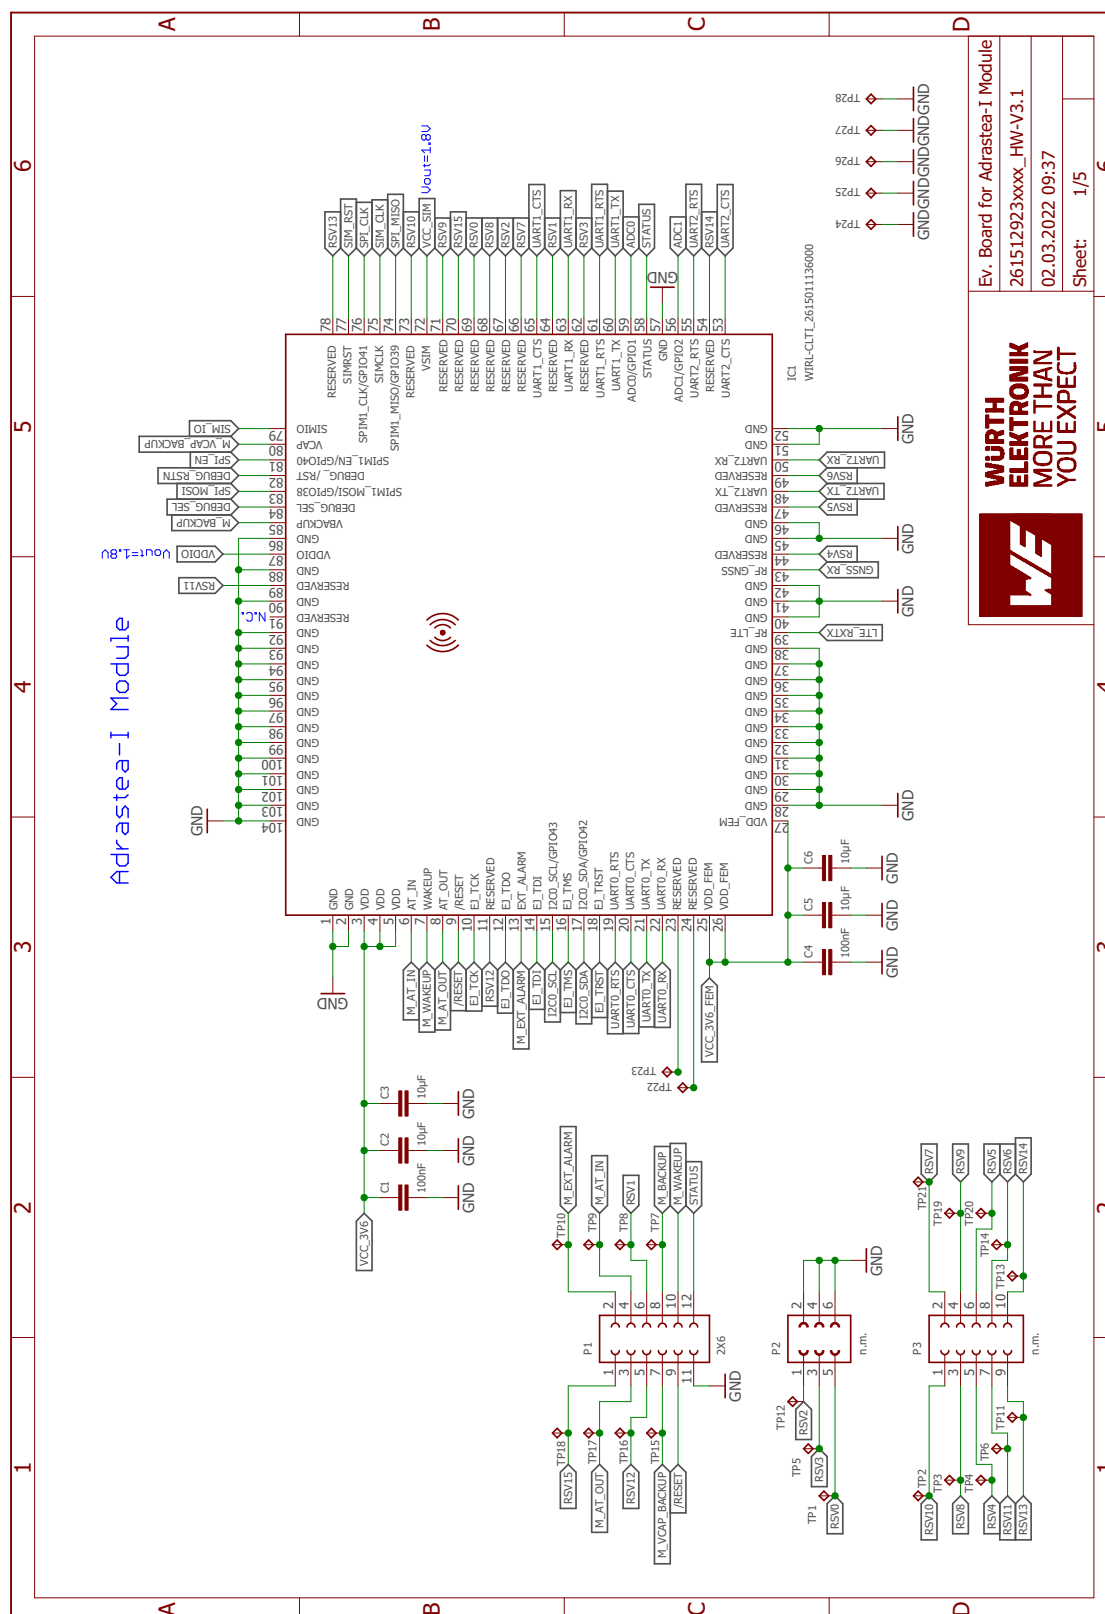


Figure 22: Circuit diagram 1

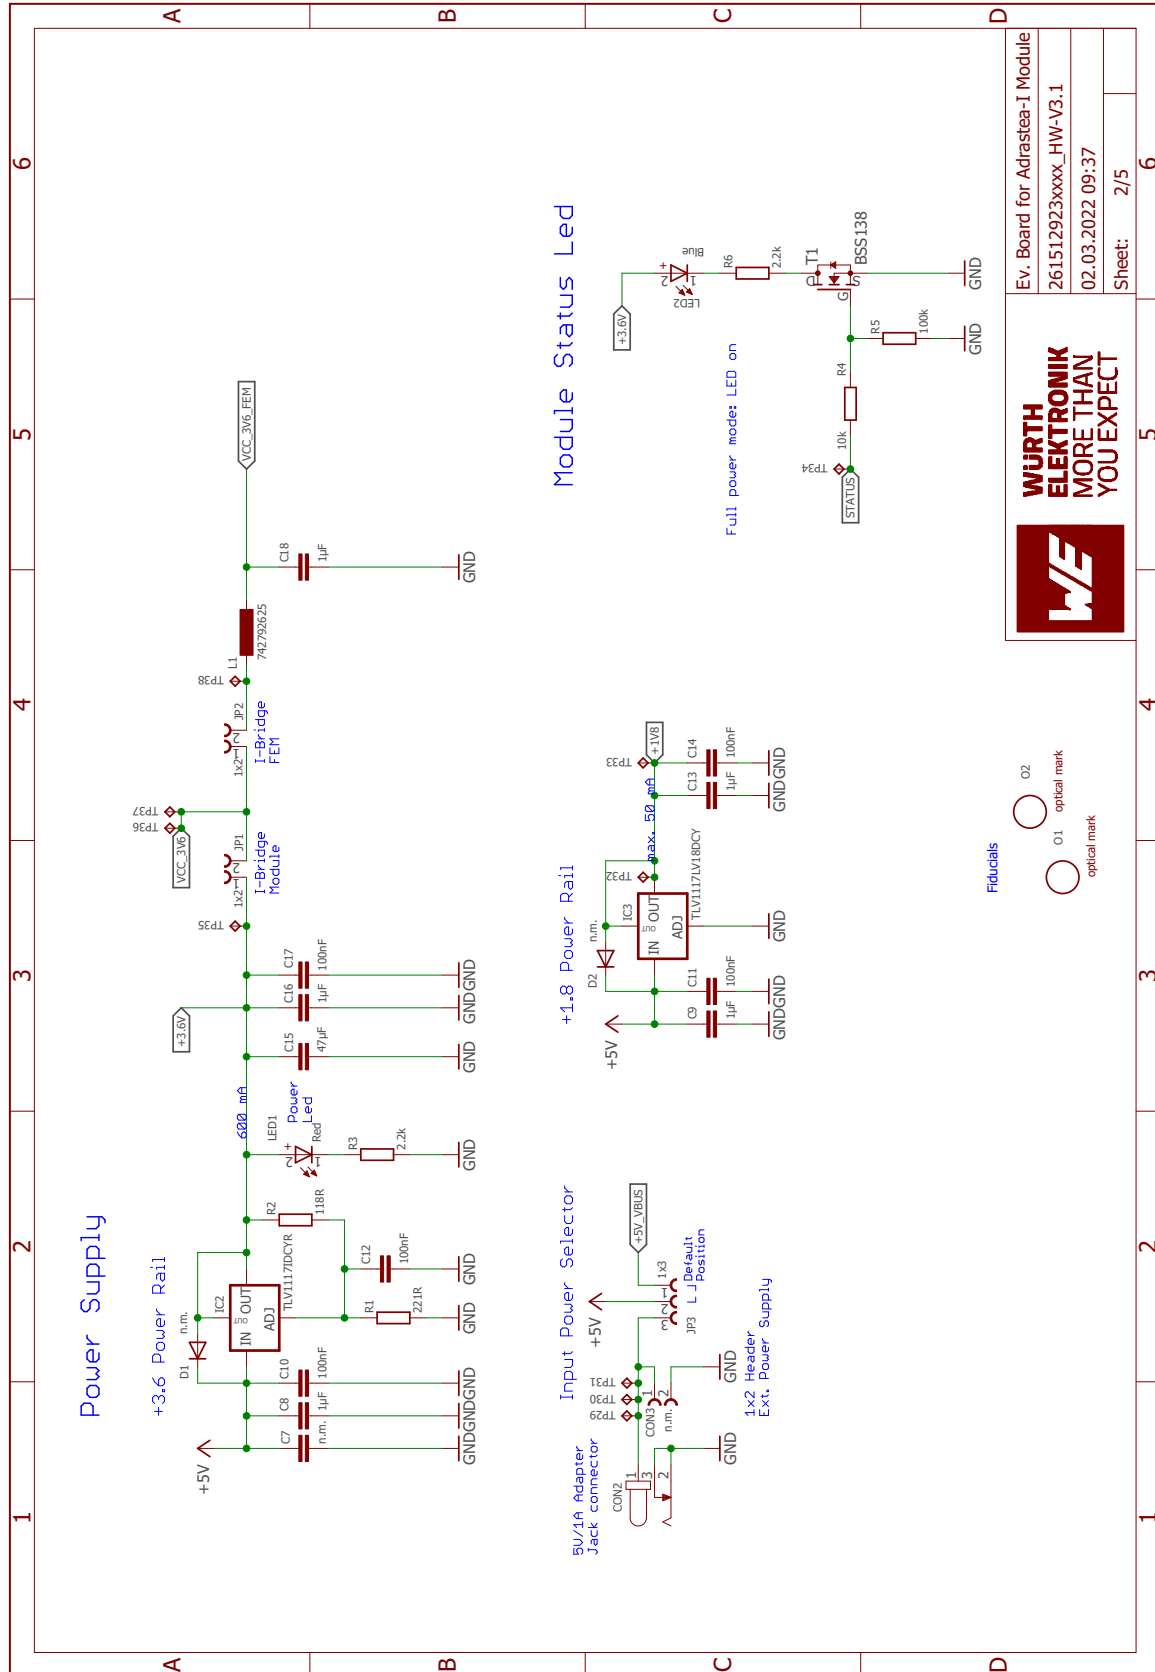


Figure 23: Circuit diagram 2



Figure 24: Circuit diagram 3

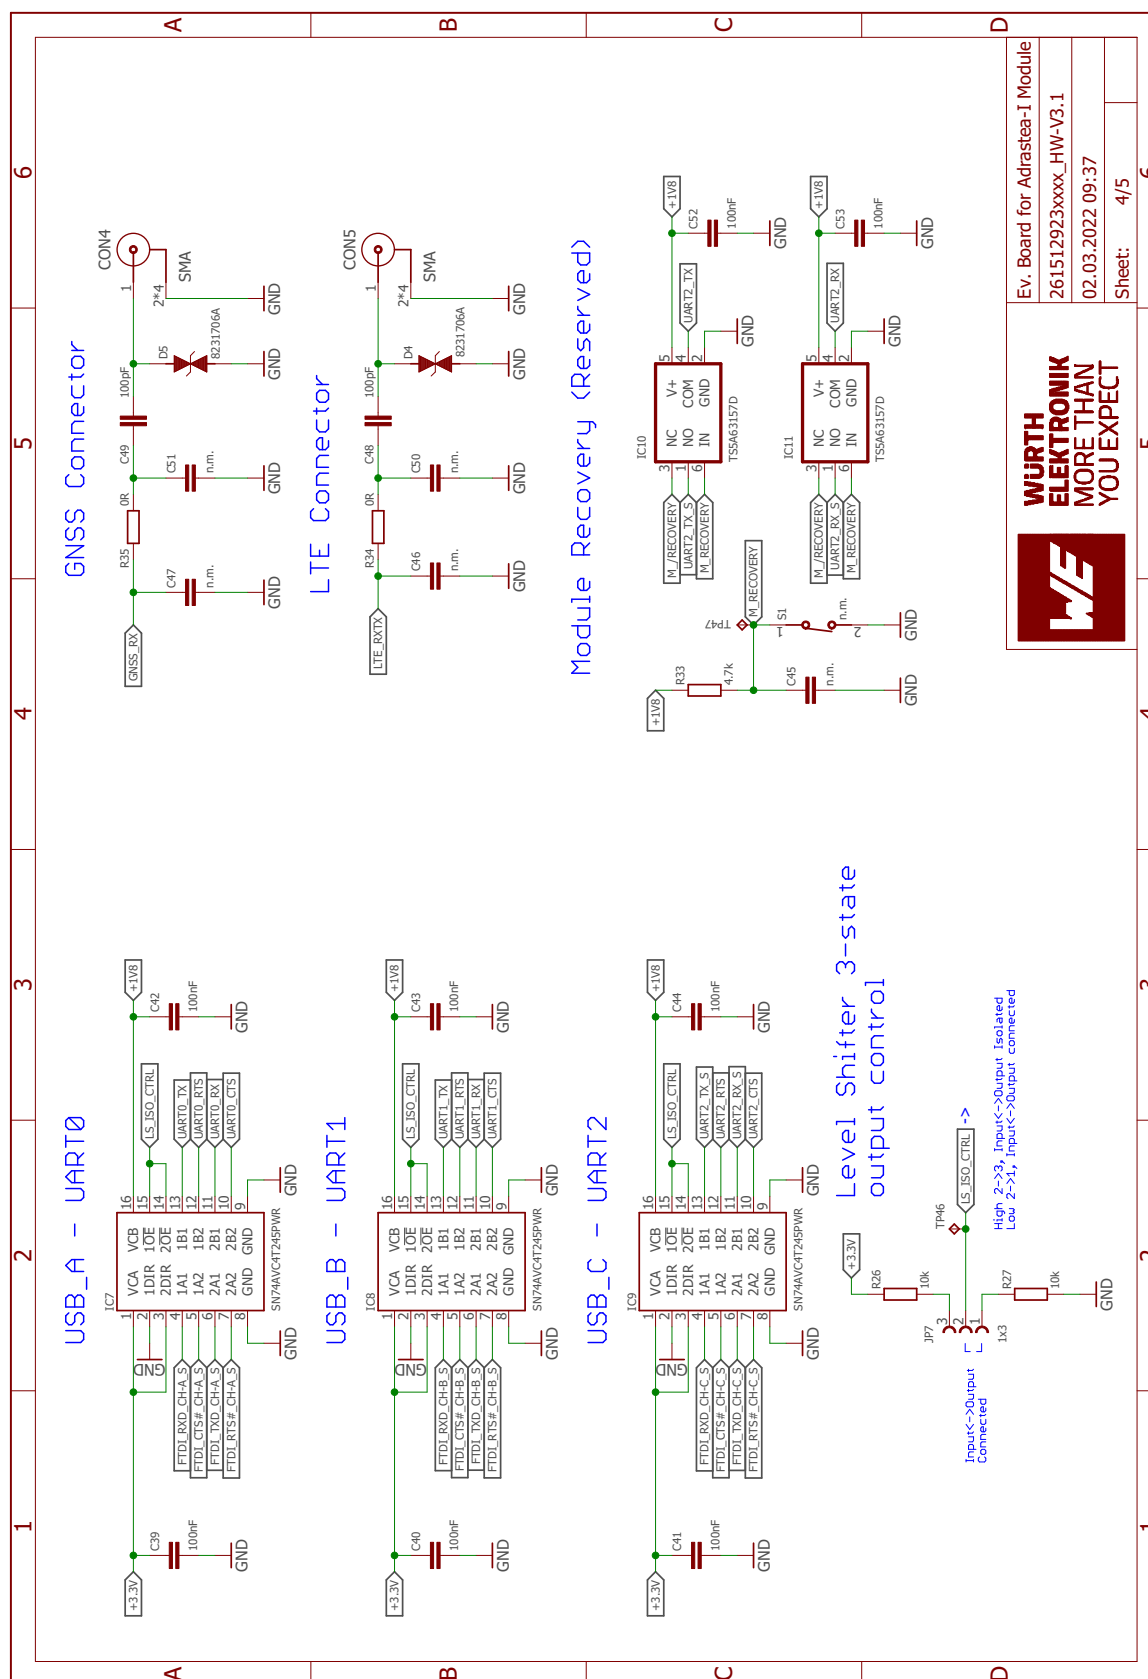


Figure 25: Circuit diagram 4

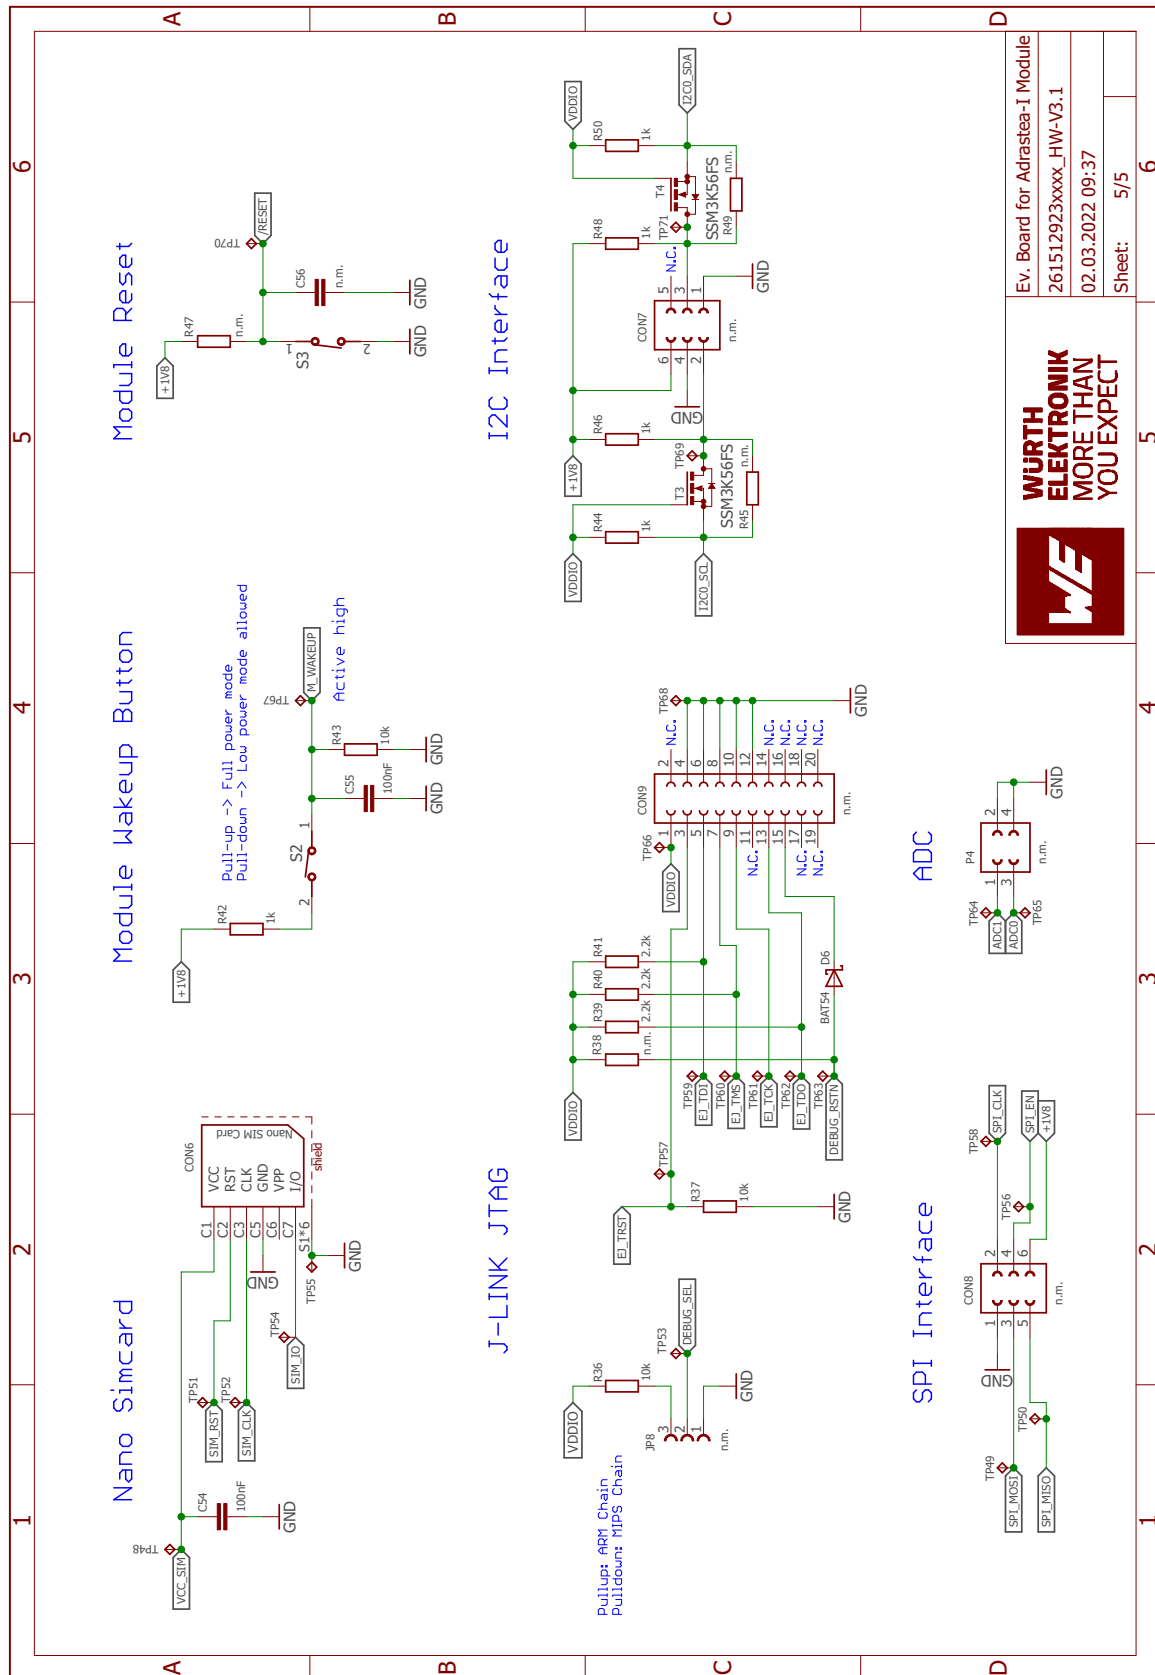


Figure 26: Circuit diagram 5



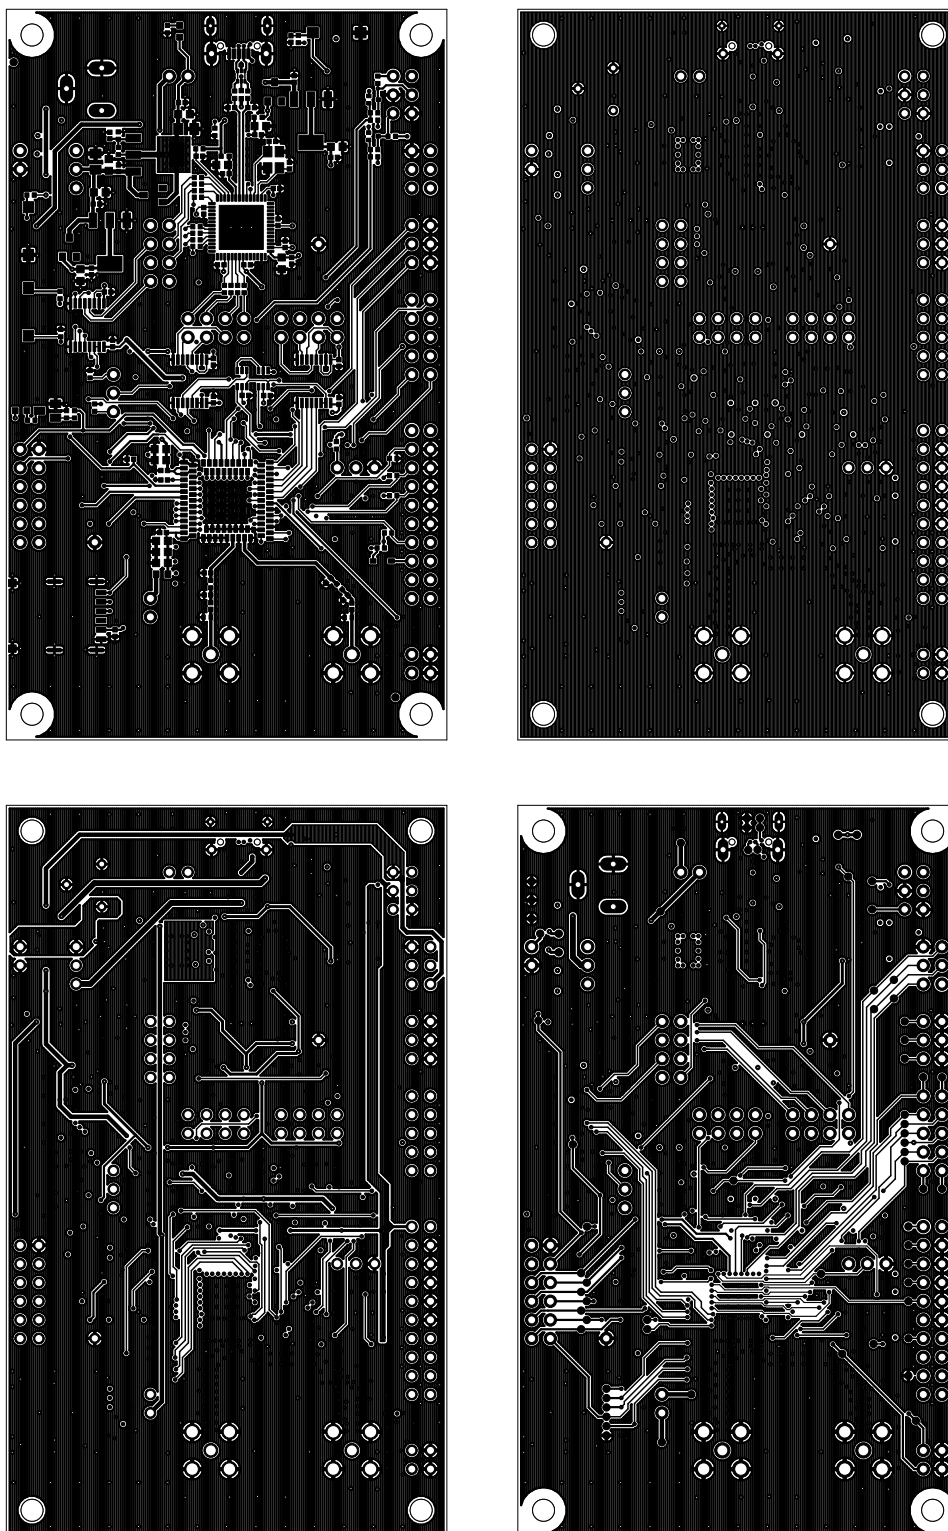


Figure 28: Top layer (upper left), second layer (upper right), third layer (bottom left), fourth layer (bottom right)

9 Manufacturing information

9.1 Moisture sensitivity level

This wireless connectivity product is categorized as JEDEC Moisture Sensitivity Level 3 (MSL3), which requires special handling.

More information regarding the MSL requirements can be found in the IPC/JEDEC J-STD-020 standard on www.jedec.org.

More information about the handling, picking, shipping and the usage of moisture/reflow and/or process sensitive products can be found in the IPC/JEDEC J-STD-033 standard on www.jedec.org.

9.2 Soldering

9.2.1 Reflow soldering

Attention must be paid on the thickness of the solder resist between the host PCB top side and the modules bottom side. Only lead-free assembly is recommended according to JEDEC J-STD020.

Profile feature		Value
Preheat temperature, min	$T_{S \text{ Min}}$	150 °C
Preheat temperature, max	$T_{S \text{ Max}}$	200 °C
Preheat time from $T_{S \text{ Min}}$ to $T_{S \text{ Max}}$	t_S	60 - 120 s
Ramp-up rate (T_L to T_P)		3 °C/s max.
Liquidous temperature	T_L	217 °C
Time t_L maintained above T_L	t_L	60 - 150 s
Peak package body temperature	T_P	245 °C
Time within 5 °C of actual peak temperature	t_P	20 - 30 s
Ramp-down rate (T_P to T_L)		6 °C/s max.
Time 20 °C to T_P		8 min max.

Table 42: Classification reflow soldering profile, Note: refer to IPC/JEDEC J-STD-020E

It is recommended to solder this module on the last reflow cycle of the PCB. For solder paste use a LFM-48W or Indium based SAC 305 alloy (Sn 96.5 / Ag 3.0 / Cu 0.5 / Indium 8.9HF / Type 3 / 89 %) type 3 or higher.

The reflow profile must be adjusted based on the thermal mass of the entire populated PCB, heat transfer efficiency of the reflow oven and the specific type of solder paste used. Based on the specific process and PCB layout the optimal soldering profile must be adjusted and verified. Other soldering methods (e.g. vapor phase) have not been verified and have to be validated by the customer at their own risk. Rework is not recommended.

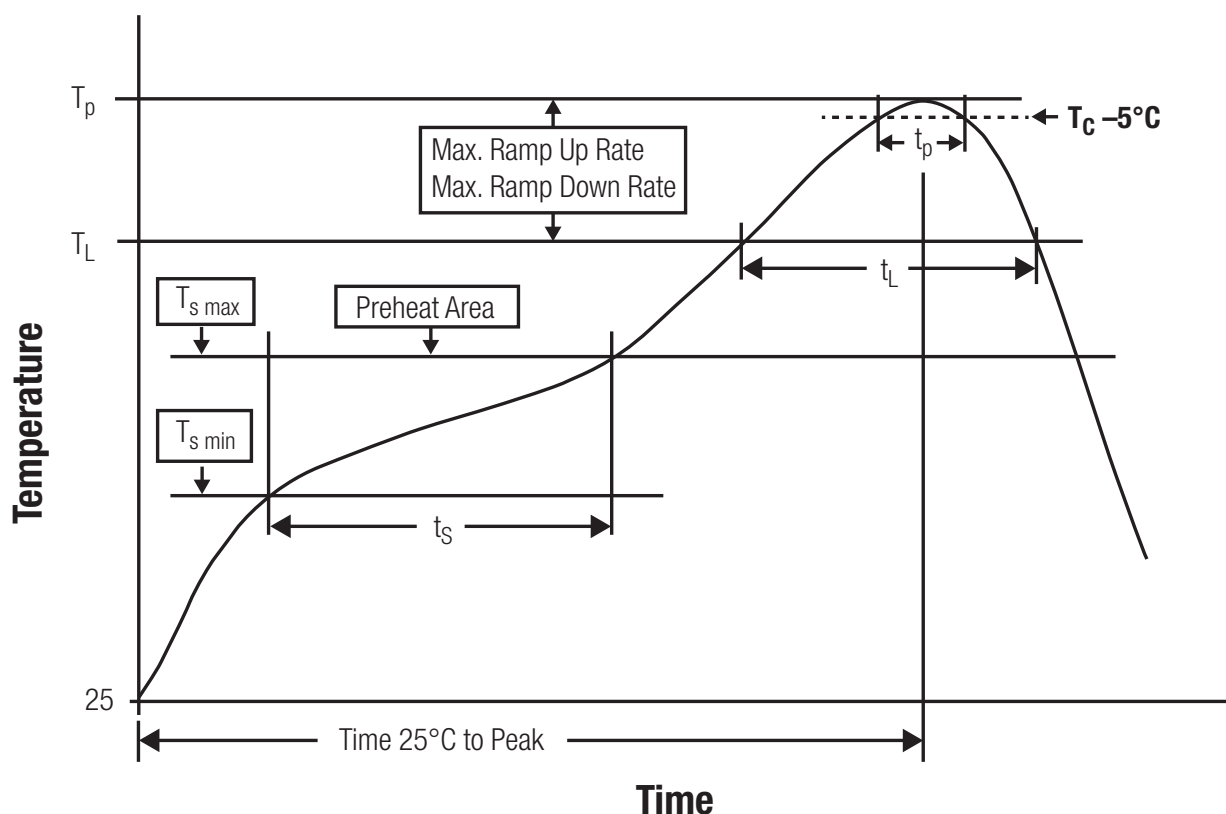


Figure 29: Reflow soldering profile

After reflow soldering, visually inspect the board to confirm proper alignment.

9.2.2 Cleaning

Do not clean the product. Any residue cannot be easily removed by washing. Use a "no clean" soldering paste and do not clean the board after soldering.

- Do not clean the product with water. Capillary effects can draw water into the gap between the host PCB and the module, absorbing water underneath it. If water is trapped inside, it may short-circuit adjoining pads. The water may also destroy the label and ink-jet printed text on it.
- Cleaning processes using alcohol or other organic solvents may draw solder flux residues into the housing, which won't be detected in a post-wash inspection. The solvent may also destroy the label and ink-jet printed text on it.
- Do not use ultrasonic cleaning as it will permanently damage the part, particularly the crystal oscillators.

9.2.3 Potting and coating

- If the product is potted in the customer application, the potting material might shrink or expand during and after hardening. Shrinking could lead to an incomplete seal, allowing contaminants into the component. Expansion could damage components. We recommend a manual inspection after potting to avoid these effects.
- Conformal coating or potting results in loss of warranty.
- The RF shield will not protect the part from low-viscosity coatings and potting. An undefined amount of coating and potting will enter inside the shielding.
- Conformal coating and potting will influence the parts of the radio front end and consequently influence the radio performance.
- Potting will influence the temperature behavior of the device. This might be critical for components with high power.

9.2.4 Other notations

- Do not attempt to improve the grounding by forming metal strips directly to the EMI covers or soldering on ground cables, as it may damage the part and will void the warranty.
- Always solder every pad to the host PCB even if some are unused, to improve the mechanical strength of the module.
- The part is sensitive to ultrasonic waves, as such do not use ultrasonic cleaning, welding or other processing. Any ultrasonic processing will void the warranty.

9.3 ESD handling

This product is highly sensitive to electrostatic discharge (ESD). As such, always use proper ESD precautions when handling. Make sure to handle the part properly throughout all stages of production, including on the host PCB where the module is installed. For ESD ratings, refer to the module series' maximum ESD section. For more information, refer to the relevant chapter 2. Failing to follow the aforementioned recommendations can result in severe damage to the part.

- The first contact point when handling the PCB is always between the local GND and the host PCB GND, unless there is a galvanic coupling between the local GND (for example work table) and the host PCB GND.
- Before assembling an antenna patch, connect the grounds.
- While handling the RF pin, avoid contact with any charged capacitors and be careful when contacting any materials that can develop charges (for example coaxial cable with around 50-80 pF/m, patch antenna with around 10 pF, soldering iron etc.)
- Do not touch any exposed area of the antenna to avoid electrostatic discharge. Do not let the antenna area be touched in a non ESD-safe manner.
- When soldering, use an ESD-safe soldering iron.

9.4 Safety recommendations

It is your duty to ensure that the product is allowed to be used in the destination country and within the required environment. Usage of the product can be dangerous and must be tested and verified by the end user. Be especially careful of:

- Use in areas with risk of explosion (for example oil refineries, gas stations).
- Use in areas such as airports, aircraft, hospitals, etc., where the product may interfere with other electronic components.

It is the customer's responsibility to ensure compliance with all applicable legal, regulatory and safety-related requirements as well as applicable environmental regulations. Disassembling the product is not allowed. Evidence of tampering will void the warranty.

- Compliance with the instructions in the product manual is recommended for correct product set-up.
- The product must be provided with a consolidated voltage source. The wiring must meet all applicable fire and security prevention standards.
- Handle with care. Avoid touching the pins as there could be ESD damage.

Be careful when working with any external components. When in doubt consult the technical documentation and relevant standards. Always use an antenna with the proper characteristics.



Würth Elektronik eiSos radio modules with high output power of up to 500 mW generate a large amount of heat while transmitting. The manufacturer of the end device must take care of potentially necessary actions for his application.

10 Product testing

10.1 Würth Elektronik eiSos in-house production tests

To achieve a high quality standard, Würth Elektronik eiSos follows a philosophy of supplying fully tested radio modules. At the end of the production process, every unit undergoes an optical inspection. Here the quality of soldering, edge castellation and edge milling is monitored.

If this has been passed, the radio modules are handed over to the automatic test equipment for the electrical characterization. This includes:

- Voltage and current tests to ensure proper electrical performance
- RF characteristics (frequency, spectrum, TX power) measurement and calibration
- Radio communication tests
- Firmware and serial number programming
- Host interface communication tests

The automated testing process is logged for internal quality control. The gained measurement data of each unit is analysed to detect defective parts and investigate the corresponding root cause. Defective radio modules are discarded, in order to guarantee a 100% failure-free delivery to customers.

10.2 EMS production tests

The rigorous in-series production testing ensures that EMS don't need to duplicate firmware tests or measurements. This streamlines the process and eliminates the need for additional testing over analogue and digital interfaces during device production. When it comes to device testing, the ideal focus should be on module assembly quality:

- All module pins are soldered properly on the base PCB
- There are no short circuits
- The mounting process did not damage the module
- The communication between host and radio module is working
- The antenna is connected properly

Simple "Go/No go" tests, like checking the RSSI value, give already a hint if the power supply and antenna have been connected properly.

In addition to such standard testing procedures, radio module integrators have the flexibility to perform additional dedicated tests to thoroughly evaluate the device. Specific tests they can consider are:

- Measure module current consumption in a specified operating state. Deviations from expected results (compared to a "Golden Device") can signal potential issues.

- Perform functional tests, including communication checks with the host controller and verification of interfaces.
- Assess fundamental RF characteristics (modulation accuracy, power levels, spectrum). Verify that the device meets expected performance standards.

11 Physical specifications

11.1 Dimensions

Dimensions
13.4 * 14.6 * 1.85 mm

Table 43: Dimensions

Tolerances: see chapter 11.3

11.2 Weight

Weight	Tolerance
0.80 g	± 0.15 g

Table 44: Weight

11.3 Module drawing

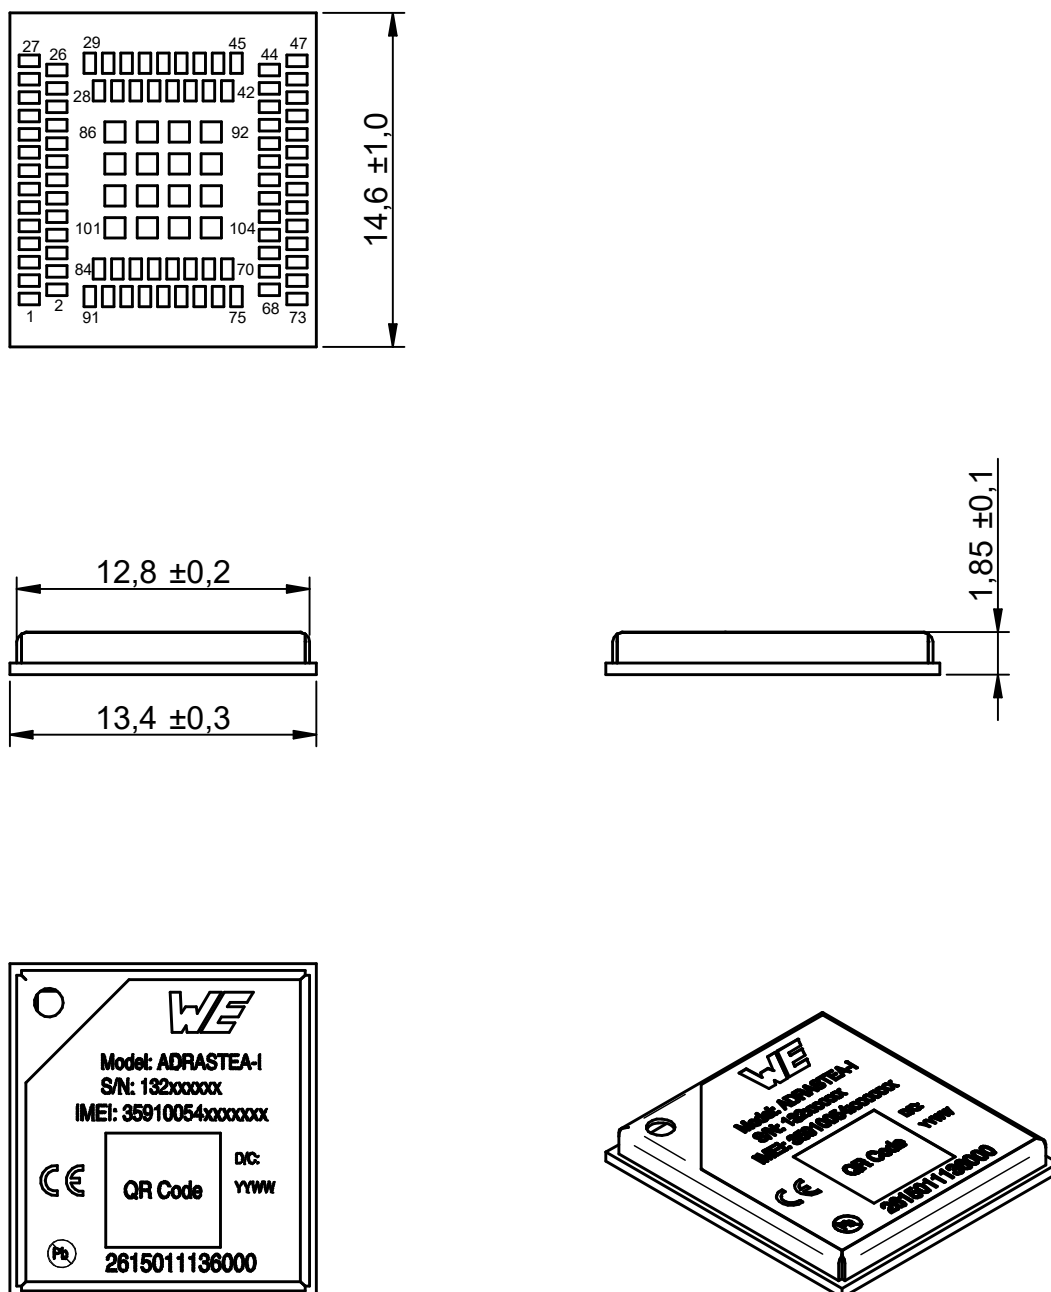


Figure 30: Module dimensions [mm]

11.4 Footprint

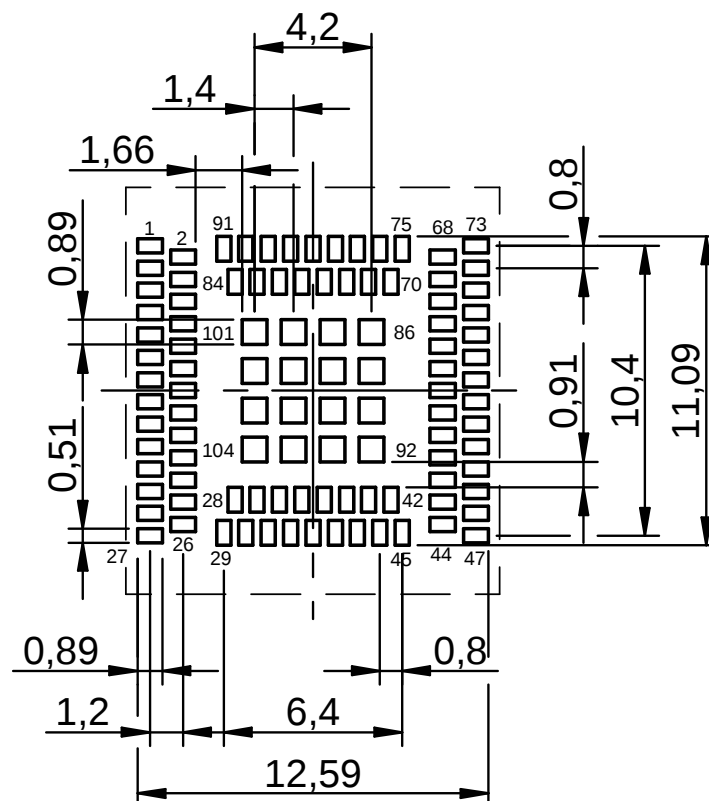


Figure 31: Footprint and dimensions [mm]

12 Marking

12.1 Lot number

The lot number is printed in numerical digits as well as in form of a machine readable bar code. It is divided into blocks as shown in the following picture and can be translated according to the following table.

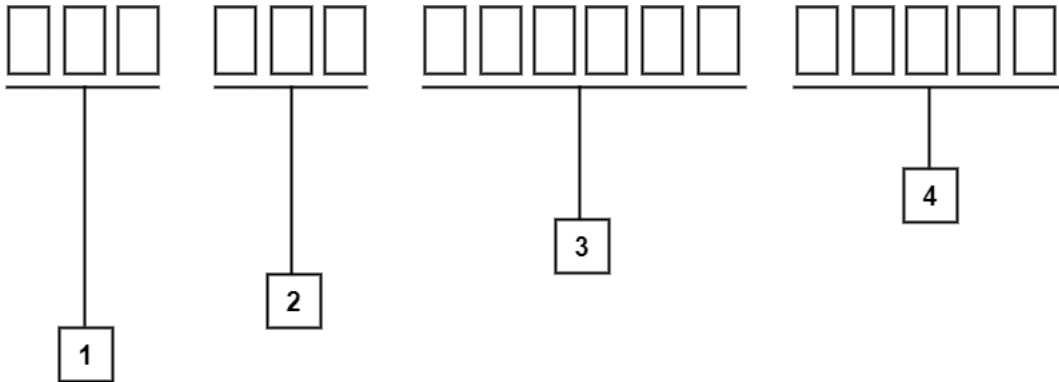


Figure 32: Lot number structure

Block	Information	Example(s)
1	eiSos internal, 3 digits	627
2	eiSos internal, 3 digits	DGW
3	Date code in YYMMDD, 6 digits	211222 where YY:21, MM:12, DD:22
4	eiSos internal (Optional), 5 digits	-

Table 45: Lot number details



Adrastea-I has different firmware versions for the MCU FW and the Modem FW. To obtain the complete firmware version, use the AT%VER AT command.

12.2 General labeling information

Labels of Würth Elektronik eiSos radio modules include several fields. Besides the manufacturer identification, the product's *WE* order code, serial number and certification information are placed on the label. In case of small labels, additional certification marks are placed on the label of the reel.

The information on the label are fixed. Only the serial number changes with each entity of the radio module. For Adrastea-I the label is as follows:

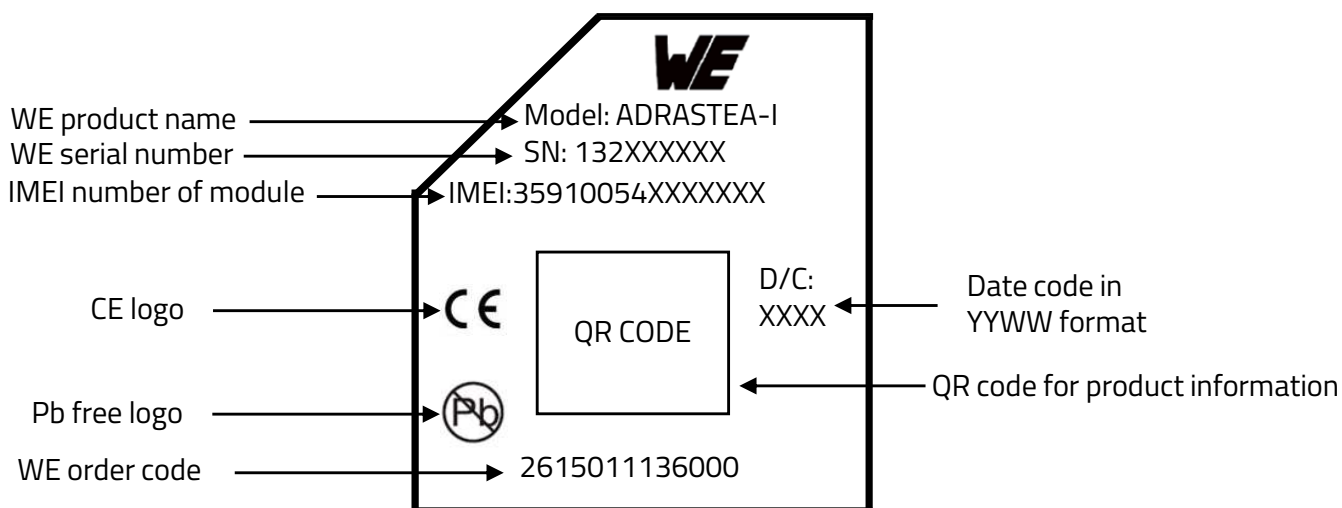


Figure 33: Label of the Adrastea-I

13 Information for explosion protection

In case the end product should be used in explosion protection areas the following information can be used:

- The module itself has no internal fuse.
- The maximum output power of the module is 25.7 dBm.
- The total amount of capacitance of all capacitors is 49.23 μ F.
- The total amount of inductance of all inductors is 2.22 μ H.

14 Regulatory compliance information

14.1 Important notice EU

The use of RF frequencies is limited by national regulations. The Adrastea-I has been designed to comply with the RED directive 2014/53/EU of the European Union (EU).

The Adrastea-I can be operated without notification and free of charge in the area of the European Union. However, according to the RED directive, restrictions (e.g. in terms of duty cycle or maximum allowed RF power) may apply.

Modifications (2014/53/EU article 3 (i))

Caution: Changes or modifications for this equipment not expressly approved by Würth Elektronik eiSos may void the CE conformity to operate this equipment.



Since the module is a built-in equipment its power class according to EN 62368-1 must be specified in the end product.

14.2 Important notice UKCA

The UK's government has laid legislation to continue recognition of current EU requirements for a range of product regulations, including the CE marking. The Radio Equipment Regulation 2017/1206 is within the scope of this announcement, among others.

Consequently, the Adrastea-I can be sold and utilized in the UK with the CE marking, without the need of UKCA declaration of conformity or UKCA marking.

Source: <https://www.gov.uk/guidance/ce-marking>

14.3 Important notice FCC

The use of RF frequencies is limited by national regulations. The Adrastea-I has been designed to comply with the FCC Part 15.

The Adrastea-I can be operated without notification and free of charge in the area of the United States of America. However, according to the FCC Part 15, restrictions (e.g. in terms of maximum allowed RF power and antenna) may apply.

14.4 Conformity assessment of the final product

The Adrastea-I is a subassembly. It is designed to be embedded into other products (products incorporating the Adrastea-I are henceforward referred to as "final products").

It is the responsibility of the manufacturer of the final product to ensure that the final product is in compliance with the essential requirements of the underlying national radio regulations.

The conformity assessment of the subassembly Adrastea-I carried out by Würth Elektronik eiSos does not replace the required conformity assessment of the final product.

14.5 Exemption clause

Relevant regulation requirements are subject to change. Würth Elektronik eiSos does not guarantee the accuracy of the before mentioned information. Directives, technical standards, procedural descriptions and the like may be interpreted differently by the national authorities. Equally, the national laws and restrictions may vary with the country. In case of doubt or uncertainty, we recommend that you consult with the authorities or official certification organizations of the relevant countries. Würth Elektronik eiSos is exempt from any responsibilities or liabilities related to regulatory compliance.

Notwithstanding the above, Würth Elektronik eiSos makes no representations and warranties of any kind related to their accuracy, correctness, completeness and/or usability for customer applications. No responsibility is assumed for inaccuracies or incompleteness.

14.6 EU Declaration of conformity



EU DECLARATION OF CONFORMITY

Radio equipment: **Adrastea-I**

The manufacturer: Würth Elektronik eiSos GmbH & Co. KG
Max-Eyth-Straße 1
74638 Waldenburg

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Object of the declaration: Adrastea-I

The object of the declaration described above is in conformity with the relevant Union harmonisation legislation Directive 2014/53/EU. Following harmonised norms or technical specifications have been applied:

EN 301 908-1 V15.2.1 (2023-01)
EN 301 908-13 V13.2.1 (2022-02)
EN 303 413 V1.2.1 (2021-04)
EN 301 489-1 V2.2.3 (2019-11)
EN 301 489-19 V2.1.1 (2019-04)
EN 301 489-52 V1.2.1 (2021-11)
EN 62311: 2008
EN 62368-1: 2014/AC: 2015/A11: 2017
2011/65/EU with its amending Annex II EU 2015/863

i.A. G. Eschardt

Trier, 2nd of February 2025
Place and date of issue

14.7 RED-DA Cybersecurity statement

This chapter addresses cybersecurity requirements as per Articles 3.3d, 3.3e, and 3.3f of the Radio Equipment Directive Delegated Act (RED-DA). Compliance with RED-DA can be achieved by adhering to the following standards, if applicable:

- EN 18031-1: Common security requirements for radio equipment - Part 1: Internet connected radio equipment
- EN 18031-2: Common security requirements for radio equipment - Part 2: Radio equipment processing data, namely internet connected radio equipment, childcare radio equipment, toys radio equipment and wearable radio equipment
- EN 18031-3: Common security requirements for radio equipment - Part 3: Internet connected radio equipment processing virtual money or monetary value

The Adrastea-I module, in its delivered form, is a sub-component that cannot connect to or interact with the internet independently. It lacks a SIM card and a host microcontroller or application firmware, both of which are required to initiate a cellular connection which in turn provides the option to trigger a connection with the cellular network and with the internet.

This leads to the following RED-DA statement for the component Adrastea-I:

Requirements of RED-DA 3.3	Statement and conditions
(d) Radio equipment does not harm the network or its functioning nor misuses network resources, thereby causing an unacceptable degradation of service	"Not applicable": The Adrastea-I does not pose a risk towards the requirement of RED-DA 3.3d, since it cannot connect or interact with the internet in the extent of delivery.
(e) Radio equipment incorporates safeguards to ensure that the personal data and privacy of the user and of the subscriber are protected	"Not applicable": The product does not pose a risk to the user's or subscriber's privacy, as it does not store or process any personal data. It also cannot connect or interact with the internet in the extent of delivery.
(f) Radio equipment supports certain features ensuring protection from fraud	"Not applicable": The product does not pose a risk of fraud because it does not store or process financial data or enables financial transactions. It also cannot connect or interact with the internet in the extent of delivery.

14.8 RED-DA Cybersecurity first actions

Designers and manufacturers of products using radio communication may consider the following decision graphs to assess whether RED-DA applies to their product or not. The RED-DA, if applicable, requires specific conditions to be fulfilled to allow a Self-Assessment.



The RED-DA harmonized norm series (EN 18031) are not free of charge and need to be purchased.



These decision graphs are not a substitute for buying, reading, understanding and applying the norms and the RED-DA requirements and conditions.

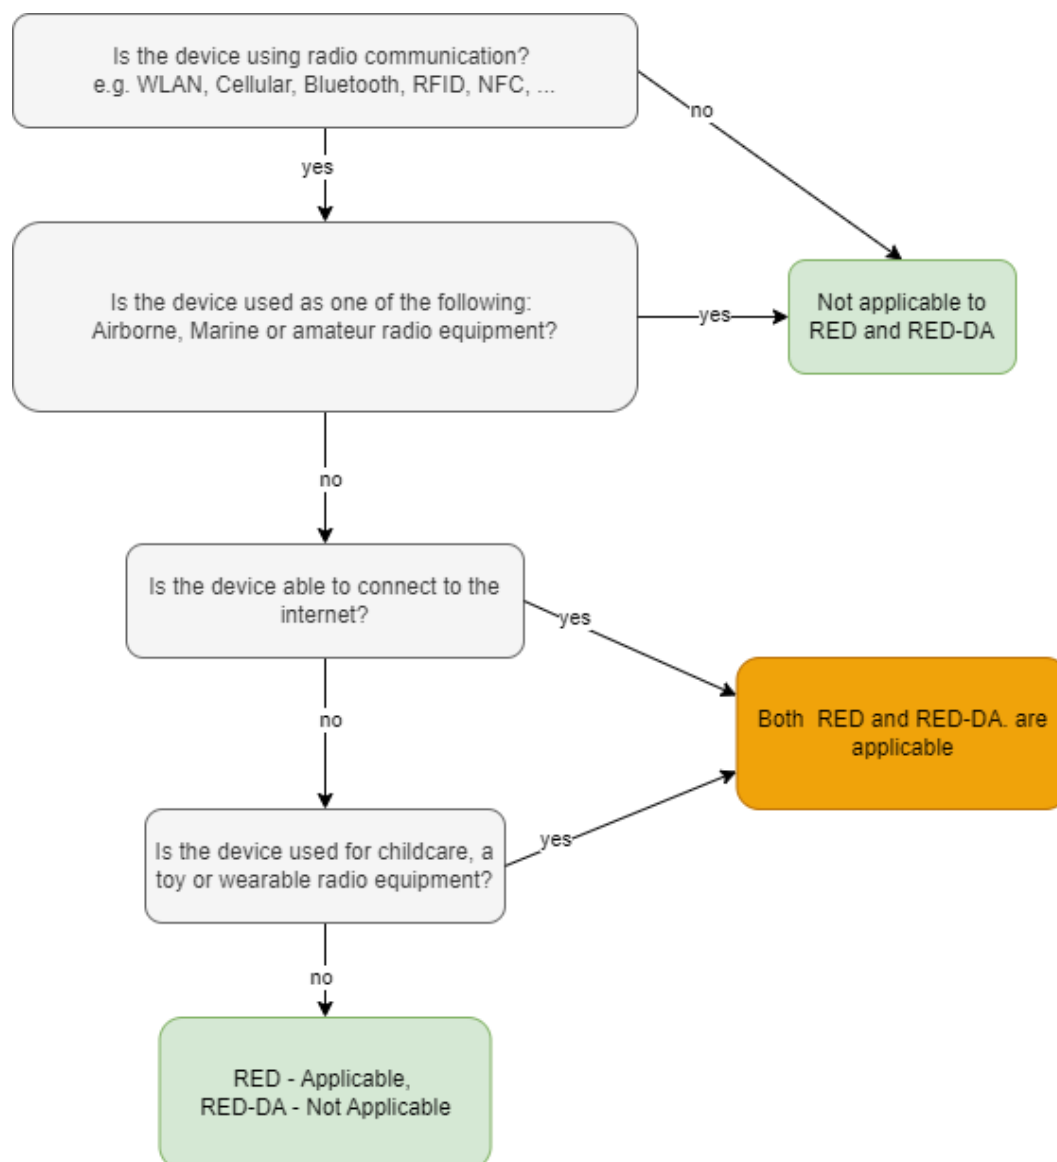


Figure 34: RED and/or RED-DA?

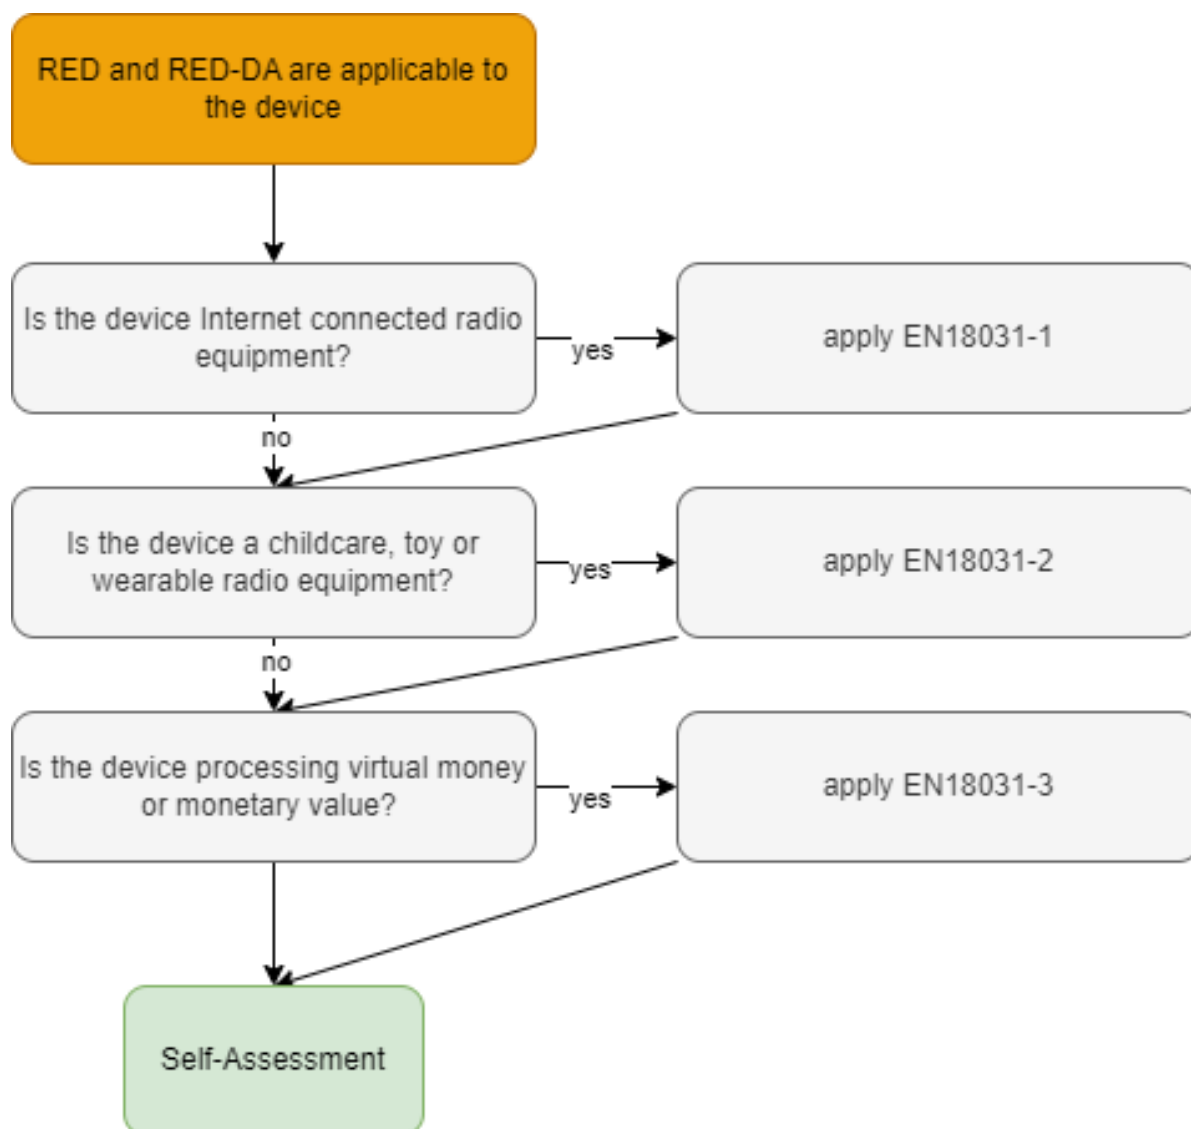


Figure 35: Which parts of RED-DA?

14.9 RED-DA Cybersecurity guideline for end devices using Adrastea-I

If the Adrastea-I is integrated into an end device, the application may include the necessary components to connect to a cellular network and the internet. This may make the RED-DA 3.3d, e, f and EN 18031-1, -2, -3 "applicable".

It is essential to go through the following steps to ensure conformity to the RED-DA

1. Risk assessment
2. Testing
3. Declaration of Conformity (DoC)

The first step in the process of risk assessment is the identification of the assets present in the end device. The table below summarizes the type of assets and their applicability to the corresponding standards.

Requirement	3.3d	3.3e	3.3f
Security asset	X	X	X
Network asset	X		
Privacy asset		X	
Financial asset			X

Table 47: Cybersecurity Assets

Once the assets are listed, a risk assessment needs to be performed by going through the decision trees specified in the corresponding EN 18031 standard for every asset in the list and documenting the justifications for each decision made. This is the technical documentation based on which conceptual as well as functional assessment needs to be performed before declaring conformity.

Based on the configuration, the Adrastea-I module adds the following assets to the list of the end product.

Network assets

- Cellular interface (APN)
- TCP Client
- UDP Client
- TLS Client
- dTLS Client
- MQTT over TLS Client
- HTTPS Client for FOTA (firmware update)
- HTTPS Client for user application
- CoAP Client
- DNS Client
- DHCP Client
- ARP
- ICMP (Ping)

Security assets

- IMEI
- Credentials to use the SIM card
- Credentials for TLS (Certificate, private key)
- Credentials for HTTP (User name, password, certificate, private key)
- Credentials for MQTT (User name, password, certificate, private key)
- Credentials for CoAP (User name, password, certificate, private key)

For applicable radio modules Würth Elektronik eiSos provides pre-filled risk assessment templates that can be extended to create technical documentation for the end application. Contact WCS@we-online.com or your local sales representative for more information on how to get access to this documentation.

14.10 FCC Compliance Statement (US)

FCC ID: R7T1501113

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

(FCC 15.19)

Modifications (FCC 15.21)

Caution: Changes or modifications for this equipment not expressly approved by Würth Elektronik eiSos may void the FCC authorization to operate this equipment.

TCB

GRANT OF EQUIPMENT
AUTHORIZATION

TCB

Certification

Issued Under the Authority of the
Federal Communications Commission

By:

SGS North America, Inc.
620 Old Peachtree Road NW Suite 100
Suwanee, GA 30024

Date of Grant: 06/02/2026

Application Dated: 06/02/2026

Wuerth Elektronik eiSos GmbH & Co KG**Max-Eyth-Strasse 1****Waldenburg, 74638****Germany****Attention: Gudrun Eckhardt , Teamleader Hardware
Development****NOT TRANSFERABLE**EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is
VALID ONLY for the equipment identified hereon for use under the Commission's
Rules and Regulations listed below.

FCC IDENTIFIER: R7T1501113

Name of Grantee: Wuerth Elektronik eiSos GmbH & Co KG

Equipment Class: PCS Licensed Transmitter

Notes: LTE-M / NB-IoT Cellular Module

Modular Type: Single Modular

<u>Grant Notes</u>	<u>FCC Rule Parts</u>	<u>Frequency Range (MHZ)</u>	<u>Output Watts</u>	<u>Frequency Tolerance</u>	<u>Emission Designator</u>
	24E	1850.7 - 1908.1	1.0186	2.5 PM	1M08G7D
	24E	1850.7 - 1908.1	0.8974	2.5 PM	91K0W7D
	24E	1850.7 - 1908.1	0.877	2.5 PM	91K9W7D
	27	1710.7 - 1753.1	0.9484	2.5 PM	1M08G7D
	27	1710.7 - 1753.1	0.8892	2.5 PM	1M09G7D
	27	1710.7 - 1753.1	0.9863	2.5 PM	91K2W7D
	27	1710.7 - 1753.1	0.9817	2.5 PM	94K4W7D
	22	824.2 - 848.8	0.3467	2.5 PM	184KG7D
	22	824.2 - 848.8	0.3404	2.5 PM	184KW7D
	27	699.7 - 714.78	0.2979	2.5 PM	1M07G7D
	27	699.7 - 714.78	0.2884	2.5 PM	91K1W7D
	27	699.7 - 714.78	0.2944	2.5 PM	1M08G7D

Power Output listed is ERP or EIRP. Single Modular Approval. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons. Co-location of this module with other transmitters that operate simultaneously are required to be evaluated using the FCC multi-transmitter procedures. End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance. OEM integrators must insure that the end user has no manual instructions to remove or install this module. For mobile and fixed operating configurations the antenna gain, including cable loss, must not exceed the value in this filing for satisfying RF exposure compliance according to as defined in 2.1091. The host integrator must follow the integration instructions provided by the module manufacturer and ensure that the composite-system end product complies with the FCC requirements by a technical assessment or evaluation

to the FCC rules and to KDB Publication 996369. The module grantee is responsible for providing the documentation to the system integrator on restrictions of use, for continuing compliance of the module. The host integrator installing this module into their product must ensure that the final composite product complies with the FCC requirements by a technical assessment or evaluation to the FCC rules, including the transmitter operation and should refer to guidance in KDB 996369.

This device supports LTE of 1.4, 3, 5, 10, 15, and 20 MHz bandwidth modes for FDD LTE CatM1 Bands 2, 4; LTE of 1.4, 3, 5, and 10 MHz bandwidth modes for FDD LTE CatM1 Bands 12; NB-IoT of 3.75kHz and 15kHz bandwidth modes for NB-IoT band 5.

14.11 IC Compliance Statement (Canada)

Certification Number: 5136A-1501113

HVIN: 1501113

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

TECHNICAL ACCEPTANCE CERTIFICATE

SGS

Certificate Number

US0186.2026.000266

Project Number

SZ-CERT260501626

ISED ID

5136A-1501113

HVIN (Model Number)

1501113

PMN

LTE-M / NB-IoT Cellular Module

FVIN

ADRASTEIA-I_06.006

Type of Equipment

Other

Certificate Holder

Würth Elektronik eiSos GmbH & Co

Address

Max-Eyth-Str. 1

Waldenburg 74638

Germany

This certificate is considered valid based on the following conditions:

- The certified products must continue to comply with the latest issue of all applicable ISED standards.
- This certificate does not constitute a radio licence, where required by the applicable ISED standard(s), a radio license must be obtained from an ISED regional office prior to product operation.
- The certified products shall not be manufactured, imported, distributed, leased, offered for sale, or sold unless the product certification information is listed on ISED's Radio Equipment List (REL).
- For ISED and/or CB audit purposes, sample of certified product shall be made available to ISED and/or CB.

I hereby attest that the subject equipment was tested and found to be in compliance with the noted specification.

Ce certificat est considéré valide sur la base des conditions suivantes:

- Les produits certifiés doivent continuer à être conformes à la dernière version de toutes les normes d'ISDE applicables.
- Ce certificat ne constitue pas une licence radio. Si une licence radio est requise selon la ou les normes d'ISDE applicables, la licence radio doit être obtenue auprès du bureau régional d'ISDE avant l'exploitation du produit.
- Les produits certifiés ne doivent pas être fabriqués, importés, distribués, loués, mis en vente ou vendus à moins que les informations relatives à la certification du produit figurent dans la Nomenclature du matériel radio (NMR) d'ISDE.
- À des fins d'audit de la part d'ISDE et/ou de l'OC, des échantillons de produits certifiés doivent être mis à la disposition d'ISDE et/ou de l'OC.

J'atteste, par la présente, que le matériel a fait l'objet d'essai et a été jugé conforme à la spécification indiquée.

Certification Reviewer

Certification Decision Maker



Peter Geng
Reviewer
2026-05-26

Vincent Zhu
Decision Maker

This Certificate is valid only with a concurrent listing with the Radio Equipment Listing (REL).

US0186



14.12 ISED Radiation Exposure statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

Please notice that if the IC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains IC: 5136A-1501113" any similar wording that expresses the same meaning may be used.

L'étiquette d'homologation d'un module d'Innovation, Sciences et Développement économique Canada devra être posée sur le produit hôte à un endroit bien en vue, en tout temps. En l'absence d'étiquette, le produit hôte doit porter une étiquette sur laquelle figure le numéro d'homologation du module d'Innovation, Sciences et Développement économique Canada, précédé du mot " contient ", ou d'une formulation similaire allant dans le même sens et qui va comme suit :

Contains IC: 5136A-1501113 est le numéro d'homologation du module This radio transmitter [IC: 5136A-1501113] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device. a list of all antenna types

Dipole Antenna	CatM1 Band 2: 6.0dBi CatM1 Band 4: 6.0dBi CatM1 Band 12: 3.3dBi NB-IoT Band 5: 3.3dBi 50 Ω

Table 48: List of antennas

14.13 FCC and IC requirements to OEM integrators

This module has been granted modular approval. OEM integrators for host products may use the module in their final products without additional FCC/IC (Industry Canada) certification if they meet the following conditions. Otherwise, additional FCC/IC approvals must be obtained. The host product with the module installed must be evaluated for simultaneous transmission requirements.

- The user's manual for the host product must clearly indicate the operating requirements and conditions that must be observed to ensure compliance with current FCC/IC RF exposure guidelines.
- Summarize the specific operational use conditions: This module can be used in IOT devices, the input voltage to the module is nominally 2.3-4.3V.
- A label must be affixed to the outside of the host product with the following statements:
This device contains FCCID: R7T1501113
This equipment contains equipment certified under ICID: 5136A-1501113
- §15.19 Labelling requirements shall be complied on end user device. Labelling rules for special device, please refer to §2.925, §15.19 (a)(5) and relevant KDB publications. For E-label, please refer to §2.935.
- FCC other Parts, Part 15B Compliance Requirements for Host product manufacturer: This modular transmitter is only FCC authorized for the specific rule parts listed on our grant, host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. Host manufacturer in any case shall ensure host product which is installed and operating with the module is in compliant with Part 15B requirements. Please note that For a Class B or Class A digital
- This module is only FCC authorized for the specific rule parts listed on our grant, host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification.
List of applicable FCC rules: 47 CFR Part 2, 47 CFR Part 22 subpart H, 47 CFR Part 24 subpart E, 47 CFR Part 27 subpart L, 47 CFR Part 2.1091; RSS-Gen Issue 5 April 2018 Amendment 2, RSS-130 Issue 2, February 2019, RSS-132 Issue 4, January 2023, RSS-133 Issue 7, July 24, 2024, RSS-139 Issue 4, September 2022, RSS-102 Issue 6 December, 2023
- Limited module procedures: This module is not a limited module.
- Trace antenna designs: The antenna is not a trace antenna.
- RF exposure considerations: This Module complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- If the final host / module combination is intended for use as a portable device (see classifications below) the host manufacturer is responsible for separate approvals for the SAR requirements from FCC Part 2.1093 and RSS-102.

- This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

OEM requirements:

The OEM must ensure that the following conditions are met.

- End users of products, which contain the module, must not have the ability to alter the firmware that governs the operation of the module. The agency grant is valid only when the module is incorporated into a final product by OEM integrators.
- The end-user must not be provided with instructions to remove, adjust or install the module.
- The Original Equipment Manufacturer (OEM) must ensure that FCC labeling requirements are met. This includes a clearly visible label on the outside of the final product. Attaching a label to a removable portion of the final product, such as a battery cover, is not permitted.
- The label must include the following text:
Contains FCC ID: R7T1501113
The enclosed device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(i.) this device may not cause harmful interference and
(ii.) this device must accept any interference received, including interference that may cause undesired operation.

When the device is so small or for such use that it is not practicable to place the statement above on it, the information required by this paragraph shall be placed in a prominent location in the instruction manual or pamphlet supplied to the user or, alternatively, shall be placed on the container in which the device is marketed. However, the FCC identifier or the unique identifier, as appropriate, must be displayed on the device.

- The user manual for the end product must also contain the text given above.
 - Changes or modifications not expressly approved could void the user's authority to operate the equipment.
 - The OEM must ensure that timing requirements according to 47 CFR 15.231(a-c) are met.
 - The OEM must sign the OEM Modular Approval Agreement.
 - Antennas: If you desire to increase antenna gain and either change antenna type or use same antenna type certified, a Class II permissive change application is required to be filed by us, or you (host manufacturer) can take responsibility through the change in FCC ID (new application) procedure followed by a Class II permissive change application.
 - The module must be used with only the following approved antenna(s).
- The OEM shall perform testing in accordance to 996369 D04 Module Integration Guide V01.

- Information on test modes and additional testing requirements: The OEM integrator is responsible for ensuring that the end-user has no manual instruction to remove or install module. The module is limited to installation in mobile application, a separate approval is required for all other operating configurations, including portable configurations with respect to Â§2.1093 and difference antenna configurations.

14.13.1 Pre-certified antennas

The Adrastea-I is pre-certified with the following antennas.

Product	Certified antenna
Adrastea-I	2600130084 Hati-I

15 Packaging specification



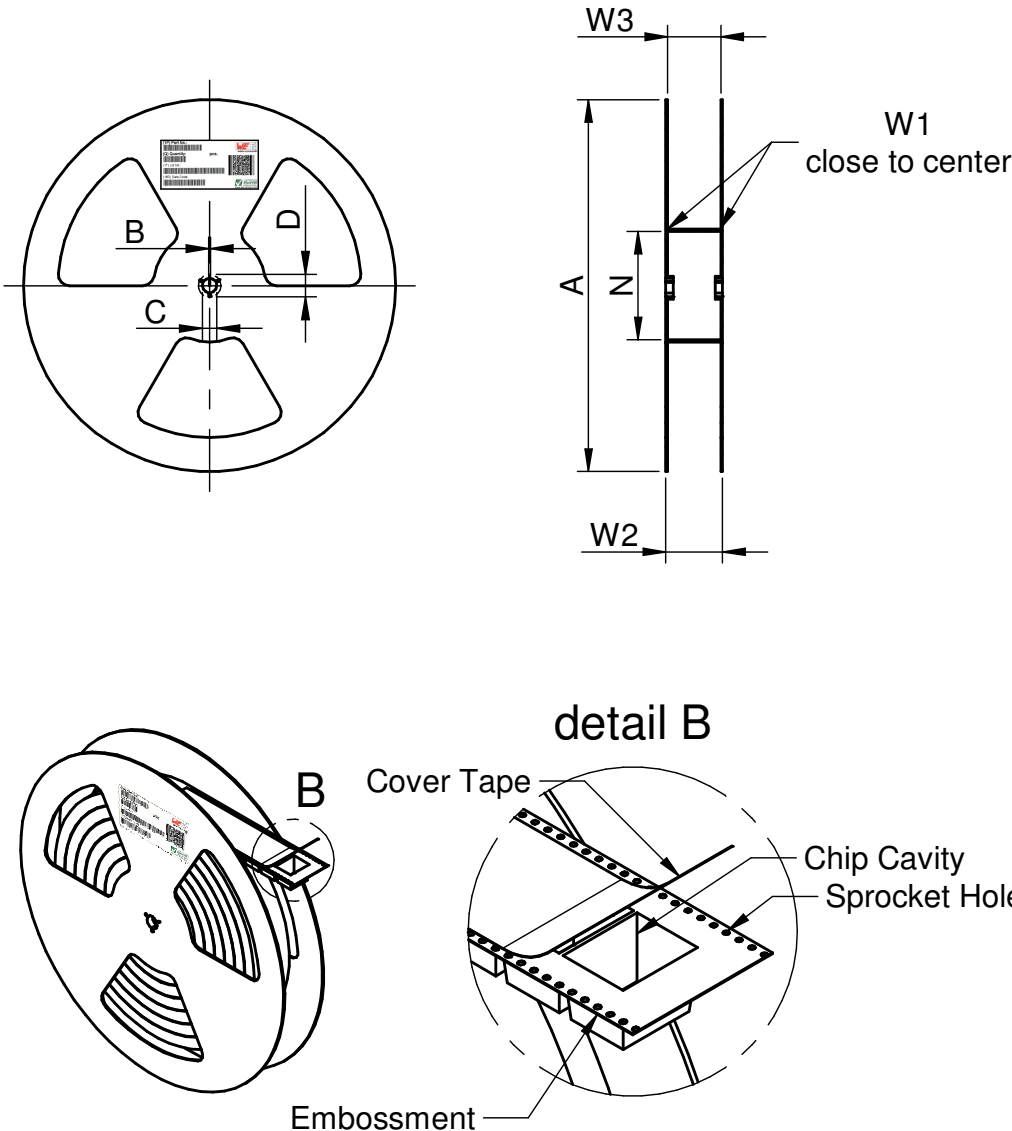


Figure 36: 13 Inch reel

	A [mm]	B [mm]	C [mm]	D [mm]	N [mm]	W1 [mm]	W2 [mm]	W3 [mm]	W3 [mm]	Material
Tolerance	± 2.0	min.	min.	min.	min.	+2.0	max.	min.	max.	
Value	330.00	1.50	12.80	20.20	80.00	44.40	50.40	43.90	47.40	Polystyrene

 Pull-off force [N]
0.1 - 0.3

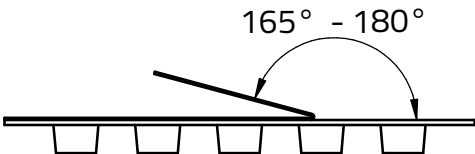



Packaging is referred to the international standard IEC 60286-3:2019:

	Tape type	A0 [mm]	B0 [mm]	W [mm]	T [mm]	T1 [mm]	T2 [mm]	K0 [mm]	P0 [mm]
Tolerance		typ.	typ.	+0.3 / -0.1	ref.	ref.	typ.	typ.	±0.1
Value	2a	13.80	15.00	24.00	0.40	0.10	3.00	2.50	4.00

	P1 [mm]	P2 [mm]	D0 [mm]	D1 [mm]	E1 [mm]	E2 [mm]	F [mm]	Material	Qty. [pcs.]
Tolerance	±0.1	±0.1	+0.1 / -0.0	min.	±0.1	min.	±0.1		
Value	20.00	2.00	1.50	1.50	1.75	22.25	11.50	Polystyren	500

16 References

- [1] Würth Elektronik. Adrastea Commander. <http://www.we-online.com/Adrastea-Commander>.
- [2] Würth Elektronik. User manual Adrastea-I evaluation board. <https://we-online.com/katalog/en/manual/2615029236001>.

17 Important notes

The following conditions apply to all goods within the wireless connectivity and sensors product range of Würth Elektronik eiSos GmbH & Co. KG:

General customer responsibility

Some goods within the product range of Würth Elektronik eiSos GmbH & Co. KG contain statements regarding general suitability for certain application areas. These statements about suitability are based on our knowledge and experience of typical requirements concerning the areas, serve as general guidance and cannot be estimated as binding statements about the suitability for a customer application. The responsibility for the applicability and use in a particular customer design is always solely within the authority of the customer. Due to this fact, it is up to the customer to evaluate, where appropriate to investigate and to decide whether the device with the specific product characteristics described in the product specification is valid and suitable for the respective customer application or not. Accordingly, the customer is cautioned to verify that the documentation is current before placing orders.

Customer responsibility related to specific, in particular safety-relevant applications

It has to be clearly pointed out that the possibility of a malfunction of electronic components or failure before the end of the usual lifetime cannot be completely eliminated in the current state of the art, even if the products are operated within the range of the specifications. The same statement is valid for all software source code and firmware parts contained in or used with or for products in the wireless connectivity and sensor product range of Würth Elektronik eiSos GmbH & Co. KG. In certain customer applications requiring a high level of safety and especially in customer applications in which the malfunction or failure of an electronic component could endanger human life or health, it must be ensured by most advanced technological aid of suitable design of the customer application that no injury or damage is caused to third parties in the event of malfunction or failure of an electronic component.

Best care and attention

Any product-specific data sheets, manuals, application notes, PCNs, warnings and cautions must be strictly observed in the most recent versions and matching to the products revisions. These documents can be downloaded from the product specific sections on the wireless connectivity and sensors homepage.

Customer support for product specifications

Some products within the product range may contain substances, which are subject to restrictions in certain jurisdictions in order to serve specific technical requirements. Necessary information is available on request. In this case, the Business Development Engineer (BDM) or the internal sales person in charge should be contacted who will be happy to support in this matter.

Product improvements

Due to constant product improvement, product specifications may change from time to time. As a standard reporting procedure of the Product Change Notification (PCN) according to the JEDEC-Standard, we inform about major changes. In case of further queries regarding the PCN, the Business Development Engineer (BDM), the internal sales person or the technical support team in charge should be contacted. The basic responsibility of the customer as per section "General customer responsibility" and "Customer responsibility related to specific, in particular safety-relevant applications" remains unaffected.

All software like "wireless connectivity SDK", "Sensor SDK" or other source codes as well as all PC software tools are not subject to the Product Change Notification information process.

Product life cycle

Due to technical progress and economical evaluation, we also reserve the right to discontinue production and delivery of products. As a standard reporting procedure of the Product Termination Notification (PTN) according to the JEDEC-Standard we will inform at an early stage about inevitable product discontinuance. According to this, we cannot ensure that all products within our product range will always be available. Therefore, it needs to be verified with the Business Development Engineer (BDM) or the internal sales person in charge about the current product availability expectancy before or when the product for application design-in disposal is considered. The approach named above does not apply in the case of individual agreements deviating from the foregoing for customer-specific products.

Property rights

All the rights for contractual products produced by Würth Elektronik eiSos GmbH & Co. KG on the basis of ideas, development contracts as well as models or templates that are subject to copyright, patent or commercial protection supplied to the customer will remain with Würth Elektronik eiSos GmbH & Co. KG. Würth Elektronik eiSos GmbH & Co. KG does not warrant or represent that any license, either expressed or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, application, or process in which Würth Elektronik eiSos GmbH & Co. KG components or services are used.

General terms and conditions

Unless otherwise agreed in individual contracts, all orders are subject to the current version of the "General Terms and Conditions of Würth Elektronik eiSos Group", last version available at www.we-online.com.

18 Legal notice

Exclusion of liability

Würth Elektronik eiSos GmbH & Co. KG considers the information in this document to be correct at the time of publication. However, Würth Elektronik eiSos GmbH & Co. KG reserves the right to modify the information such as technical specifications or functions of its products or discontinue the production of these products or the support of one of these products without any written announcement or notification to customers. The customer must make sure that the information used corresponds to the latest published information. Würth Elektronik eiSos GmbH & Co. KG does not assume any liability for the use of its products. Würth Elektronik eiSos GmbH & Co. KG does not grant licenses for its patent rights or for any other of its intellectual property rights or third-party rights.

Notwithstanding anything above, Würth Elektronik eiSos GmbH & Co. KG makes no representations and/or warranties of any kind for the provided information related to their accuracy, correctness, completeness, usage of the products and/or usability for customer applications. Information published by Würth Elektronik eiSos GmbH & Co. KG regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof.

Suitability in customer applications

The customer bears the responsibility for compliance of systems or units, in which Würth Elektronik eiSos GmbH & Co. KG products are integrated, with applicable legal regulations. Customer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of Würth Elektronik eiSos GmbH & Co. KG components in its applications, notwithstanding any applications-related information or support that may be provided by Würth Elektronik eiSos GmbH & Co. KG. Customer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences lessen the likelihood of failures that might cause harm and take appropriate remedial actions. The customer will fully indemnify Würth Elektronik eiSos GmbH & Co. KG and its representatives against any damages arising out of the use of any Würth Elektronik eiSos GmbH & Co. KG components in safety-critical applications.

Trademarks

AMBER wireless is a registered trademark of Würth Elektronik eiSos GmbH & Co. KG. All other trademarks, registered trademarks, and product names are the exclusive property of the respective owners.

Usage restriction

Würth Elektronik eiSos GmbH & Co. KG products have been designed and developed for usage in general electronic equipment only. This product is not authorized for use in equipment where a higher safety standard and reliability standard is especially required or where a failure of the product is reasonably expected to cause severe personal injury or death, unless the parties have executed an agreement specifically governing such use. Moreover, Würth Elektronik eiSos GmbH & Co. KG products are neither designed nor intended for use in areas such as military, aerospace, aviation, nuclear control, submarine, transportation (automotive control, train control, ship control), transportation signal, disaster prevention, medical, public information network etc. Würth Elektronik eiSos GmbH & Co. KG must be informed about the intent of such usage before the design-in stage. In addition, sufficient reliability evaluation checks for safety must be performed on every electronic component, which is used in electrical circuits that require high safety and reliability function or performance. By using Würth Elektronik eiSos GmbH & Co. KG products, the customer agrees to these terms and conditions.

19 License terms

These License terms will take effect upon the purchase and usage of the Würth Elektronik eiSos GmbH & Co. KG wireless connectivity products. You hereby agree that these license terms are applicable to the product and the incorporated software, firmware and source codes (collectively, "Software") made available by Würth Elektronik eiSos in any form, including but not limited to binary, executable or source code form. The software included in any Würth Elektronik eiSos wireless connectivity product is purchased to you on the condition that you accept the terms and conditions of these license terms. You agree to comply with all provisions under these license terms.

Limited license

Würth Elektronik eiSos hereby grants you a limited, non-exclusive, non-transferable and royalty-free license to use the software and under the conditions that will be set forth in these license terms. You are free to use the provided software only in connection with one of the products from Würth Elektronik eiSos to the extent described in these license terms. You are entitled to change or alter the source code for the sole purpose of creating an application embedding the Würth Elektronik eiSos wireless connectivity product. The transfer of the source code to third parties is allowed to the sole extent that the source code is used by such third parties in connection with our product or another hardware provided by Würth Elektronik eiSos under strict adherence of these license terms. Würth Elektronik eiSos will not assume any liability for the usage of the incorporated software and the source code. You are not entitled to transfer the source code in any form to third parties without prior written consent of Würth Elektronik eiSos.

You are not allowed to reproduce, translate, reverse engineer, decompile, disassemble or create derivative works of the incorporated software and the source code in whole or in part. No more extensive rights to use and exploit the products are granted to you.

Usage and obligations

The responsibility for the applicability and use of the Würth Elektronik eiSos wireless connectivity product with the incorporated firmware in a particular customer design is always solely within the authority of the customer. Due to this fact, it is up to you to evaluate and investigate, where appropriate, and to decide whether the device with the specific product characteristics described in the product specification is valid and suitable for your respective application or not.

You are responsible for using the Würth Elektronik eiSos wireless connectivity product with the incorporated firmware in compliance with all applicable product liability and product safety laws. You acknowledge to minimize the risk of loss and harm to individuals and bear the risk for failure leading to personal injury or death due to your usage of the product.

Würth Elektronik eiSos' products with the incorporated firmware are not authorized for use in safety-critical applications, or where a failure of the product is reasonably expected to cause severe personal injury or death. Moreover, Würth Elektronik eiSos' products with the incorporated firmware are neither designed nor intended for use in areas such as military, aerospace, aviation, nuclear control, submarine, transportation (automotive control, train control, ship control), transportation signal, disaster prevention, medical, public information network etc. You shall inform Würth Elektronik eiSos about the intent of such usage before design-in stage. In certain customer applications requiring a very high level of safety and in which the malfunction or failure of an electronic component could endanger human life or health, you must ensure to have all necessary expertise in the safety and regulatory ramifications of your applications. You acknowledge and agree that you are solely responsible for all legal, regulatory and safety-related requirements concerning your products and any use of Würth Elektronik eiSos' products with the incorporated firmware in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by Würth Elektronik eiSos. **YOU SHALL INDEMNIFY WÜRTH ELEKTRONIK EISOS AGAINST ANY DAMAGES ARISING OUT OF THE USE OF WÜRTH ELEKTRONIK EISOS' PRODUCTS WITH THE INCORPORATED FIRMWARE IN SUCH SAFETY-CRITICAL APPLICATIONS.**

User manual Adrastea-I

Ownership

The incorporated firmware created by Würth Elektronik eiSos is and will remain the exclusive property of Würth Elektronik eiSos.

Firmware update(s)

You have the opportunity to request the current and actual firmware for a bought wireless connectivity product within the time of warranty. However, Würth Elektronik eiSos has no obligation to update a module's firmware in their production facilities, but can offer this as a service on request. The upload of firmware updates falls within your responsibility, e.g. via ACC or another software for firmware updates. Firmware updates will not be communicated automatically. It is within your responsibility to check the current version of a firmware in the latest version of the product manual on our website. The revision table in the product manual provides all necessary information about firmware updates. There is no right to be provided with binary files, so called "firmware images", those could be flashed through JTAG, SWD, Spi-Bi-Wire, SPI or similar interfaces.

Disclaimer of warranty

THE FIRMWARE IS PROVIDED "AS IS". YOU ACKNOWLEDGE THAT WÜRTH ELEKTRONIK EISOS MAKES NO REPRESENTATIONS AND WARRANTIES OF ANY KIND RELATED TO, BUT NOT LIMITED TO THE NON-INFRINGEMENT OF THIRD PARTIES' INTELLECTUAL PROPERTY RIGHTS OR THE MERCHANTABILITY OR FITNESS FOR YOUR INTENDED PURPOSE OR USAGE. WÜRTH ELEKTRONIK EISOS DOES NOT WARRANT OR REPRESENT THAT ANY LICENSE, EITHER EXPRESS OR IMPLIED, IS GRANTED UNDER ANY PATENT RIGHT, COPYRIGHT, MASK WORK RIGHT, OR OTHER INTELLECTUAL PROPERTY RIGHT RELATING TO ANY COMBINATION, MACHINE, OR PROCESS IN WHICH THE WÜRTH ELEKTRONIK EISOS' PRODUCT WITH THE INCORPORATED FIRMWARE IS USED. INFORMATION PUBLISHED BY WÜRTH ELEKTRONIK EISOS REGARDING THIRD-PARTY PRODUCTS OR SERVICES DOES NOT CONSTITUTE A LICENSE FROM WÜRTH ELEKTRONIK EISOS TO USE SUCH PRODUCTS OR SERVICES OR A WARRANTY OR ENDORSEMENT THEREOF.

Limitation of liability

Any liability not expressly provided by Würth Elektronik eiSos shall be disclaimed.

You agree to hold us harmless from any third-party claims related to your usage of the Würth Elektronik eiSos' products with the incorporated firmware, software and source code. Würth Elektronik eiSos disclaims any liability for any alteration, development created by you or your customers as well as for any combination with other products.

Applicable law and jurisdiction

Applicable law to these license terms shall be the laws of the Federal Republic of Germany. Any dispute, claim or controversy arising out of or relating to these license terms shall be resolved and finally settled by the court competent for the location of Würth Elektronik eiSos registered office.

Severability clause

If a provision of these license terms is or becomes invalid, unenforceable or null and void, this shall not affect the remaining provisions of the terms. The parties shall replace any such provisions with new valid provisions that most closely approximate the purpose of the terms.

Miscellaneous

Würth Elektronik eiSos reserves the right at any time to change these terms at its own discretion. It is your responsibility to check at Würth Elektronik eiSos homepage for any updates. Your continued usage of the products will be deemed as the acceptance of the change.

We recommend you to be updated about the status of new firmware and software, which is available on our website or in our data sheet and manual, and to implement new software in your device where appropriate.

By ordering a product, you accept these license terms in all terms.

List of Figures

1	Adrastea-I	6
2	Adrastea-I GCF Certification	7
3	Adrastea-I Deutsche Telekom Certification	8
4	Normal Cellular Certification Process	9
5	Benefits of Deutsche Telekom Certified Module	10
6	Block diagram	12
7	Pinout (top view)	24
8	Adrastea-I Power up Sequence	31
9	UART0 Host Interface	39
10	SPIM Connection	41
11	I ² C Connection	43
12	Adrastea-I State Transition	50
13	Minimal pin connections	59
14	Adrastea Commander	61
15	Adrastea Commander	61
16	COM ports detected - Adrastea commander	62
17	MiniConsole start view - Adrastea Commander	63
18	SIM card detected - Adrastea Commander	64
19	Layout	73
20	Dimensioning the antenna feed line as micro strip	74
21	Hati-I antenna	76
22	Circuit diagram 1	78
23	Circuit diagram 2	79
24	Circuit diagram 3	80
25	Circuit diagram 4	81
26	Circuit diagram 5	82
27	Assembly diagram	83
28	Top layer (upper left), second layer (upper right), third layer (bottom left), fourth layer (bottom right)	84
29	Reflow soldering profile	86
30	Module dimensions [mm]	92
31	Footprint and dimensions [mm]	93
32	Lot number structure	94
33	Label of the Adrastea-I	95
34	RED and/or RED-DA?	102
35	Which parts of RED-DA?	103
36	13 Inch reel	115
37	24 mm Tape	116

List of Tables

1	Module Key Features	11
2	Ordering information	12
3	Operating conditions	13
4	Absolute maximum ratings	13

5	LTE-Cat.M Current consumption	14
6	NB-IoT Current consumption	14
7	LTE-Cat.M CE Supported Bands	16
8	LTE-Cat.M FCC and IC Supported Bands	16
9	LTE-Cat.NB-IoT CE Supported Bands	16
10	LTE-Cat.NB-IoT FCC and IC Supported Bands	16
11	LTE-Cat.M RX Sensitivity CE Bands	17
12	LTE-Cat.M RX Sensitivity for FCC and IC Bands	17
13	LTE-Cat.NB-IoT RX Sensitivity CE Bands	17
14	LTE-Cat.NB-IoT RX Sensitivity FCC and IC Bands	18
15	LTE-Cat.M Maximum Output Power CE Bands	19
16	LTE-Cat.M Maximum Output Power FCC and IC Bands	19
17	LTE-Cat.NB-IoT Maximum Output Power CE Bands	19
18	LTE-Cat.NB-IoT Maximum Output Power FCC and IC Bands	20
19	Radio characteristics	21
20	GNSS RX Sensitivity	22
21	GNSS Time to First Fix	22
22	GNSS Position Accuracy	23
23	Pinout	30
24	Power Up timing	31
25	EXT_ALARM Pin	33
26	Digital I/O Pins Specifications	35
27	UART Interfaces	36
28	UART Default Configuration	36
29	UART0 Pin Interface	37
30	UART1 Pin Interface	37
31	UART2 Pin Interface	38
32	SPIM Pin Interface	40
33	I ² C Pin Interface	42
34	ADC Interfaces	44
35	ADC Functional Specifications	44
36	Measured Input Resistance	45
37	ADC Pin Interface	45
38	SIM Pin Interface	45
39	RF Pin Interface	46
40	E-JTAG Debug port	46
41	GPIO Pin Information	48
42	Classification reflow soldering profile, Note: refer to IPC/JEDEC J-STD-020E	85
43	Dimensions	91
44	Weight	91
45	Lot number details	94
47	Cybersecurity Assets	104
48	List of antennas	111

20 Revision history

Manual version	FW version	HW version	Notes	Date
1.0	ADRASTEAI_06.006	1.0	Initial release of the manual	April 2022
1.1	ADRASTEAI_06.006	1.0	- Added section Adrastea-I GCF Certification. - Added section Minimal pin connections. - Updated section Application MCU.	May 2023
1.2	ADRASTEAI_06.006	1.0	Actualized section Regulatory compliance information.	August 2023
1.3	ADRASTEAI_06.006	1.0	- Updated information about GNSS update rate in section GNSS: Time To First Fix. - Updated GPIO Pin Information in section GPIO Pin Information. - Redundant sections 3.11 and 3.12 removed. Content can be found in section GPIO Pin Information and E-JTAG Debug port. - Updated information about bootdelay configurations in section UART Default Configuration. Continued on next page	August 2024

1.3	ADRASTEIA-I_06.006	1.0	• Added new section DH0 Mode Setting. • Added new section DH1 Mode Setting. • Added new section DH2 Mode Setting. • Updated link for Sony MCU access request in section Application MCU. • Updated section Select LTE-M or NB-IoT Mode. • Updated figure with more dimensions in section Footprint. • Added information about LTE antenna in section Antenna solutions. • Updated General labelling information for Adrastea-I in section General labeling information. • Added Information for explosion protection for Adrastea-I in section Information for explosion protection. • Abbreviations section updated.	August 2024
1.4	ADRASTEIA-I_06.006	1.0	• Added chapter Product testing • Added chapter Important notice UKCA • Removed chapter "LOT number"	October 2024

1.5	ADRASTEAI_06.006	1.0	• Removed iotcreator connectivity information • Updated information in section Benefits of Deutsche Telekom Certified Module • Updated information in Chapter Pinout • Updated information in Chapter GPIO Pin Information • Updated information in Chapter Functional description • Added Lot number information Chapter Lot number	April 2025
1.6	ADRASTEAI_06.006	1.0	• Added EN 301 489-52 to Regulatory compliance information. • Added TLS Version information to Module Key Features. • Updated Minimal pin connections picture with SIM card holder to Minimal pin connections. • Updated SIM information in to Minimal pin connections. • Added extra step to check internet connection in to Register to Network. • Added information about ISO 7816 information in to SIM Pin Interface.	July 2025

1.7	ADRASTEAI_06.006	1.0	Added RED-DA (EN 13081) statement and supporting sections to Regulatory compliance information chapter.	August 2025
1.8	ADRASTEAI_06.006	1.0	Updated Application MCU information Application MCU, Introduction, Module Key Features chapters.	January 2026
1.9	ADRASTEAI_06.006	1.0	- Added FCC and IC certification with corresponding OEM requirements in chapter Regulatory compliance information and the corresponding values in chapter LTE Radio Characteristics - Added chapter Packaging specification - Applied new design	August 2026

21 Abbreviations

Abbreviation	Name
3GPP	3rd Generation Partnership Project
ADC	Analog-to-Digital Converter
ASCI	Advanced Speech Call Items
APN	Access Point Name
BCD	Binary Coded Decimal
CLK	Clock signal
DH	Deep Hibernation
eDRX	Extended Discontinuous Reception
EJTAG	Embedded Joint Test Action Group
GLONASS	Global Navigation Satellite System
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GPIO	General Purpose Input Output
I ² C	Inter-Integrated Circuit
IoT	Internet of Things
IMEI	International Mobile station Equipment Identity
IMEISV	International Mobile station Equipment Identity and Software Version number
JTAG	Joint Test Action Group
LTE	Long Term Evolution
MCU	Micro controller Unit
MISO	Master In Slave Out
ME	Mobile Equipment
MOSI	Master Out Slave in
MT	Mobile Termination
MTU	Maximum Transfer Unit
PA	Power Amplifier
PD	Power Down
PMU	Power Management Unit
PSM	Power Save Mode
RAM	Random Access Memory
RAT	Radio Access Technology
RLP	Radio Link Protocol
RTC	Real Time Clock

SINAD	Signal to Noise and Distortion ratio
SIM	Subscriber Identity Module
SPI	Serial Peripheral Interface
SVN	Software Version Number
TA	Terminal Adaptor
TCXO	Temperature Compensated Crystal Oscillator
TE	Terminal Equipment
TTFF	Time To First Fix
UART	Universal Asynchronous Receiver/Transmitter
UE	User Equipment
UICC	Universal Integrated Circuit Card
USIM	Universal Subscriber Identity Module
XO	Crystal Oscillator

**Contact**

Würth Elektronik eiSos GmbH & Co. KG
Division Wireless Connectivity & Sensors

Max-Eyth-Straße 1
74638 Waldenburg
Germany

Tel.: +49 651 99355-0
Fax.: +49 651 99355-69
www.we-online.com/wireless-connectivity

WÜRTH ELEKTRONIK MORE THAN YOU EXPECT