

Rigid


#	Layer	Thickness	Description	Dk	Df	Note
	Top Solder	0.015mm	Soldermask IPC-SM840	3,5	0,028	used on rigid parts
1	Top Side	0.030mm	Starting foil 1/4oz. after plating and processing			
		0.065mm	Prepreg IPC-4101/127/128	3,5	0,011	FR-4.1 filled, halogen free
2	Inner Layer 1	0.017mm	ED Base Copper			
		0.150mm	Core IPC-4101/127/128	4,3	0,011	FR-4.1 filled, halogen free
		0.174mm	Prepreg IPC-4101/127/128	3,7	0,011	FR-4.1 filled, halogen free
3	Inner Layer 2	0.017mm	ED Base Copper			
		0.050mm	Flexible core IPC-4204/11	3,4	0,002	Flex Polyimide adhesiveless
4	Inner Layer 3	0.017mm	ED Base Copper			
		0.174mm	Prepreg IPC-4101/127/128	3,7	0,011	FR-4.1 filled, halogen free
		0.150mm	Core IPC-4101/127/128	4,3	0,011	FR-4.1 filled, halogen free
5	Inner Layer 4	0.017mm	ED Base Copper			
		0.065mm	Prepreg IPC-4101/127/128	3,5	0,011	FR-4.1 filled, halogen free
6	Bottom Side	0.030mm	Starting foil 1/4oz. after plating and processing			
	Bottom Solder	0.015mm	Soldermask IPC-SM840	3,5	0,028	used on rigid parts

Total thickness: 0.986mm

notes:	FLEX6_2Ri-2F-2Ri_0,99_17_V2.12		
Final copper thickness according to IPC-6013	PCB Thickness Tolerance: rigid ± 10% / flex ± 0,05mm		
IPC 2223 use A "Flex to install"	customer	created	
	pcb name	approved	
Please regard to our sectional design rules: ▶ www.we-online.com	engineer	format	A4, landscape
	date		
Template Revision: 02/2021 by Andreas Schilpp / Michael Kress / Werner Öchslen			



Flex

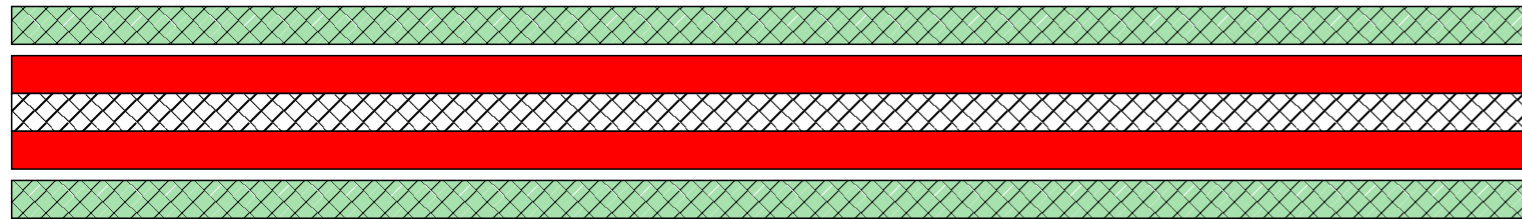

#	Layer	Thickness	Description	Dk	Df	Note
	Flex Top Coverlay	0.040mm	PI Coverlay IPC-4203/2	3,6	0,02	Polyimide + bonding film (Epoxy)
3	Inner Layer 2	0.017mm	ED Base Copper			
		0.050mm	Flexible core IPC-4204/11	3,4	0,002	Flex Polyimide adhesiveless
4	Inner Layer 3	0.017mm	ED Base Copper			
	Flex Bottom Coverlay	0.040mm	PI Coverlay IPC-4203/2	3,6	0,02	Polyimide + bonding film (Epoxy)
Total thickness: 0.164mm						

notes:	FLEX6_2Ri-2F-2Ri_0,99_17_V2.12		
Final copper thickness according to IPC-6013	PCB Thickness Tolerance: rigid $\pm 10\%$ / flex $\pm 0,05\text{mm}$		
IPC 2223 use A "Flex to install"	customer	created	
	pcb name	approved	
Please regard to our sectional design rules: ▶ www.we-online.com	engineer	format	A4, landscape
	date		
Template Revision: 02/2021 by Andreas Schilpp / Michael Kress / Werner Öchslen			

